

1 Technical parameters

Function	Voltage (V~)	Frequency (Hz)	Power (W)	Noise (dB)	Energy efficiency rating
Decorative furnace core	☐ 110V ☐ 220V	50-60Hz	12-36	≤20	three-level
Heat core	☐ 110V ☐ 220V	50-60Hz	750W-1500W	≤25	three-level

2. According to the keypad/remote control instructions

1. Press the keypad instructions
(decorating furnace core/heater core)



ON/OFF ----- Indicates whether the power is turned on
 DIMMER----- Indicating the adjustment of flame color change
 HEAT----- 1.click for first gear
 2.Press twice for second gear
 3.Press three times to turn off the heating
 MODER----- Small power switch

2. Remote control operating instructions



3. Remote control code operation mode:

Method 1: Within the first five seconds after the machine is powered on, the power indicator light flashes rapidly. Press the power button on the remote control, and the machine will make a "beep" sound to successfully match the code.

Method 2: Long press the power button on the panel for three seconds, and the power indicator light on the panel will flash. Release the power button, press the remote control power button, and the machine will emit a "beep" sound to indicate successful code matching.

4. Maintenance methods

- 1 The power supply must be cut off before cleaning the product.
- 2 It is forbidden to wash the fuselage directly with water.
- 3 Do not use any abrasive tools and solvents that can damage the surface to clear this product.
- 4 It is forbidden to dismantle the product for transformation. It is suggested that the product be inspected regularly and cleaned with dry cloth to prolong its service life.

5. Troubleshooting

- 1 After inserting the power supply, the host will emit a "drop" sound, which can be used as a reference for whether the power is on or not
- 2 The flame lights up and then extinguishes. Please check whether the box is wet or not. Restart the power supply after ventilation and drying
- 3 The sudden failure of the heater is due to the long working time of heating and heating. It can be restarted after 20 minutes of power off.

Note. Due to the irregular updates of software and hardware, if there are discrepancies between the instructions and the products, please refer to the physical object.

INSTALLATION PROCEDURE FOR PLACING IN A CRYSTAL FIREPLACE

