

Compression Sofa



Thank you for purchasing the compression sofa. In order for you to fully enjoy the comfort and functionality of your new sofa, please follow these steps to help it regain its original shape after unboxing:

1. Before Unboxing

- Please unbox the sofa in an open and flat area, away from children and pets.
- Check the packaging for damage. If severely damaged, contact customer service first.

2. Tool Safety

· If using scissors or a knife to open the package, operate carefully with the blade facing away from your body and the sofa fabric.

- We recommend wearing gloves to prevent cuts.

3. Opening the Compressed Packaging

· First, lay the sofa flat on the ground with the packaging film facing up.

· Carefully cut the film from the side or back of the sofa, avoid facing the front directly to prevent sudden expansion due to pressure release.

- After cutting, do not approach immediately. Allow the sofa to expand naturally for a few seconds.

4. If you notice abnormal rapid expansion or excessive tightness of the packaging, stop immediately and contact customer service.

5. Pat the Sofa: Gently pat the sofa on each side several times to assist in reshaping it.

Start by patting one side, then repeat on the other.

6. Flip the Sofa: Turn the sofa over and repeat the patting process to ensure even reshaping on all sides.

7. Rotate the Sofa: Rotate the sofa 180 degrees so the back is facing down, and repeat the patting to further restore its shape.

8. Lightly Tap and Press: Lightly tap, knock, and press on the sofa to help it regain its original shape and improve overall comfort.

9. Smooth the Fabric: If wrinkles appear on the sofa fabric, use a garment steamer to smooth them out for a more polished appearance.

10. Secure the Sofa: Attach the Velcro strips to the bottom of the sofa to keep it securely in place and prevent separation.

Notice:

1. It usually takes about 72 hours to one week for rebounding to its original shape after long time compression; When opening, there may be wrinkles and fabric covers get loose, we need to pat the sofa and tidy the fabric up to help sofas return to its shape,

2. If you experience issues such as insufficient rebound, fabric wrinkles, color variance, orientation errors, or need assistance, please contact our customer service.

3. Enjoy your new sofa!