 



ASSEMBLY INSTRUCTION

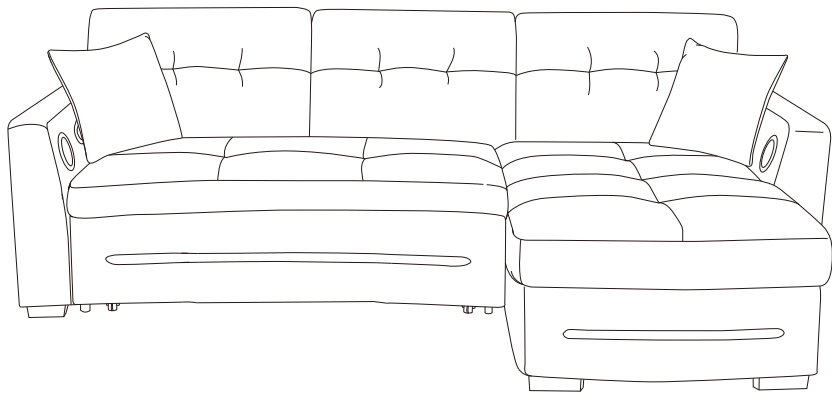


PARTS LIST

							
AX1pc	BX1pc	CX2pcs	DX1pc	EX1pc	FX1pc	GX2pcs	HX3pcs
							
IX6pcs	JX6pcs	KX12pcs	LX16pcs	MX1pc	NX4pcs	OX6pcs	

 
STEP 1

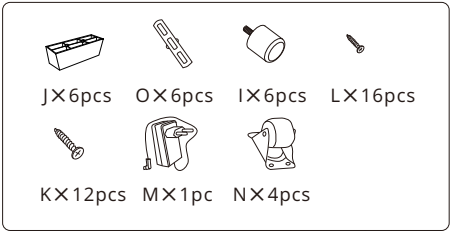

 
STEP 2

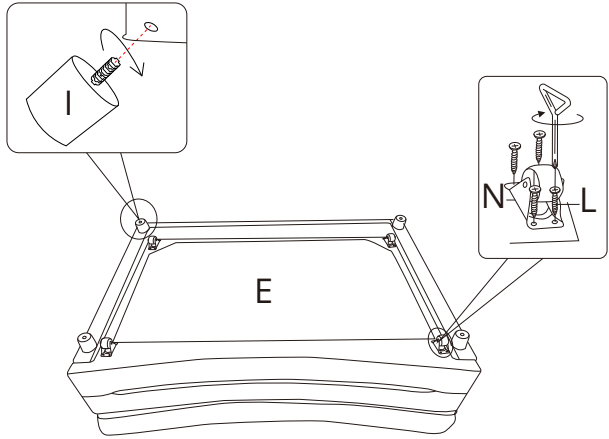

 
STEP 3

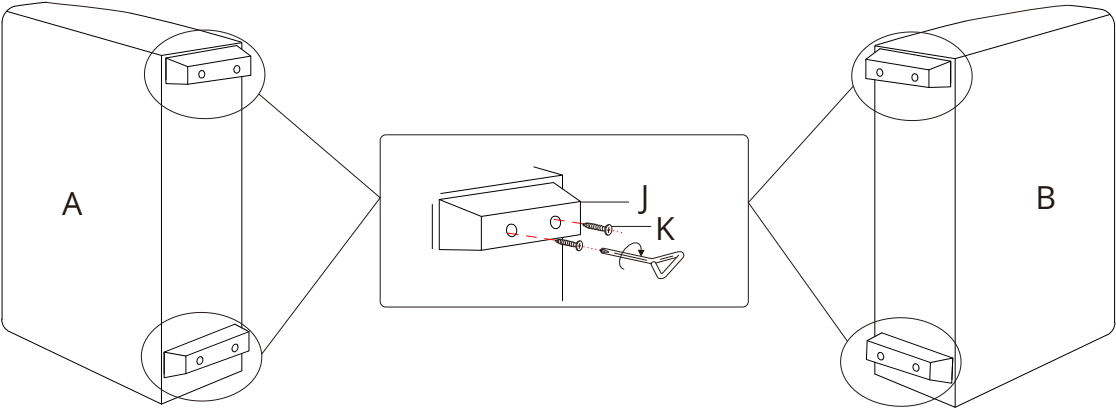

 
STEP 4

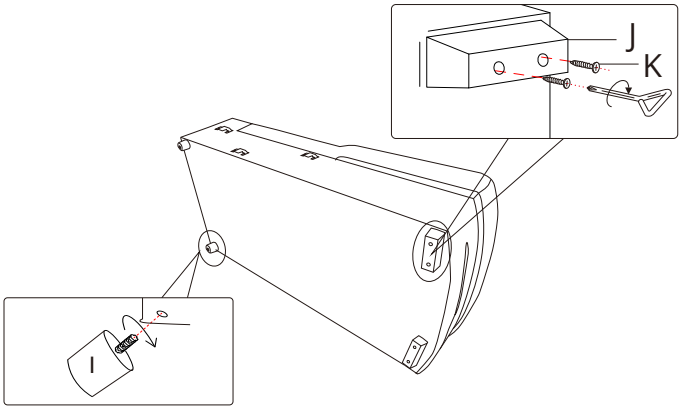

 
STEP 5

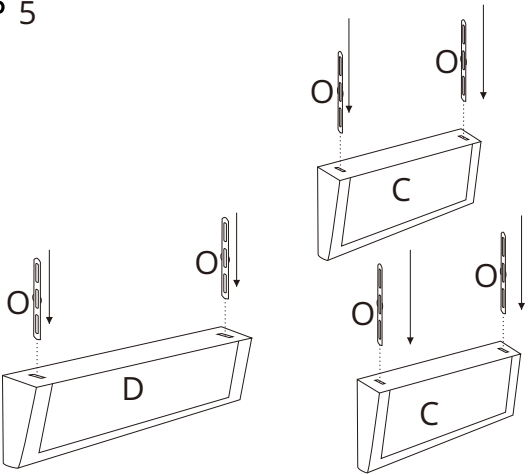

 
STEP 6

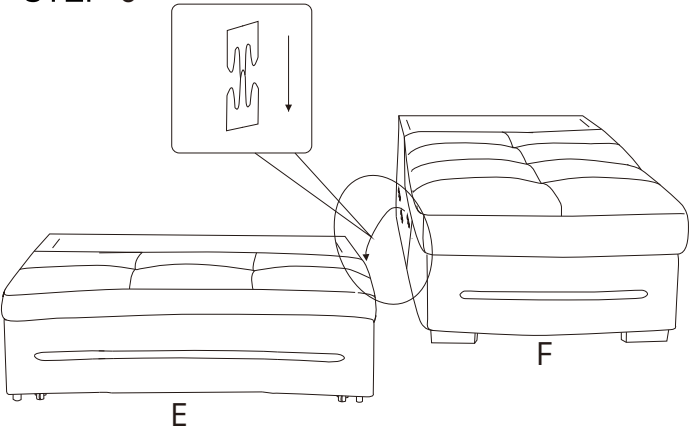

 
STEP 7

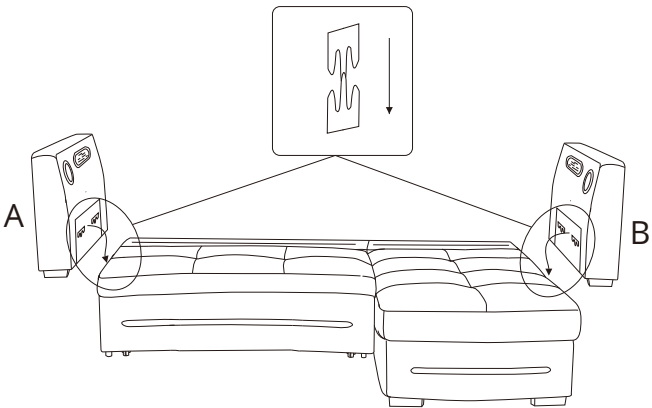

 
STEP 8

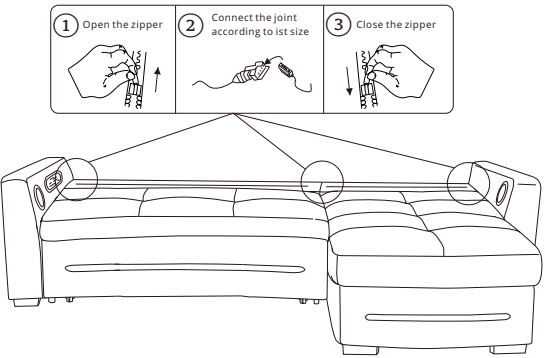

 
STEP 9

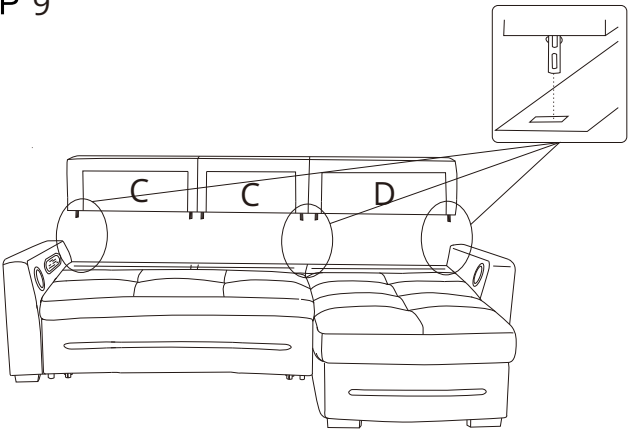

 
STEP 10

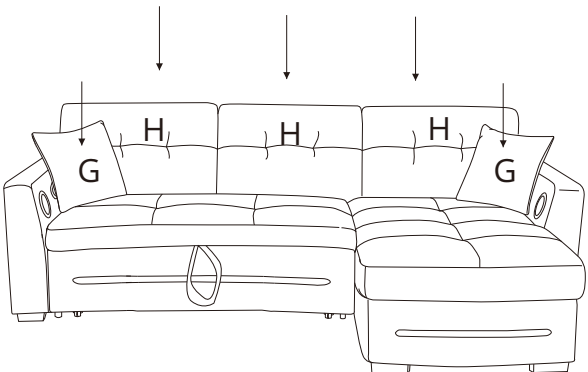

 
STEP 11

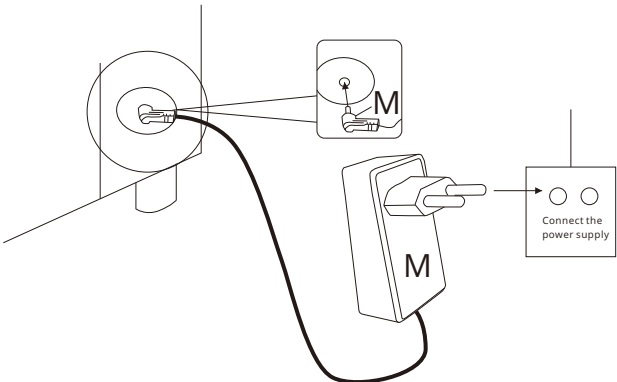

 
STEP 12

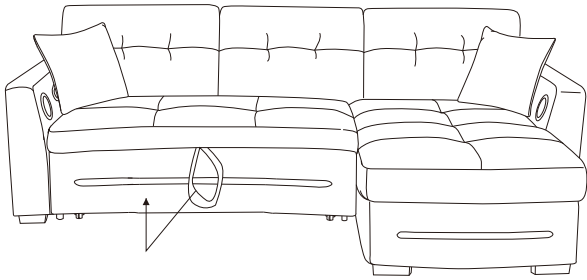

 
STEP 13

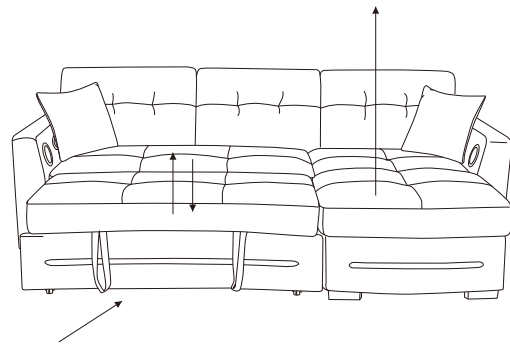


 
STEP 14

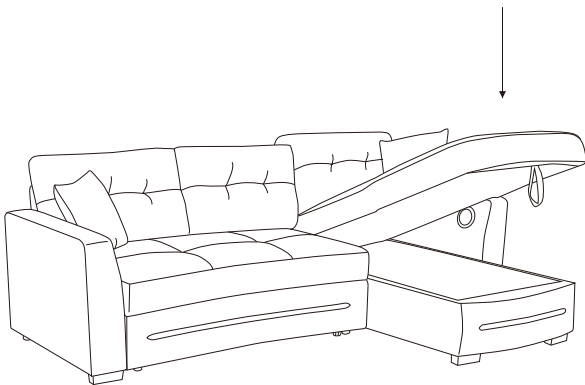

 STEP 15

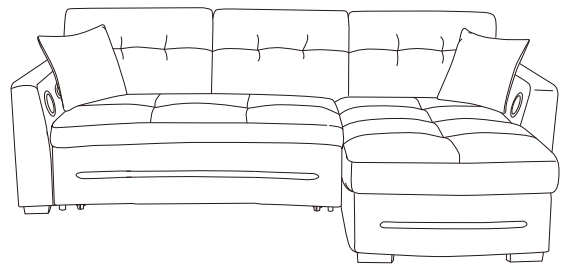

  STEP 16

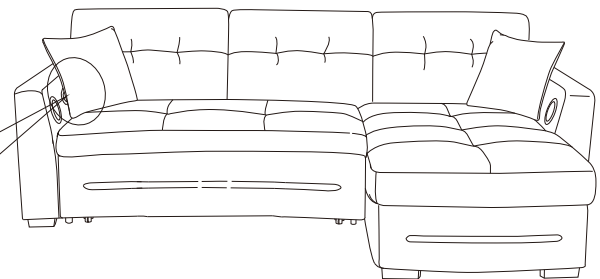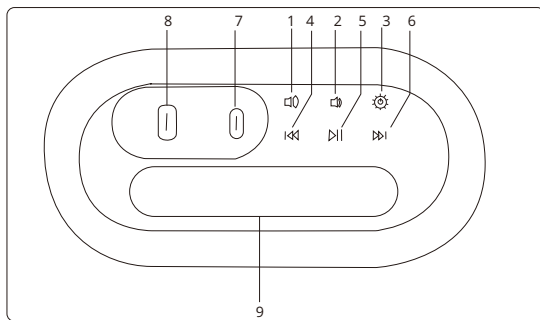

- | | | |
|--------------------|--------------------------------|---|
| 1. Volume up | 2. Volume down | 3. Power on/off & External Ambient Light Switch / Ambient Light Mode Adjustment |
| 4. Previous track | 5. Pause / Play | 6. Next track |
| 7. Type-C charging | 8. Stretchable Type-C charging | 9. Pocket wireless charger |

Detailed Function Introduction

1. Volume Up: Long press / Single tap to increase volume.
2. Volume Down: Long press / Single tap to decrease volume.
3. Power On/Off Button: Touch and hold to turn on/off the device / Single tap to switch on/off the external ambient light / Switch ambient light mode.
4. Previous Track: Single tap to go to the previous track.
5. Pause Mode: When the device is playing music, it will pause the playback.
6. Next Track: Single tap to go to the next track.
7. Type-C Charging: Insert the Type-C data cable to connect the phone and start charging.
8. Stretchable Type-C Charging: Supports PD protocol. Pull out the stretchable cable to connect the phone and start charging, pull out the cable and it will automatically return to its original position.