 
 


WIN FORCE

ASSEMBLY INSTRUCTIONS

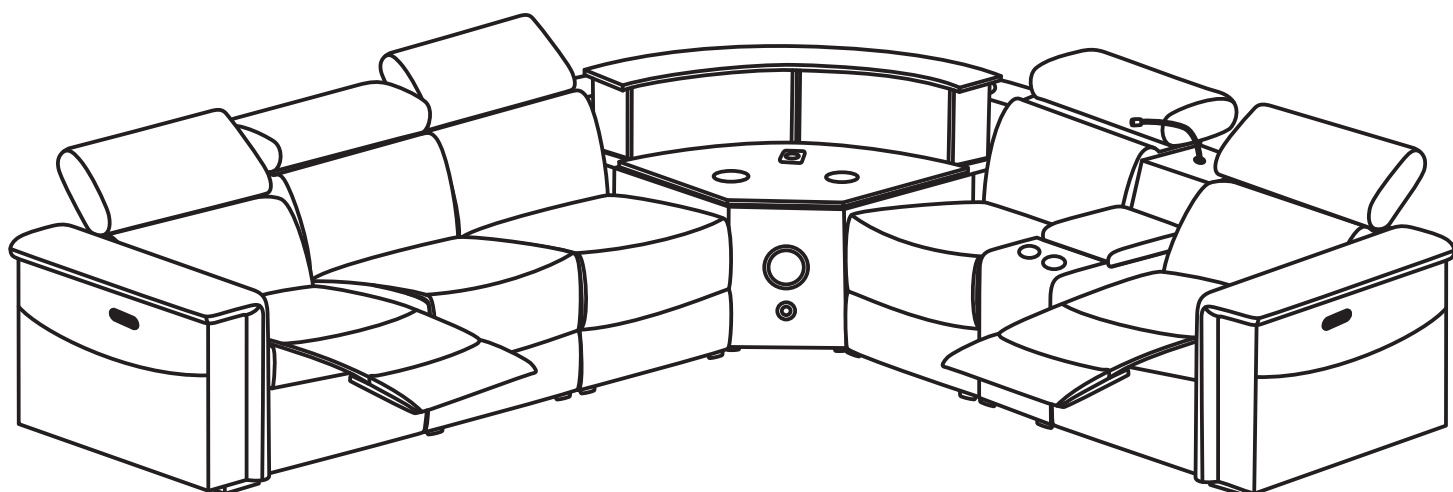

ASSEMBLY RATING

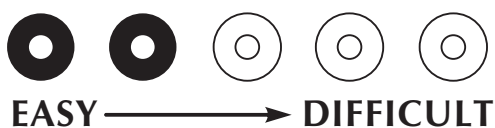

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



CHECK BEFORE STARTING

■ Are you missing anything?

Double-check all parts, hardware and accessories listed are all accounted for.

■ Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

■ Should we send any replacements?

 
Are there any irregularities or flaws in the parts? We can send replacements!

■ Prep Time!


Please review the assembly instructions and all diagrams prior to assembling.

ASSEMBLY AND CARE ADVICE

**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**

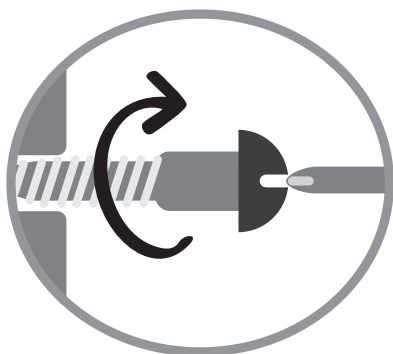

 Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.

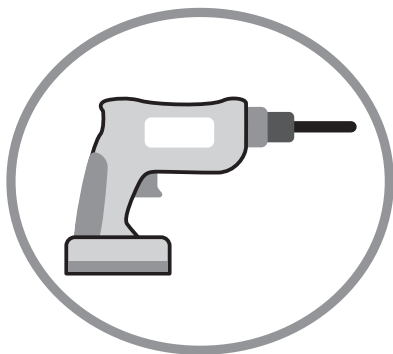

Use the appropriate hand tools or power tools to make it easy for assembly. Such as tightening screws and bolts.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 
 
PRE-USE CAUTIONS

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

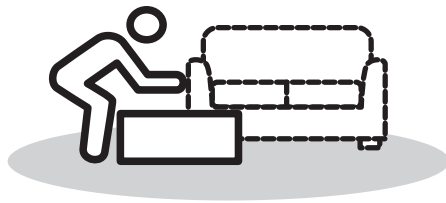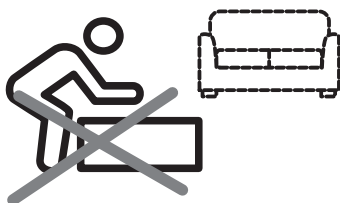


Suitable Location

  Assembling near the area of the intended location is highly recommended.

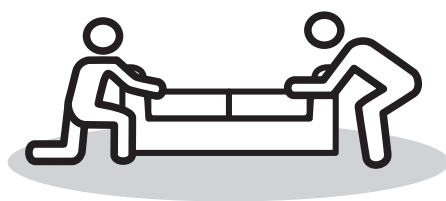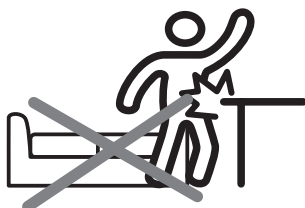

Sufficient Space

 Make sure you have enough space to move around during the assembly.

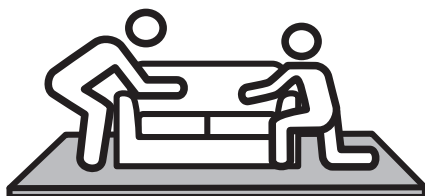

Avoid Scratches

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.



Flat Surface


Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

List of parts

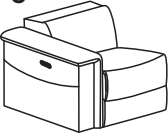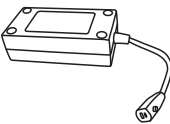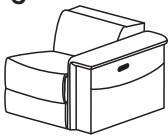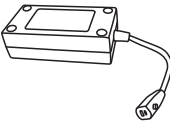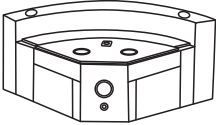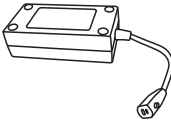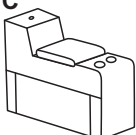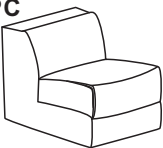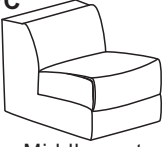
Carton 1/7: Left Side seat	A: 1PC  Left side seat	F: 1PC  Head rest	G: 2PCS  Square legs	H: 2PCS  Round legs
	J: 4PCS  Hexagonal screws	K: 1PC  Screws driver	L: 1PC  Power adapter	M: 1PC  AC power line
Carton 2/7: Right Side seat	B: 1PC  Right side seat	F: 1PC  Head rest	G: 2PCS  Square legs	H: 2PCS  Round legs
	J: 4PCS  Hexagonal screws	K: 1PC  Screws driver	L: 1PC  Power adapter	M: 1PC  AC power line
Carton 3/7: Corner	C: 1PC  Corner part	H: 5PCS  Round legs	L: 1PC  Power adapter	M: 1PC  AC power line
Carton 4/7: Console	D: 1PC  Console	H: 4PCS  Round legs	N: 1PC  Reading light	
Carton 4/7: Middle Seat	E: 1PC  Middle seat	F: 1PC  Head rest	H: 4PCS  Round legs	
Carton 4/7: Middle Seat	E: 1PC  Middle seat	F: 1PC  Head rest	H: 4PCS  Round legs	
Carton 7/7: Middle Seat	E: 1PC  Middle seat	F: 1PC  Head rest	H: 4PCS  Round legs	

ASSEMBLY STEPS

 1. Install the square legs(G) onto bottom side of 2 armrests, install all the round legs(H) onto other leg positions.

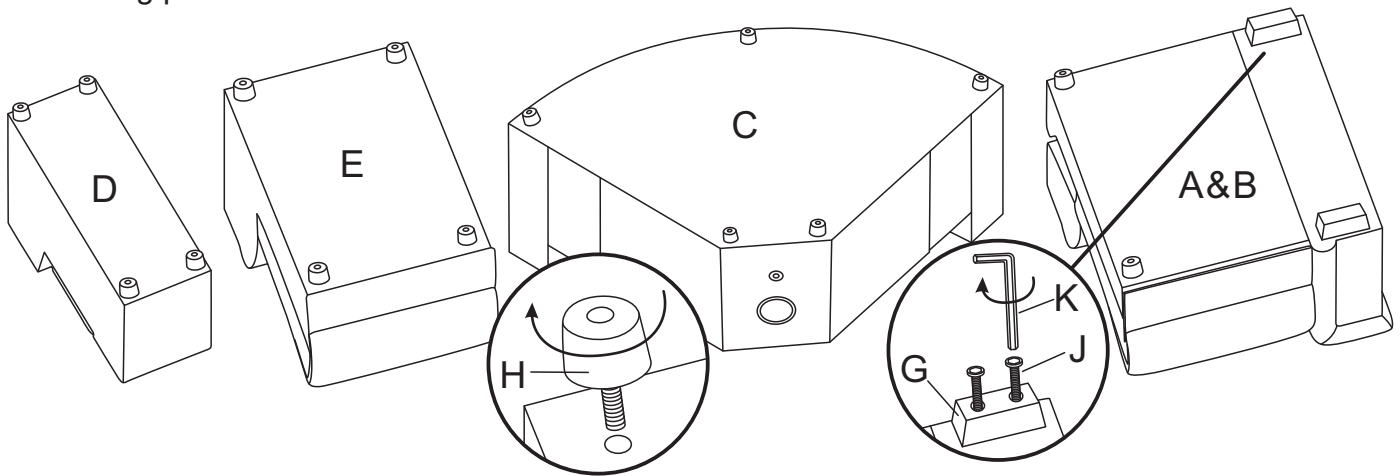

 2. Connect all parts. With its modular design, you can place these parts in different positions, base on your needs.

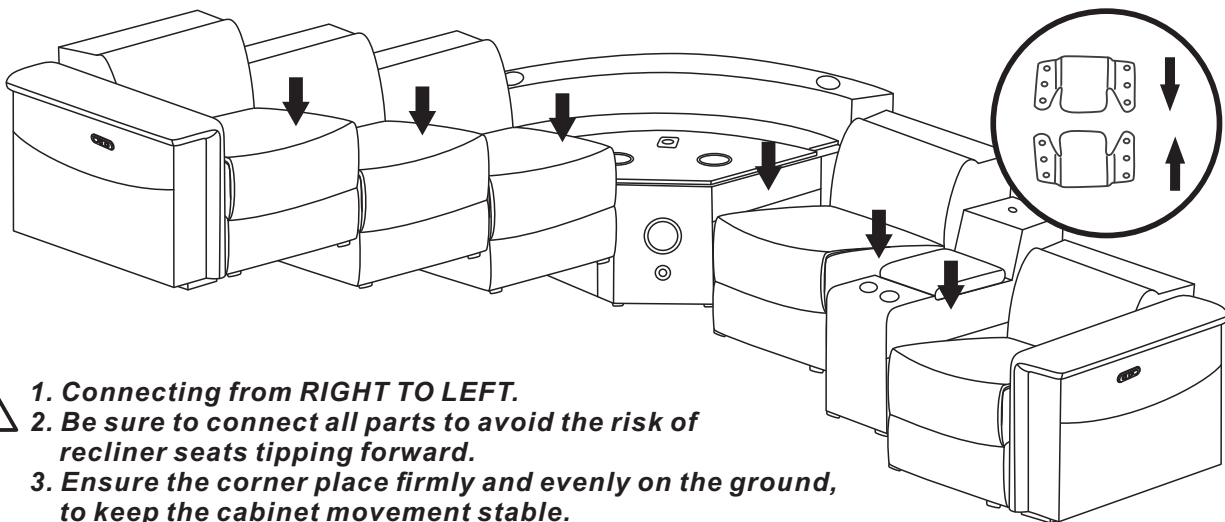


1. Connecting from RIGHT TO LEFT.

2. Be sure to connect all parts to avoid the risk of recliner seats tipping forward.


3. Ensure the corner place firmly and evenly on the ground, to keep the cabinet movement stable.

 3. Assemble the headrests(F) and the reading light(N). Simply push them down and ensure they are properly in place.

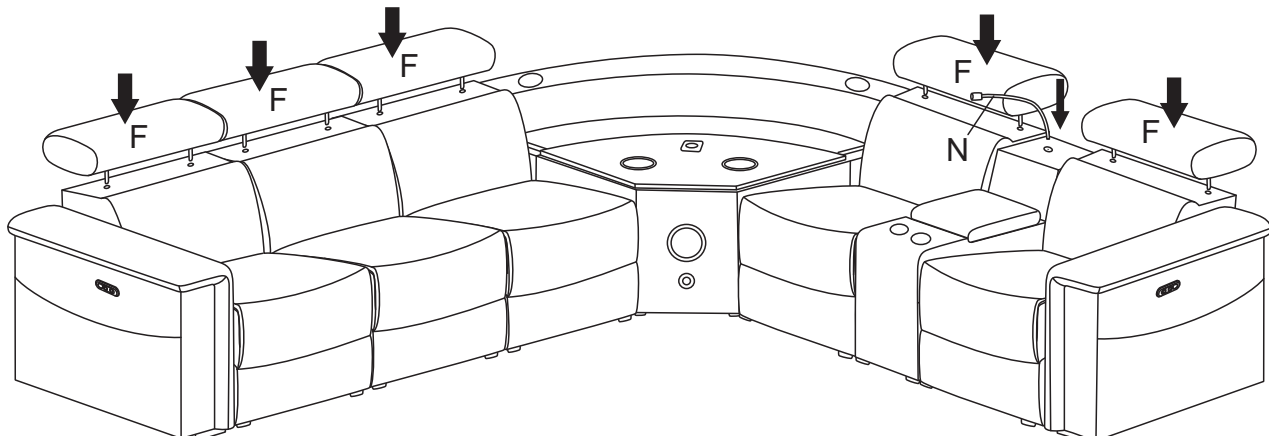

ASSEMBLY STEPS

 4. Connect the power plug of the console to the spare plug of the powered recliner section beside it.

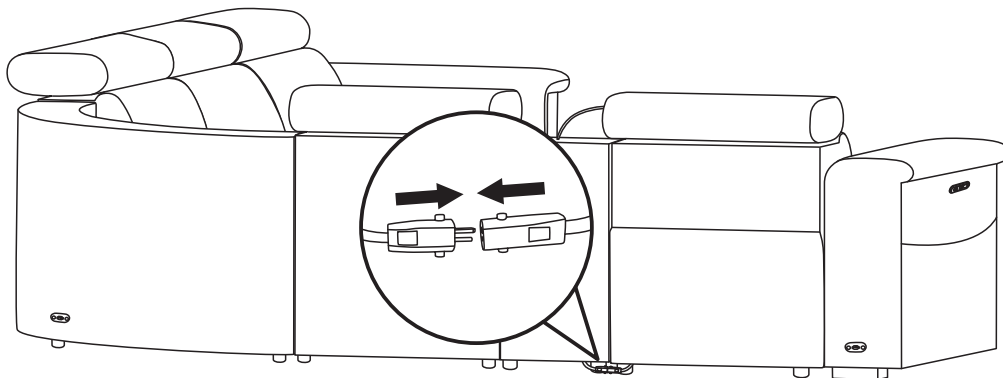


5. Connect the two powered recliner seats and the corner section to power:

First, connect the plug of the power adapter to the sofa components.

Next, plug the power line into the adapter.

 Finally, insert the other end of the power lines into your home power outlets.

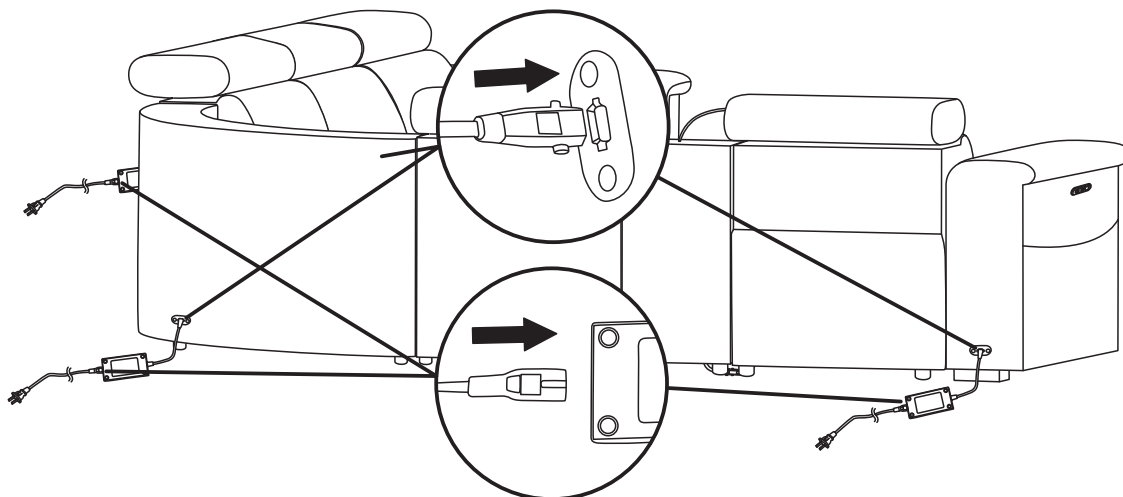

This sofa is sold in the world, the power model is a standard part. If it does not match the socket in your location. Please prepare a converter adapter yourself.

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

 


Lift, don't drag!

To avoid damage to product please always LIFT this product when transporting or adjusting the placement.

FEATURES

1. Electric panel:

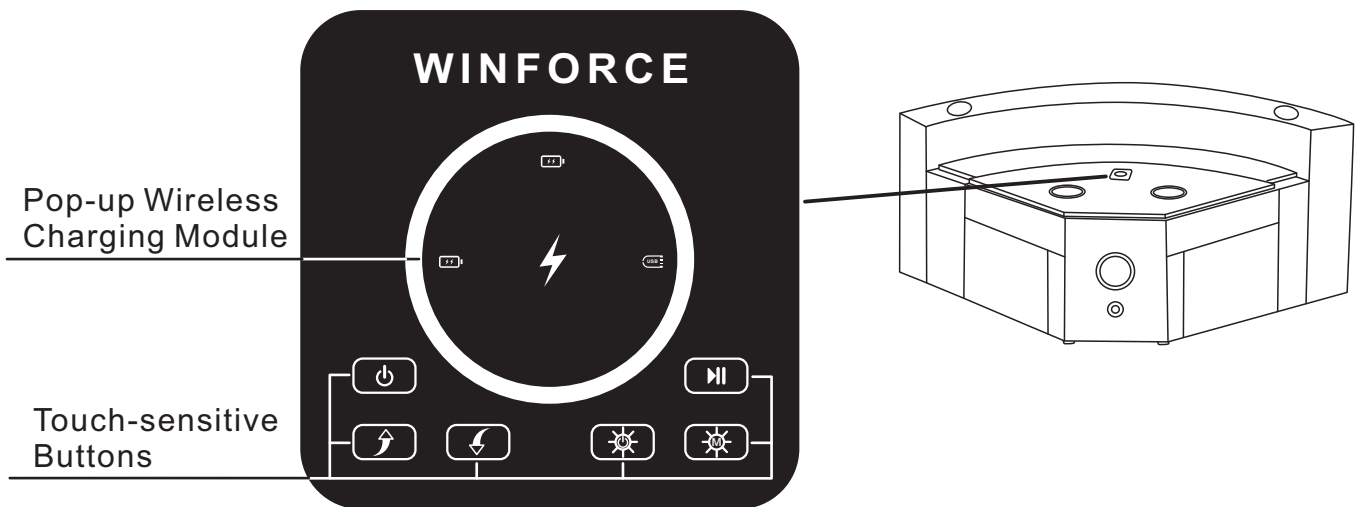

USB MUSIC: Insert a USB device, then MP3 music in it will be played automatically.



WIRED CHARGING PORT: Type-C / USB wired charging port.



WIRELESS CHARGING: 10W wireless charging. Place the phone flat on it.



SYSTEM POWER: A short press to power on, a long press to power off.



UP: Keep holding it, the cabinet will rise.



DOWN / RESET: Keep holding it, the cabinet will lower.
When an issue occurs, hold it down longer to reset.



PLAY / PAUSE: A short press pauses the music, another short press plays.



LIGHT SWITCH: A short press turns the Ambient Light on or off.



LIGHT MODE SELECTION: A short press switches between colorful ambient light modes.

(1): RGB Fade. (2): RGB Flow. (3): RGB Breath. (4): Music Sync. (5): Solid Blue.

2. Bluetooth Speaker:

The name of this device is "WINFORCE01". Power on the system and find the name in the device list on your phone, then connect.

 
Control the volume on your phone.

Play or pause the music both on the panel or your phone.

When you turn on the ambient light and select MUSIC SYNC mode, you will get an excellent music experience.

FEATURES


3. Lift Wine Cabinet:

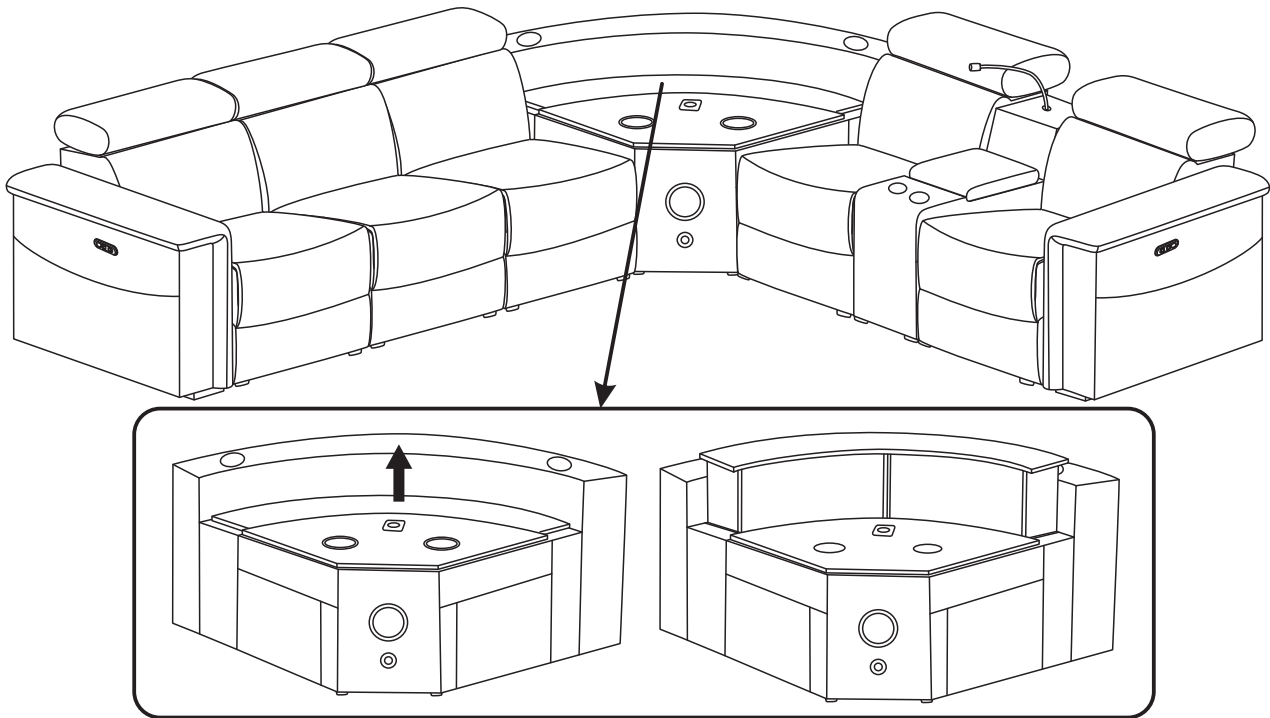

Tips:

- 1). The movement is controlled by the buttons located on the electronic panel.
- 2). Don't press hard on the cabinet (stationary or in motion), drive motors may be damaged by overload.
- 3). You need to keep holding the button to keep it moving.
- 4). When an issue occurs, hold the button "DOWN" try to reset.
- 5). The ambient light is place in it. Control or switch it on the electric panel.

 4. Reading Light:

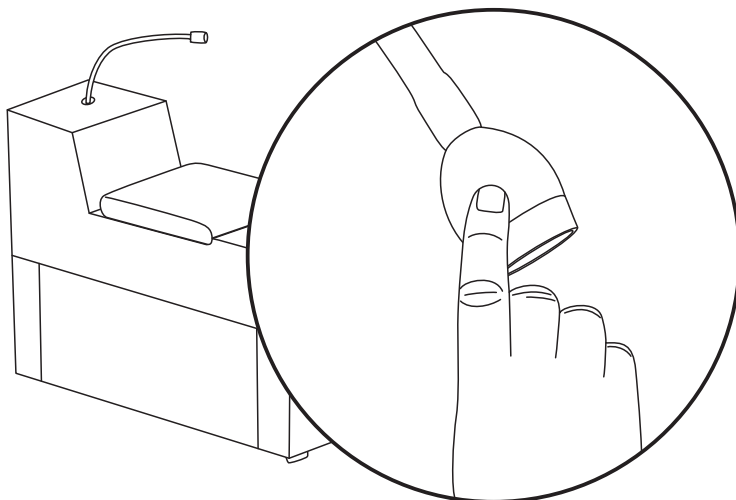

Touch the metal part on its head to control this reading light.

 
First touch, turns on with white light.

Second touch, switches to warm light.

Third touch, turns off.

FEATURES


5. Powered Recliner:

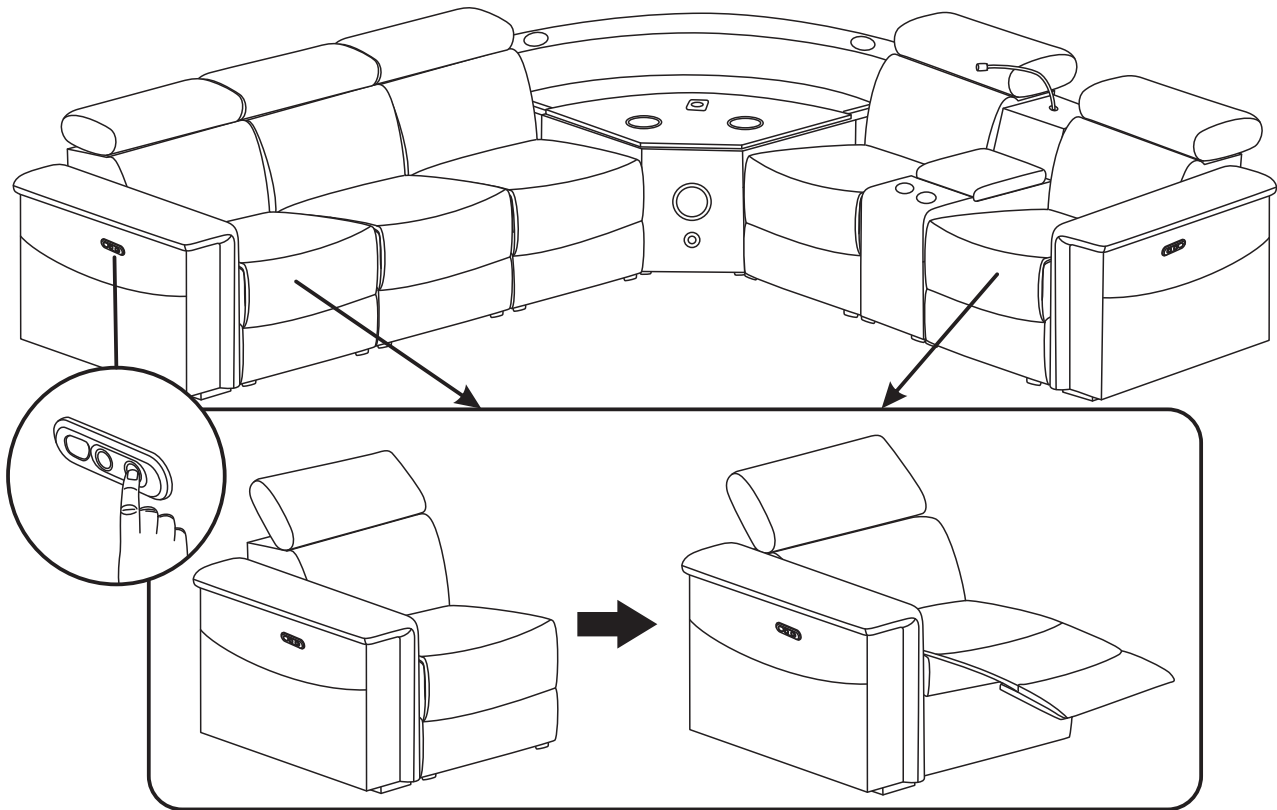


Hold down the button on the controller at the outer side of armrests to extend or retract the recliner seat.

This controller is equipped with a Type-C and a USB charging ports.

 
The recliner features 3 different positions, as shown in the diagram.

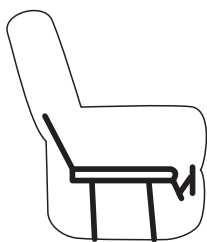

Sitting
Position

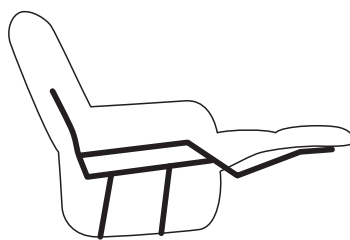 


Reading / TV
Position

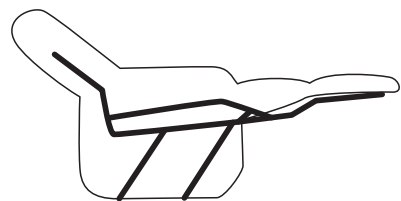 

Full - Recline
Position

FEATURES

 
6. Angle-adjustable Headrests:

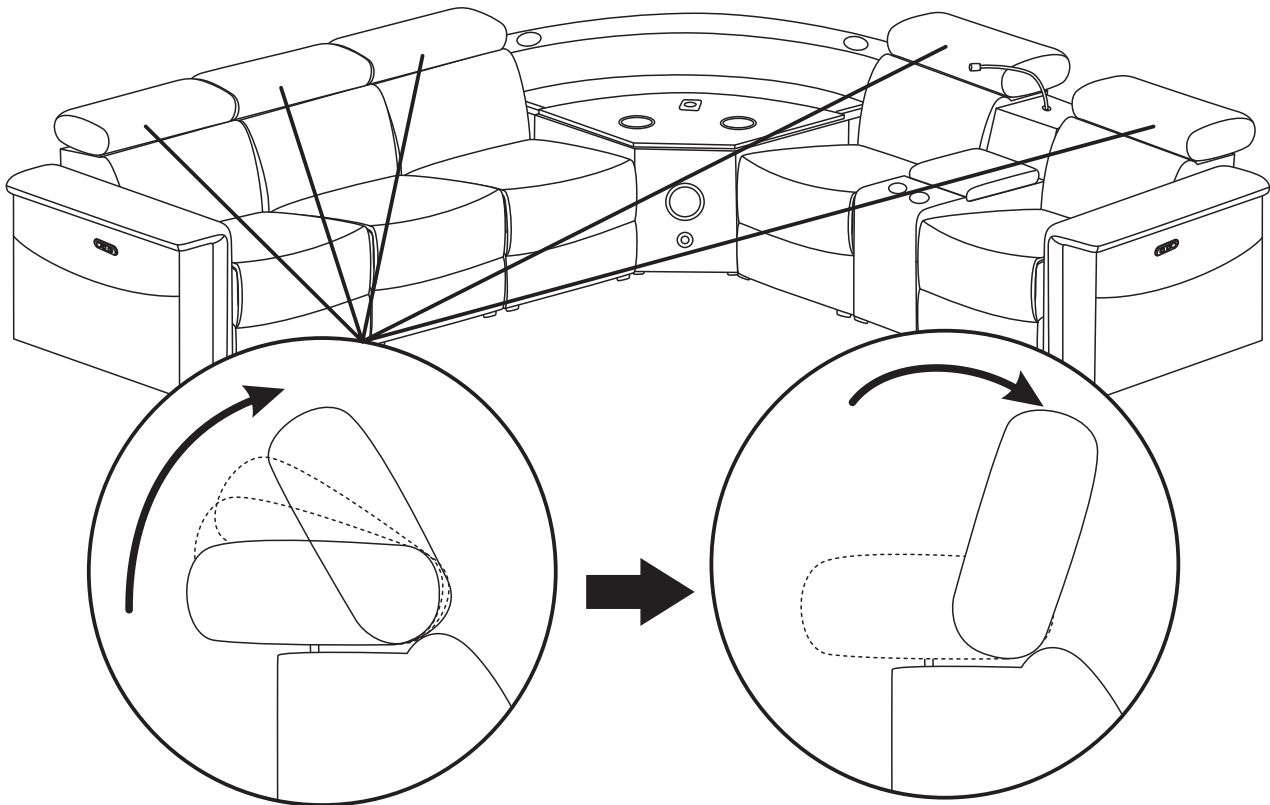

All 5 headrests are manually angle - adjustable.

Continuing to push it, when the headrest reaches its maximum angle, it will return to original position.

 7. Hidden storage space:

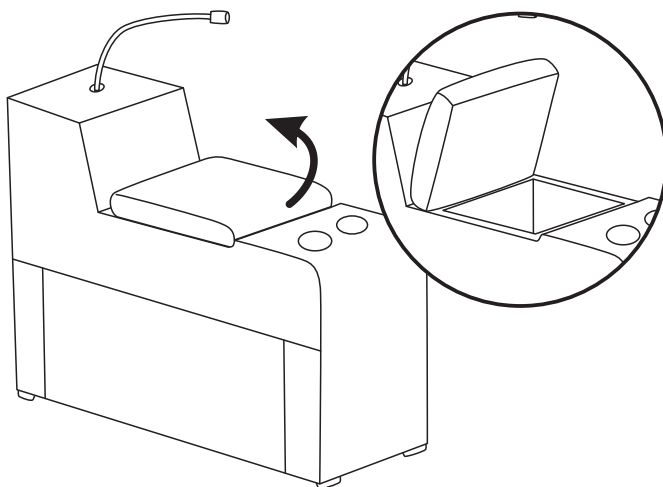


Open the lid of the console manually.
And there is a storage space inside.

Dimension of this space:
11.8"(width) * 10.0"(depth) * 9.8"(height)



USAGE WARNING

To prevent damage or injury, please read these warnings carefully and follow all instructions to avoid improper use that may cause loss.

 
1. Tipping Hazard:

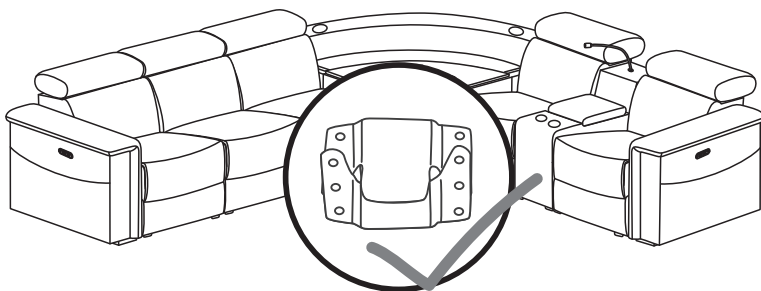

  (1). All modules should be connected to keep the powered recliners more stable.

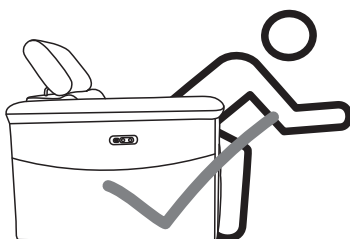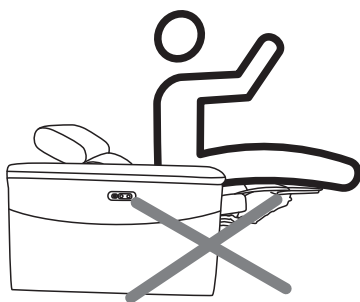



(2). Never try to stand up when the seat is extended. Retract the seat to its sofa position first.

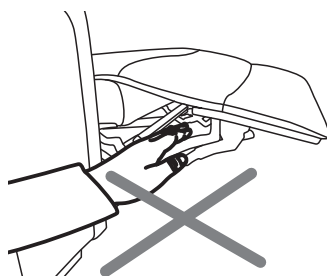

(3). Prevent kids from jumping on the sofa to avoid getting hurt if it tips over.

(4). Keep body parts and pets away from moving metal frame to avoid injury.

2. Cabinet Overload:

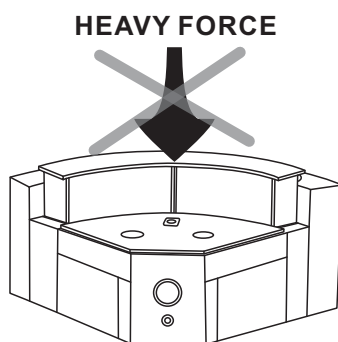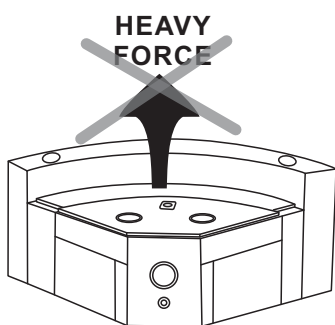

Don't apply excessive force to lift or press down on the cabinet. As this may damage the motors system.

USAGE WARNING

3. Cabinet Motor Reset:




HOLD long time = Reset

The cabinet's lifting and lowering relies on a complex motion system. If it works abnormally after long-term using or an accident. Please try resetting the system by pressing and holding the "DOWN" button on the panel.

4. STOW before Power off:


Both the recliner and cabinet motors retain enough force to hold their position when power is cut off. Therefore, please return all movable parts to their original position before disconnecting power.

5. Prevent Pinching:

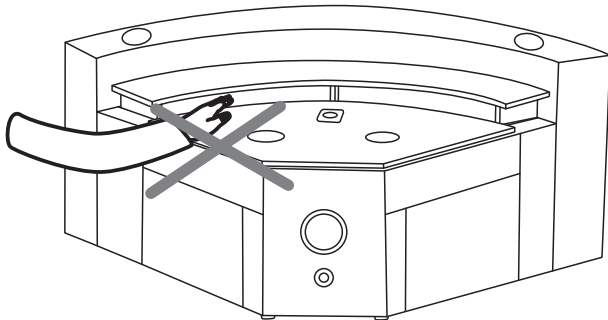

When the cabinet is lowering, please keep away from moving parts to avoid accidental pinching.


6. Cap Drop Caution:

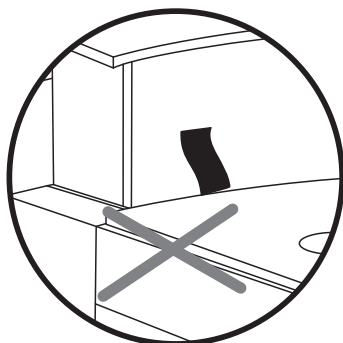

Avoid letting valuable items - such as cash or mobile phones - fall into cabinet's gaps. Once they fall in, they can't be retrieved unless you remove the bottom cover fabric.

USAGE WARNING

7. Protective Film Removal:

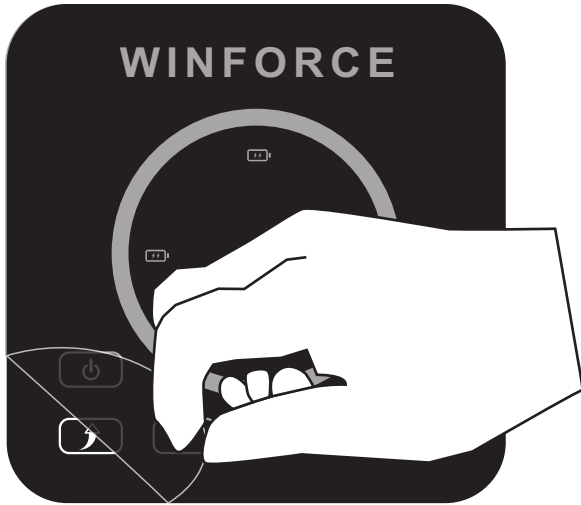

On the electronic panel, there is a thin plastic protective film. Only when you peel it off, will the actual smooth, glossy and shiny glass surface be revealed.

The same protective film is also on the center's pop-up charging compartment - please peel it off as well.

WIN FORCE

With passion woven into every design and craft, we shape our products;
With warmth carried to every corner of home, we touch your days.