



ASSEMBLY INSTRUCTIONS

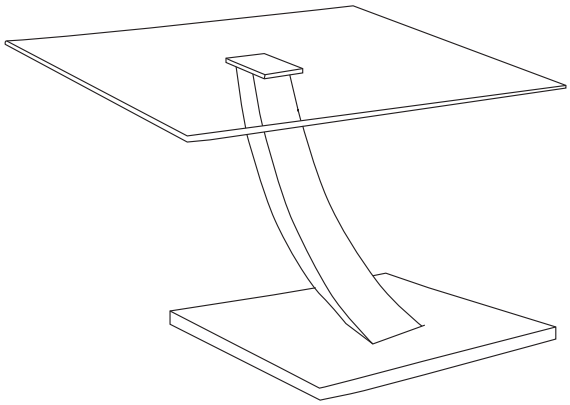


Ax1 	Bx1 	Cx1 
Dx6 	Ex6 	Fx4 
Gx2 	Hx1 	Ix4 

1

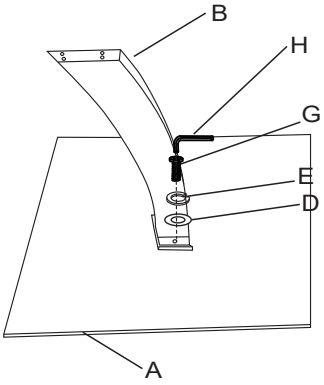

2

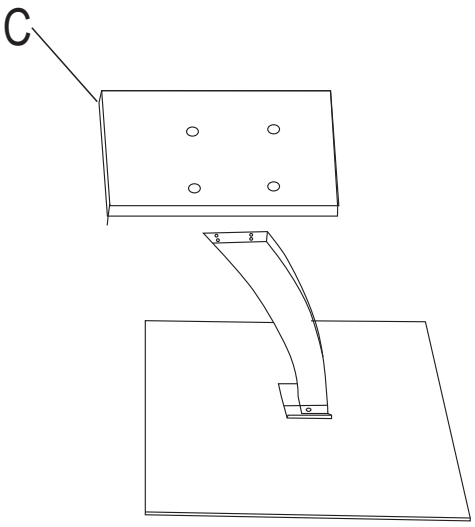

3

