

T/F BUNK BED

ATTENTLON:DO not tighten all bolts until the bed is assembled completely.


Hardware pack attached in the package in red plastic bag.

Assembly instructions

STEP1




STEP2

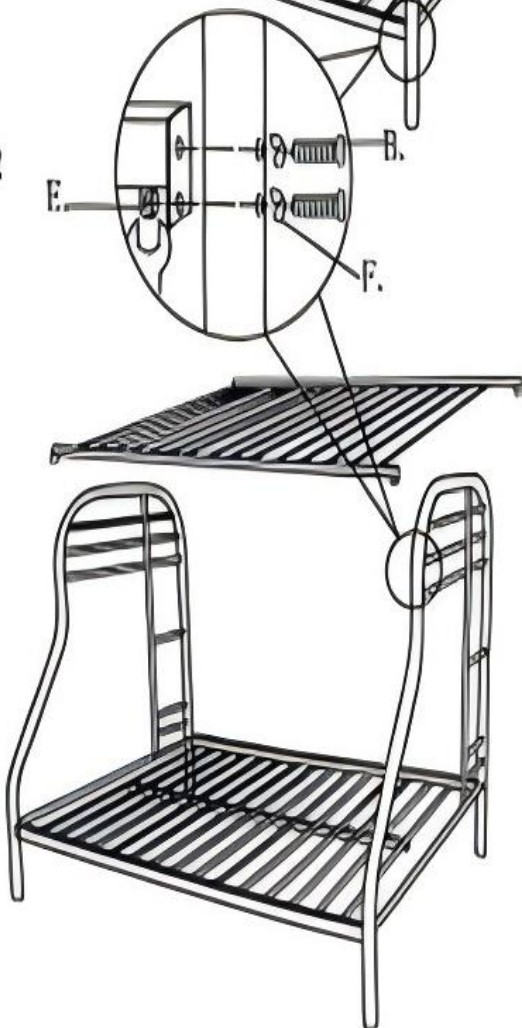

PARTS LIST

A.		M8*80	8PCS
B.		M8*60	16PCS
C.		M8*40	1PC
D.		M8*30	1PC
E.		M8	17PCS
F.		M8 WASHER	24PCS
G.		M8 ALEN WRENCH	1PC
H.		OPEN WRENCH 13#	1PC
I.			1PC
J.			1PC
K.			1PC

STEP3

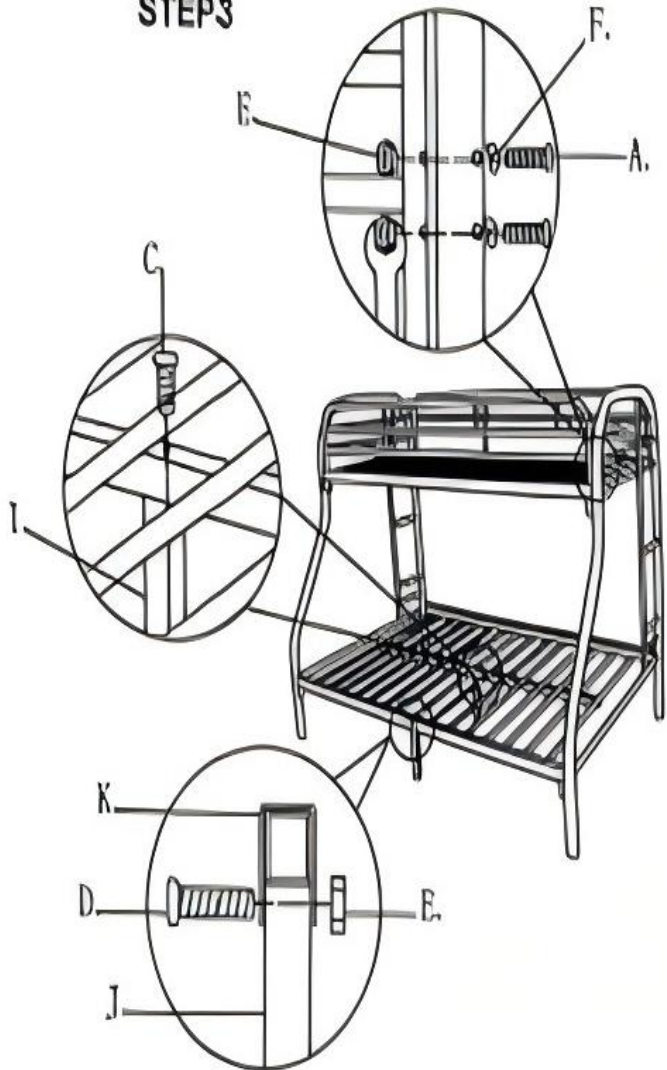

HARDWARE PACK ATTACHED IN THE PACKAGE IN RED PLASTIC BAG