

ASSEMBLY INSTRUCTION

NOTE: THIS ITEM NOT RECOMMENDED FOR COMMERCIAL USE
KEEP THIS DOCUMENT FOR REFERENCE IN CASE PARTS ARE NEEDED
DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED!

IMPORTANT

FOR SERVICE PURPOSE, PLEASE DO NOT REMOVE THE CUSTOMER SERVICE CODE LABEL ON THE MERCHANDISE. IT IS ON THE UNDERSIDE OF THE BED.


T/F BUNK BED

Attention: Do not tighten all bolts until the bed is assembled completely.


Hardware pack attached in the package in red plastic bag.

Assembly Instructions


PARTS LIST

a		Hex-Head m8x80 Bolts	8 pcs
b		Hex-Head m8x60 Bolts	20 pcs
c		Hex-Head m8x40 Bolts	2 pcs
d		Hex-Head m8x15 Bolts	4 pcs
f		m8 Nuts	16 pcs
g		m8 Washer	36 pcs
h		Hex-Head m6x20 Bolts	16 pcs
i		m6 Nuts	16 pcs
j		Hex-Head m6x20 Bolts	2 pcs
k		m6 Open Wrench	1 pc
l		m6 Allen Wrench	1 pc
m		m8 Open Wrench	1 pc
n		m8 Allen Wrench	1 pc


STEP 1

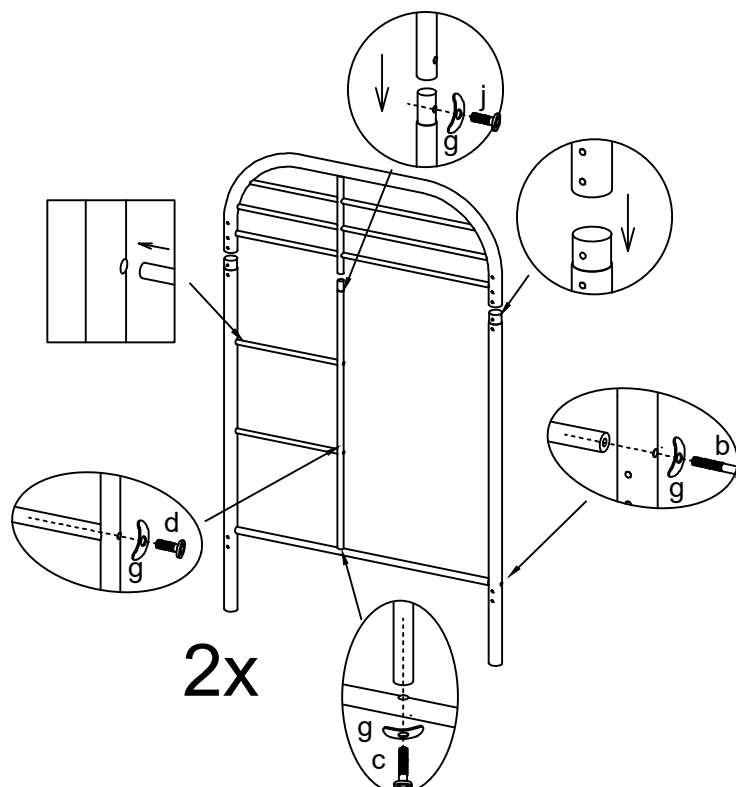

STEP 2

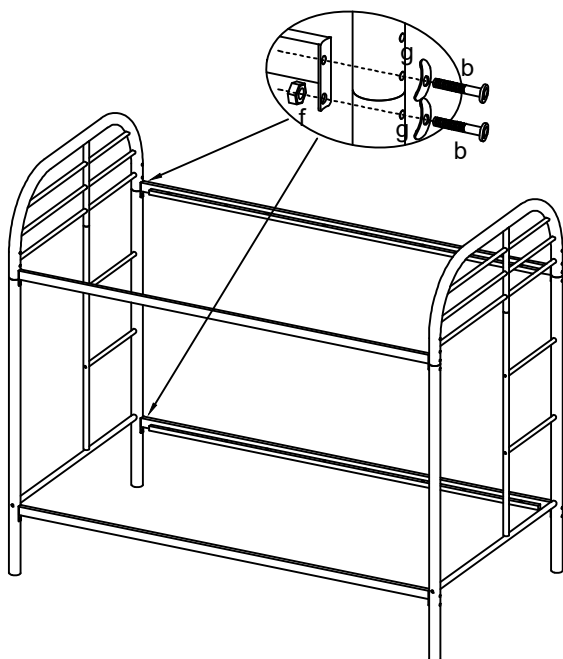

STEP 3

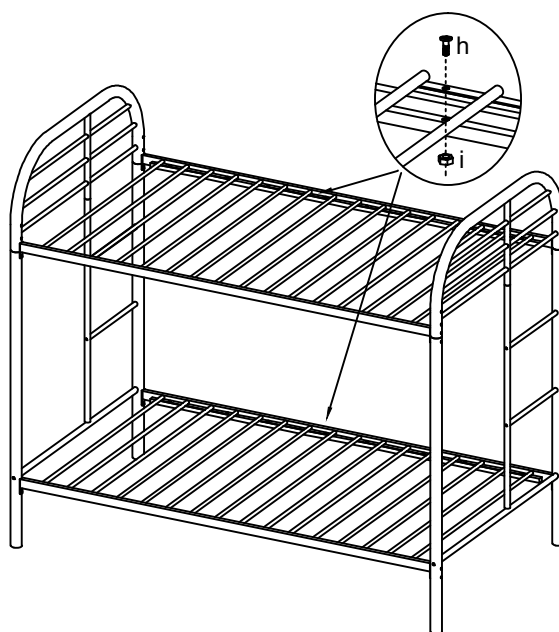

HARDWARE PACK ATTACHED IN THE PACKAGE IN RED PLASTIC BAG

STEP 4

