


Assembly Instructions

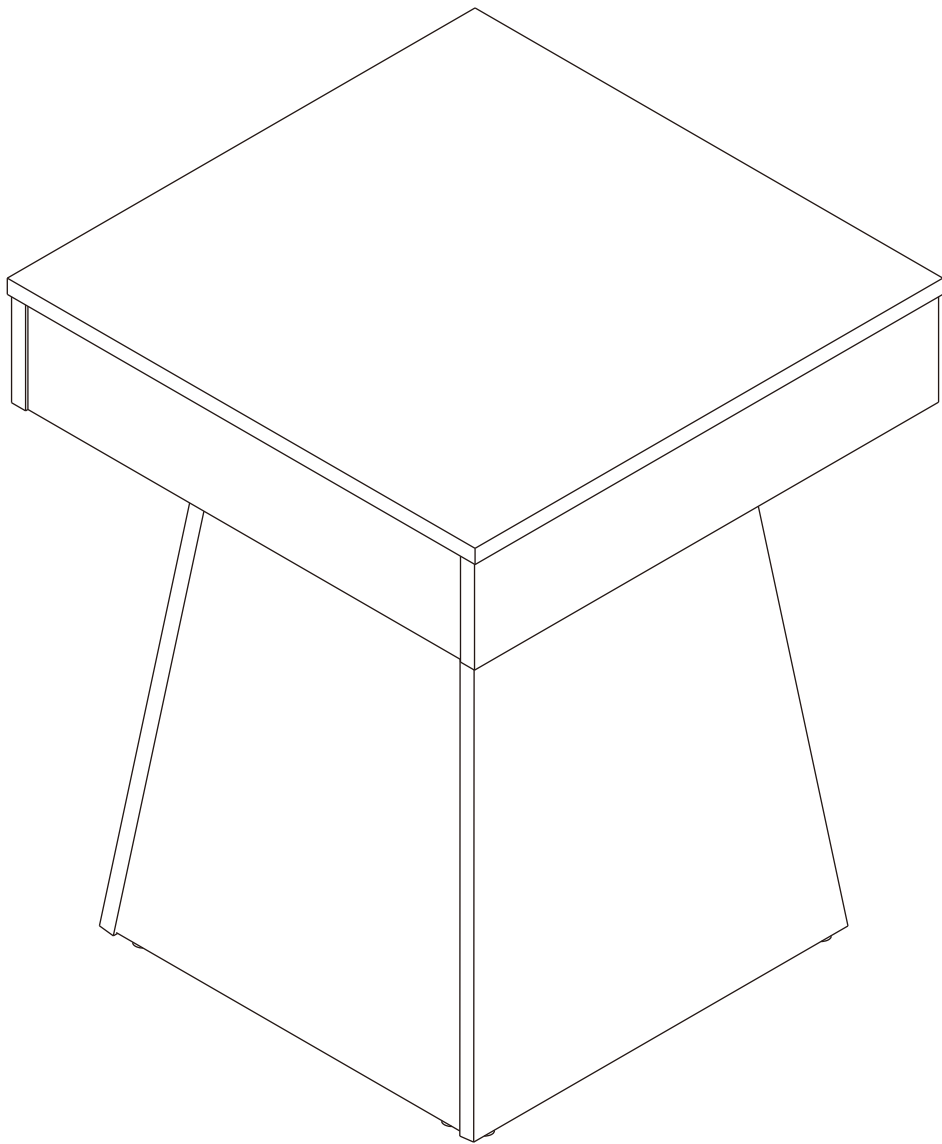

Side Table

Model No.
HOGA- J0385

Contact Us




We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

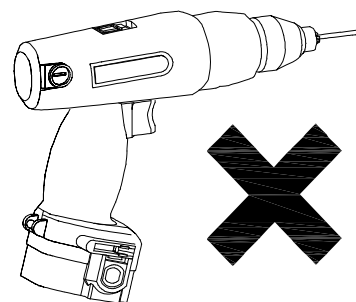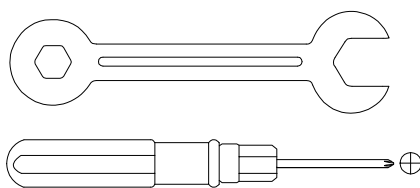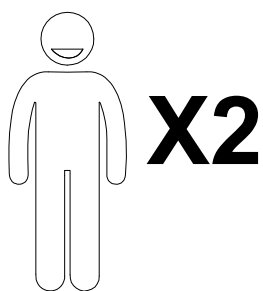



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

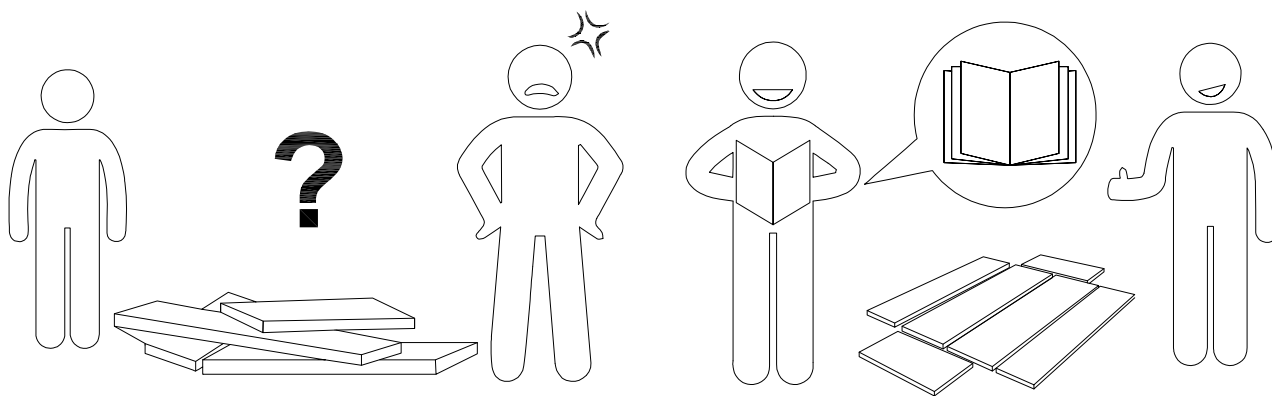







AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

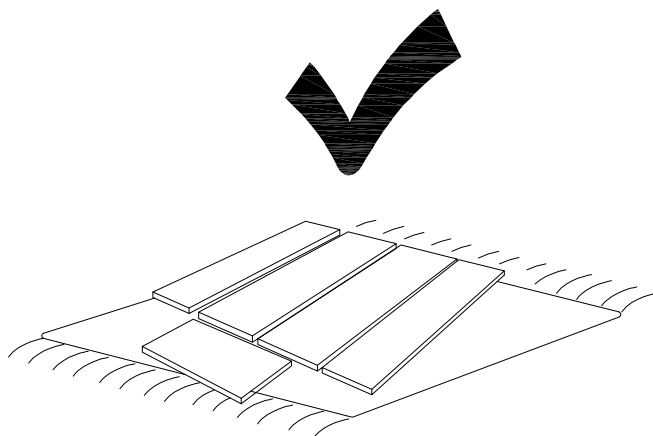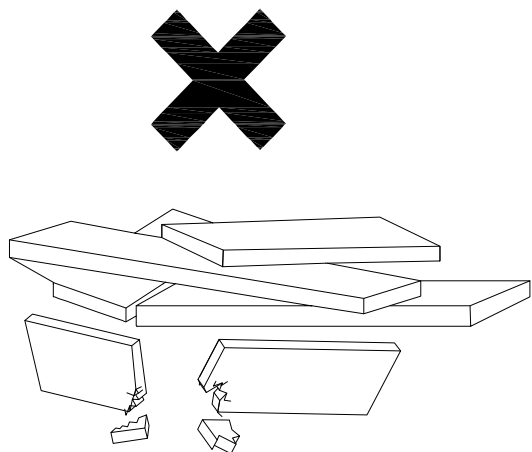

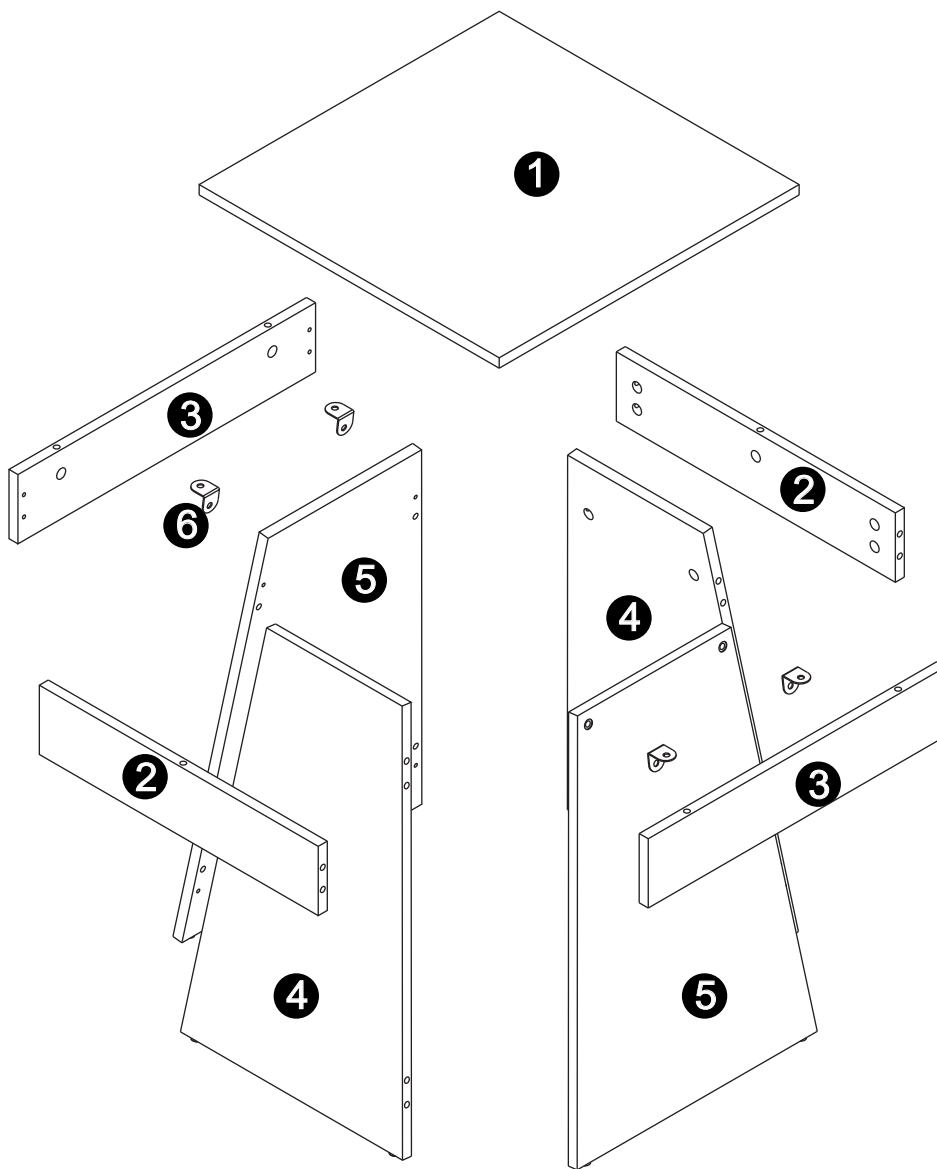

Parts List

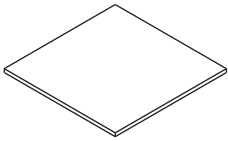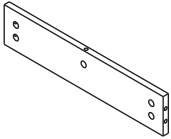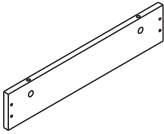

1  1 pc	2  2 pcs	3  2 pcs	4  2 pcs	5  2 pcs
6  4 pcs				

Hardware List


A	B	C	D	E
 M6×12mm 8 pcs	 M6×44.5mm 22 pcs	 Ø15mm 22 pcs	 Ø8x30mm 8 pcs	 1 pc

Installation of Cams and Pins


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

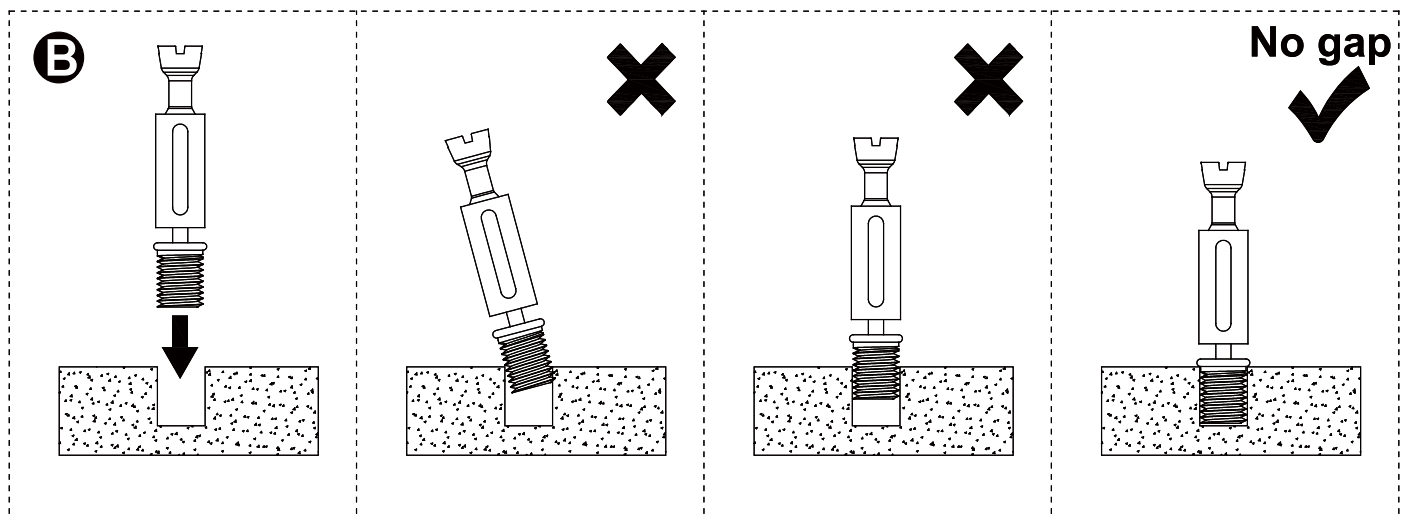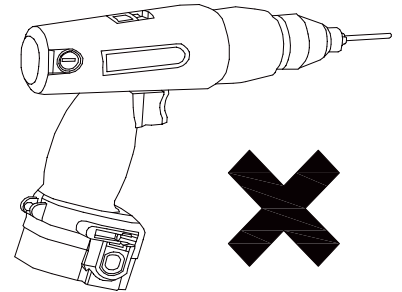

Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

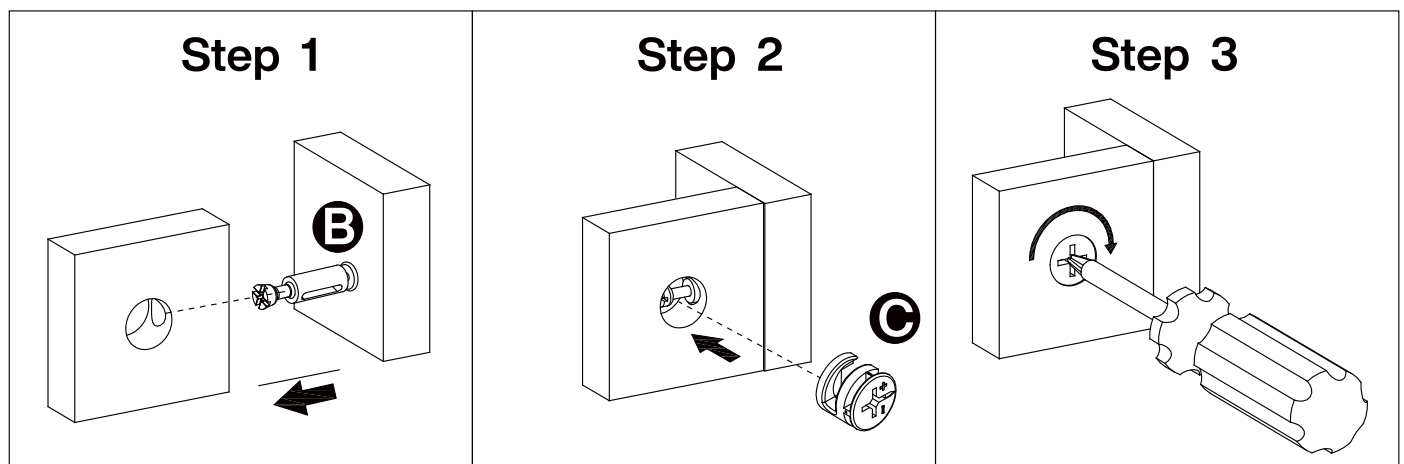


1

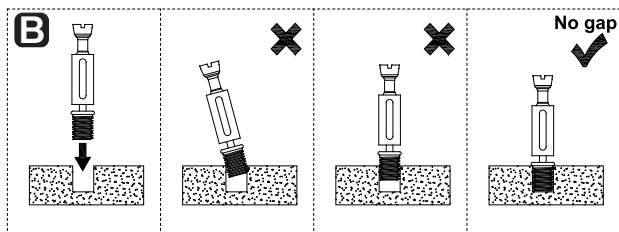

B


M6×44.5mm
8 pcs

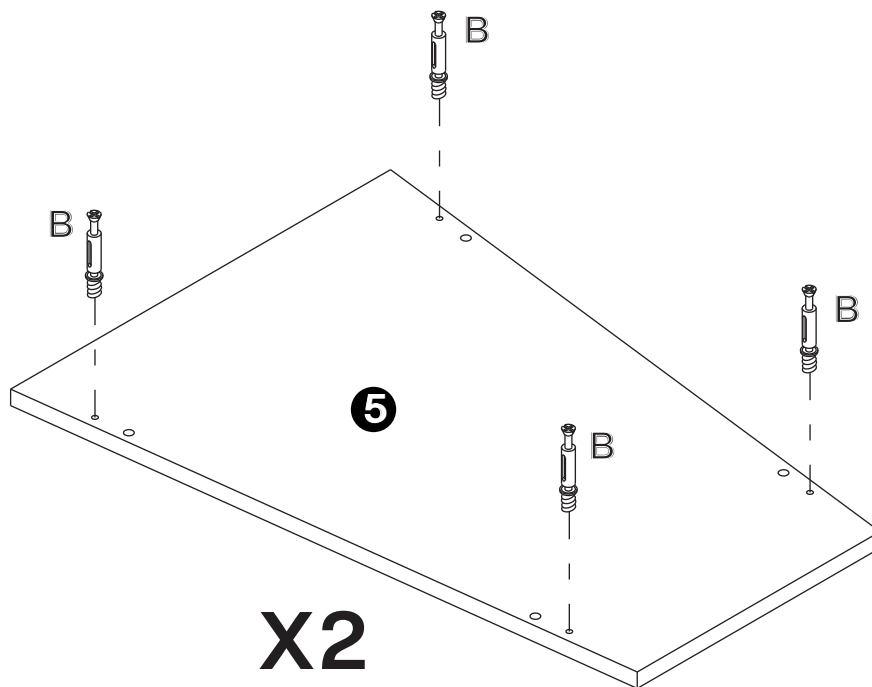


2

D

Ø8x30mm
8 pcs

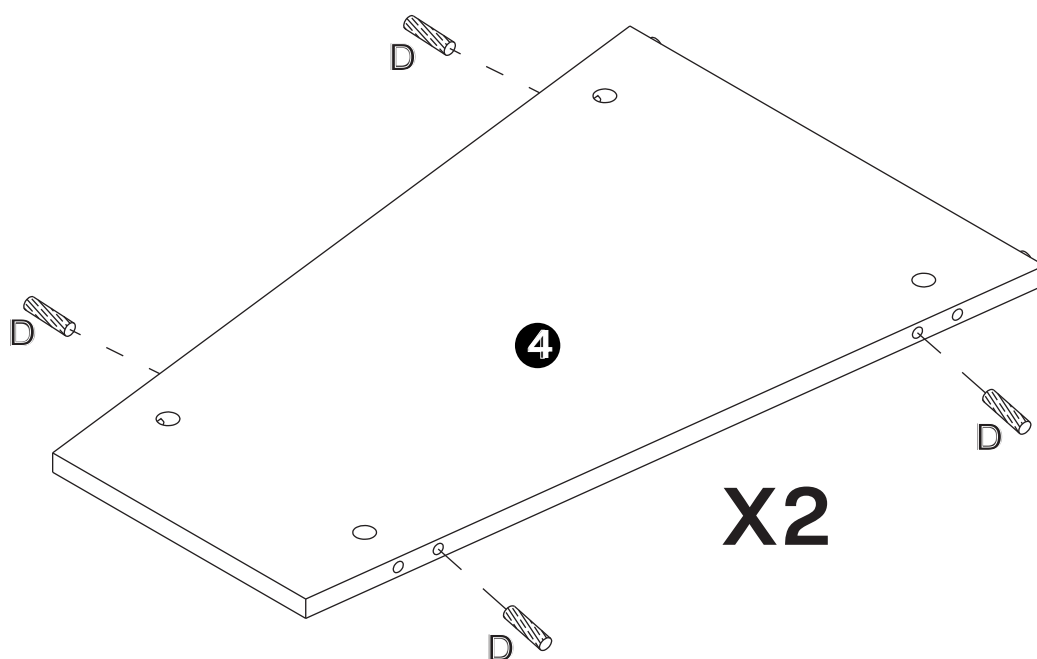


3

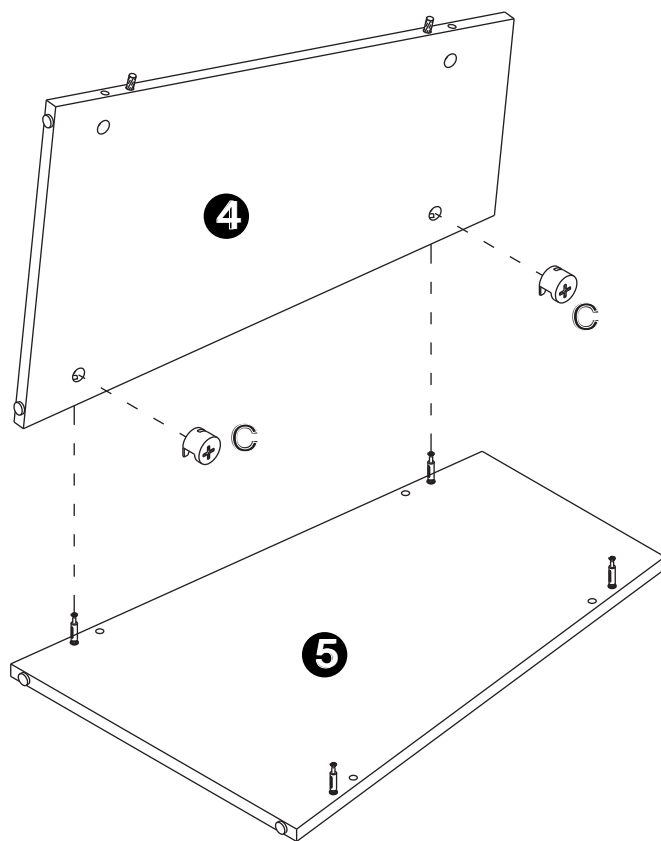


C

Ø15mm
2 pcs

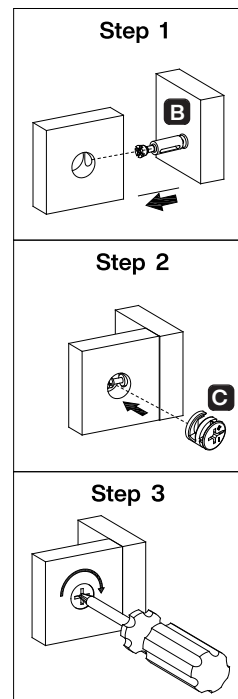


4

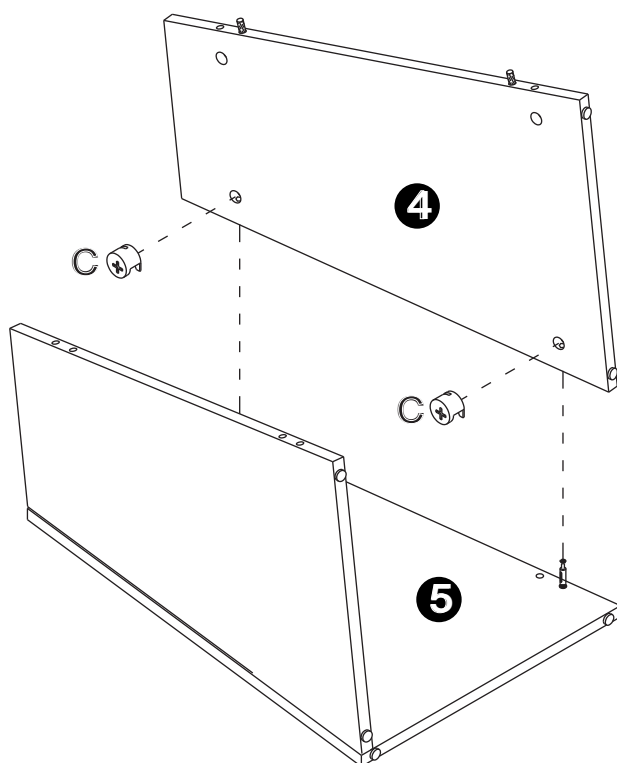


C

Ø15mm
2 pcs

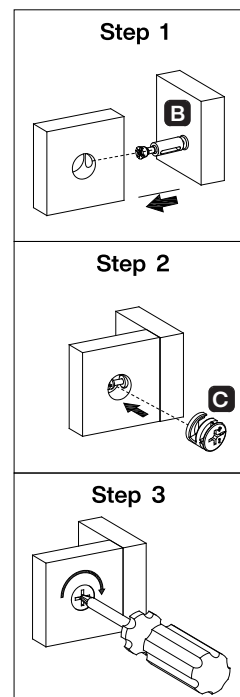

5

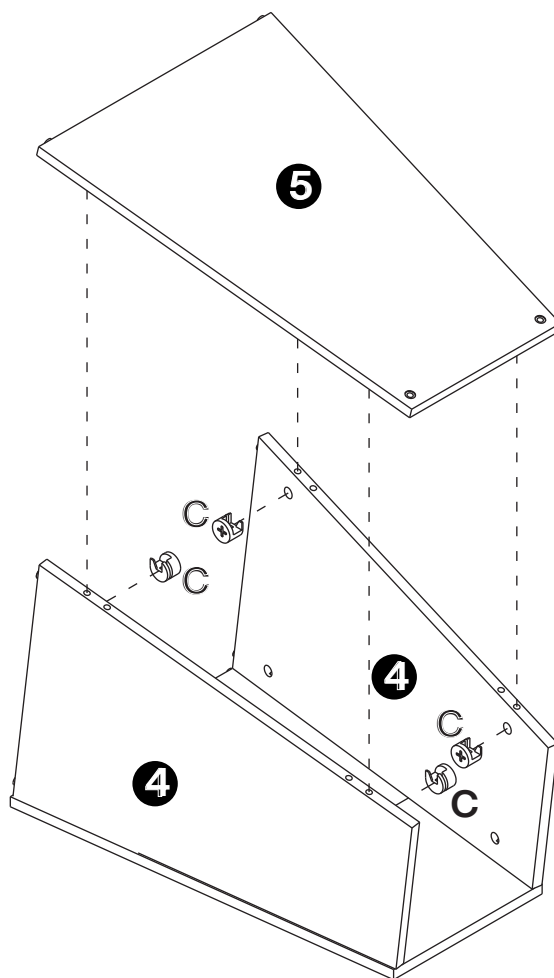


C




Ø15mm

4 pcs


Step 1

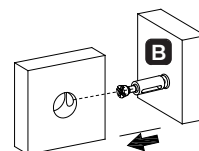


Step 2

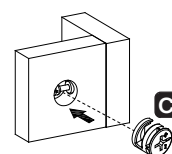

Step 3

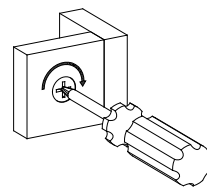

6

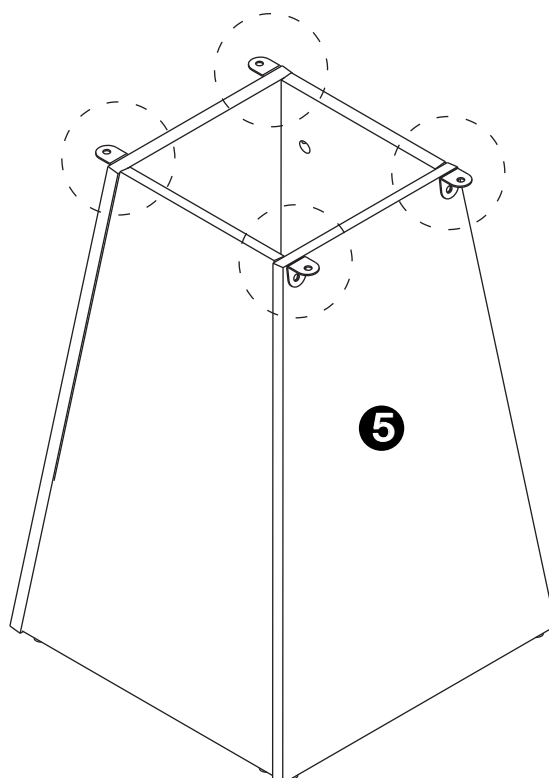


A




M6×12mm

4 pcs

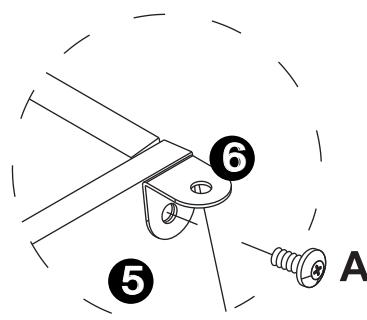


7

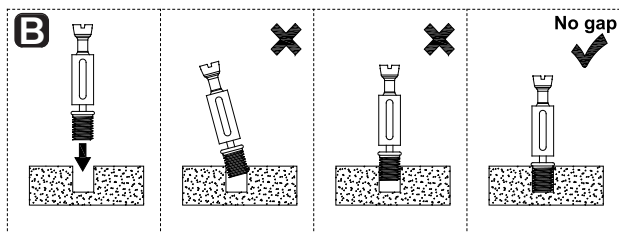


B

M6×44.5mm
6 pcs

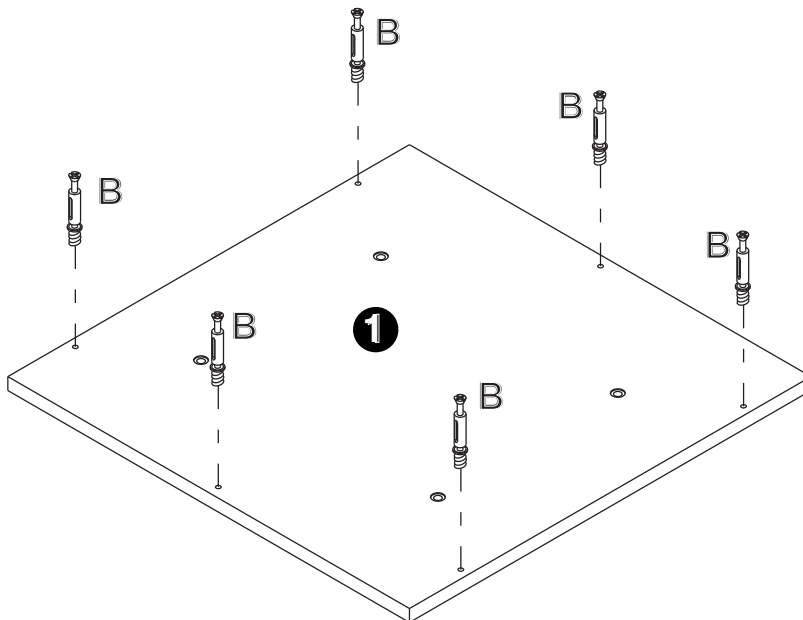


8

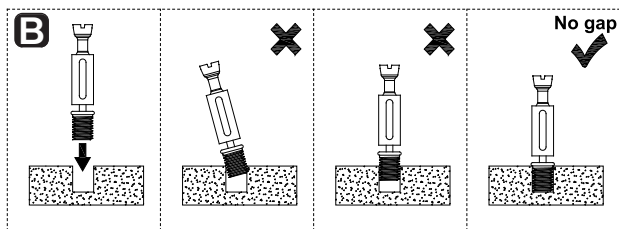


B


M6×44.5mm
8 pcs

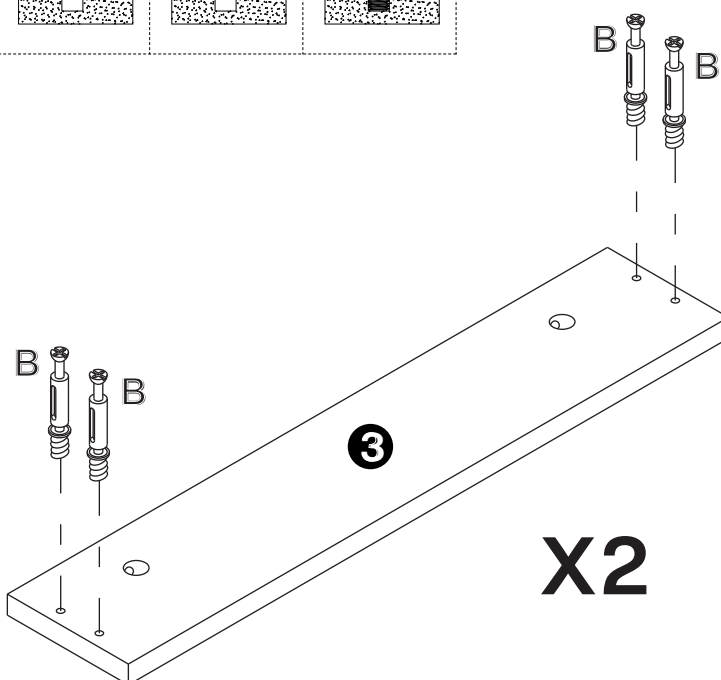


9

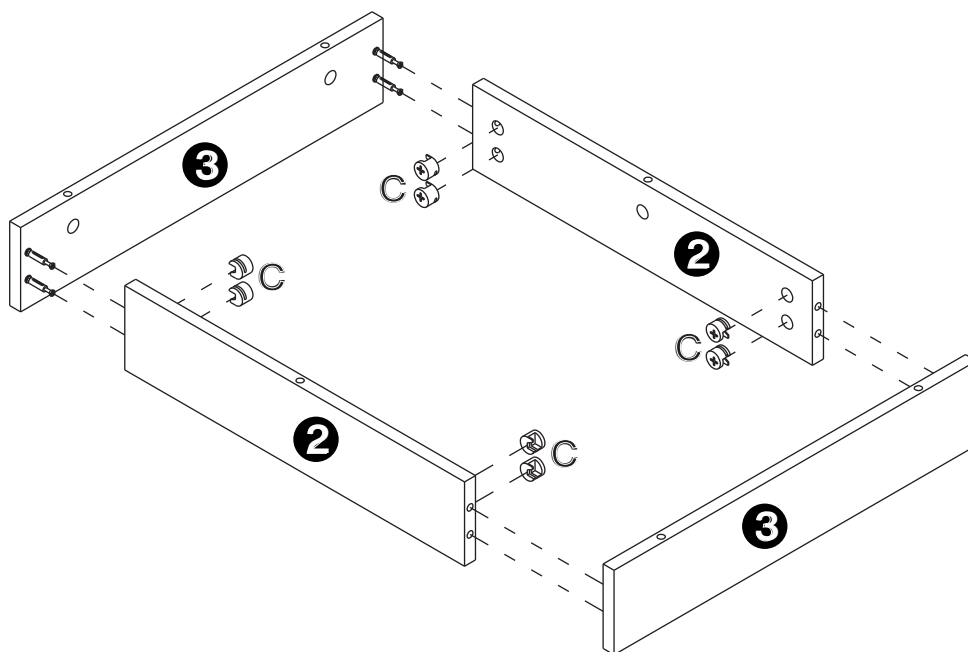


C
 Ø15mm
8 pcs

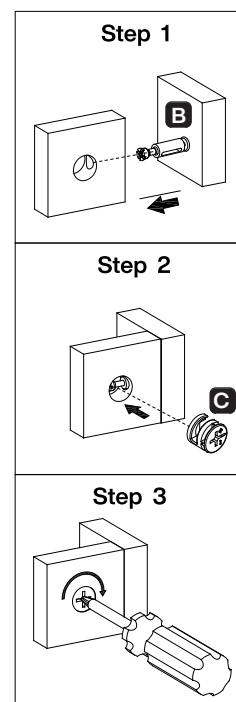

10

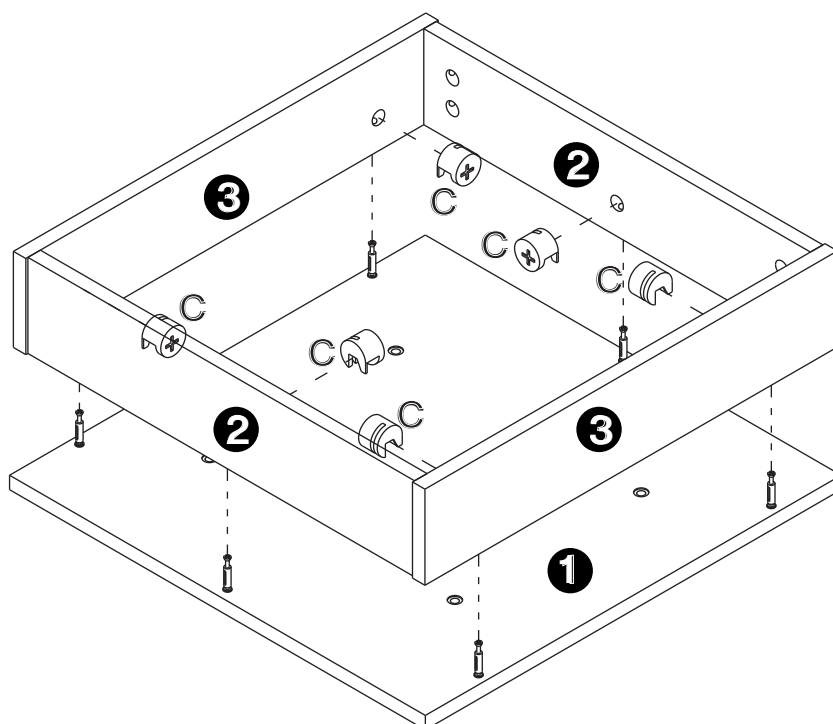



C
 Ø15mm
6 pcs

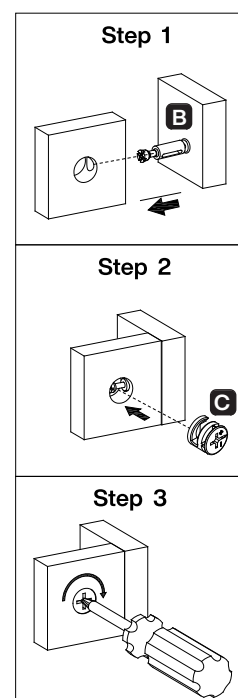

11

A

M6×12mm
4 pcs

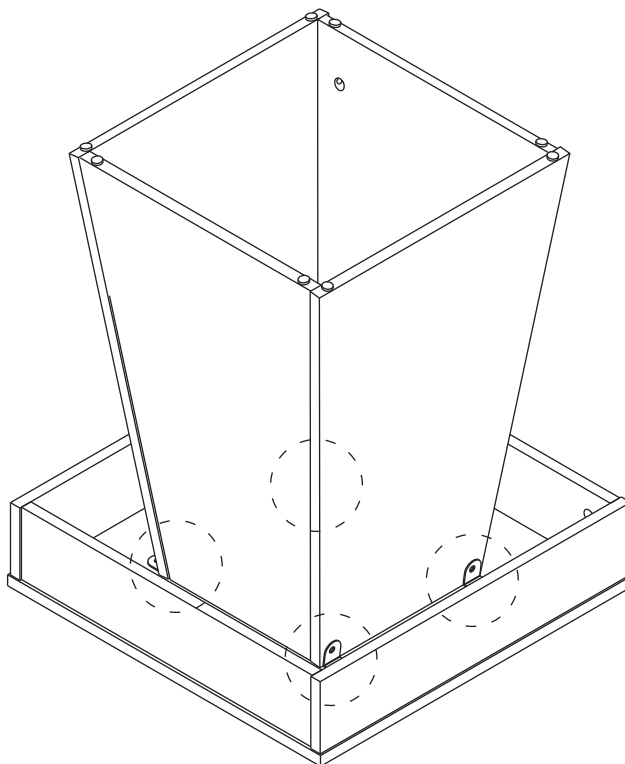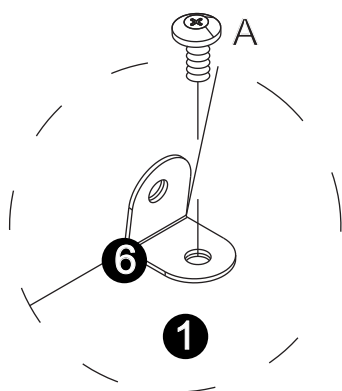

Thank you for your support!

