


Assembly Instructions

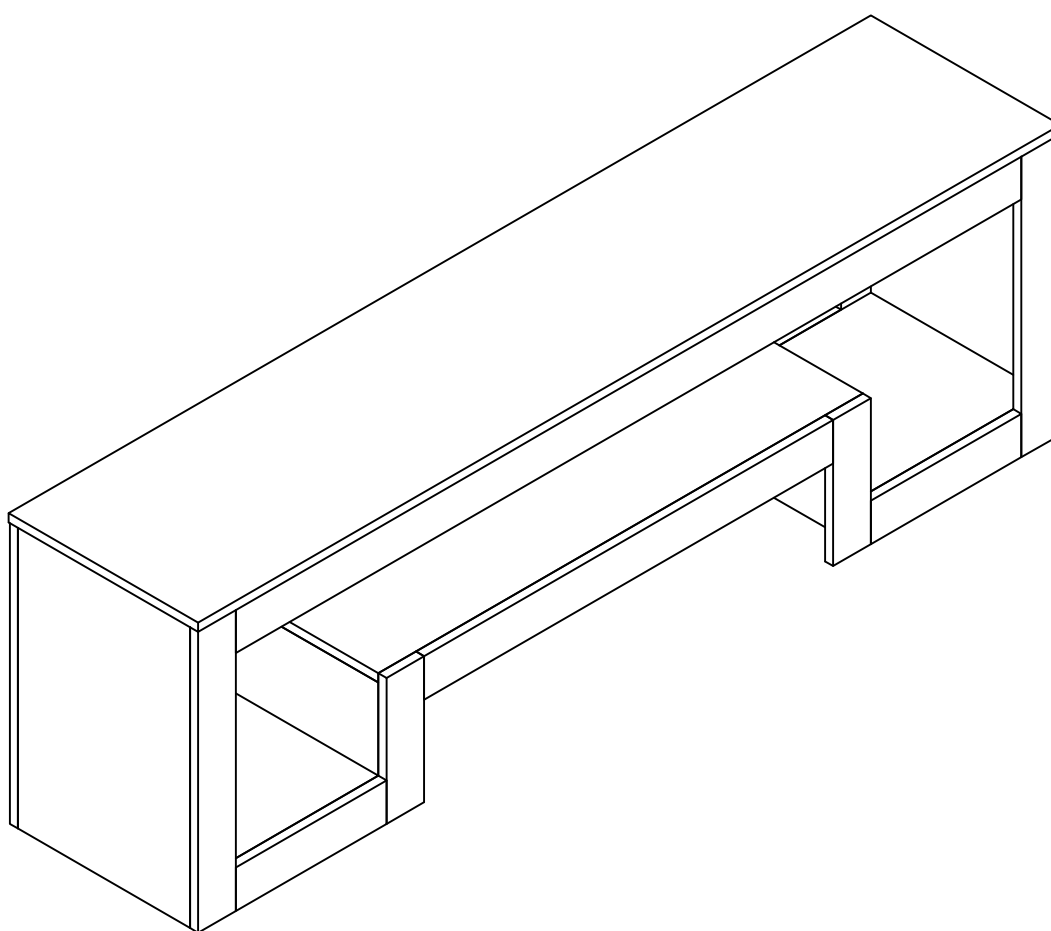


Television Stand

Model No.
HOGA-RY0262/ HOGA-RY0383
HOGA-RY0334

Contact Us




We're here to help you.

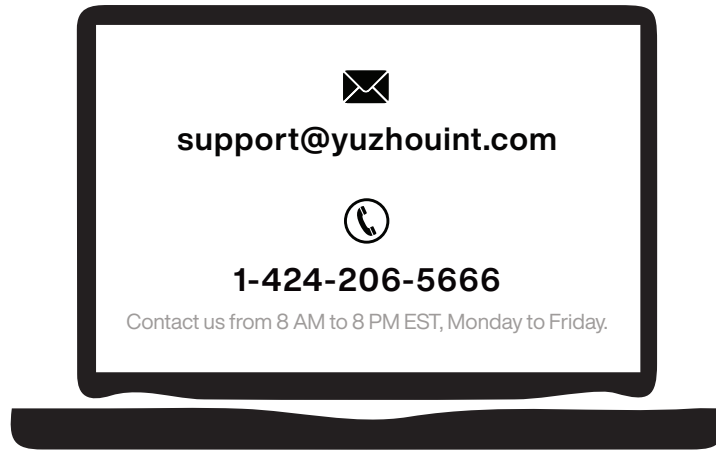

Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

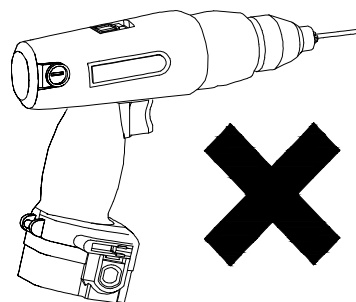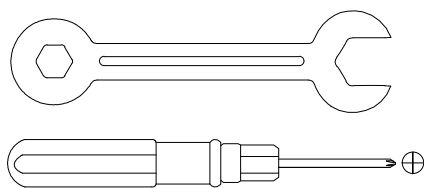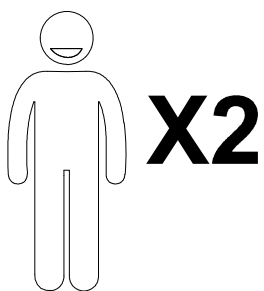



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

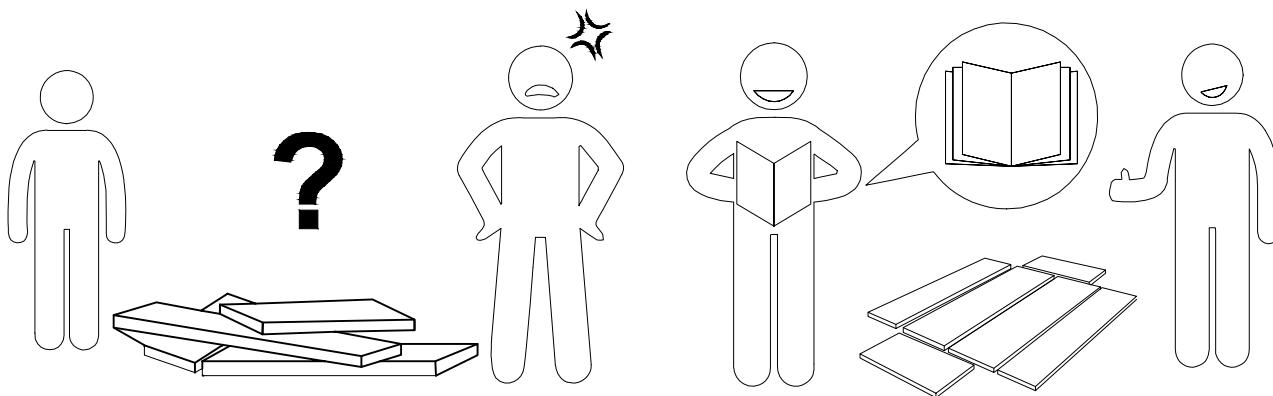

AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.















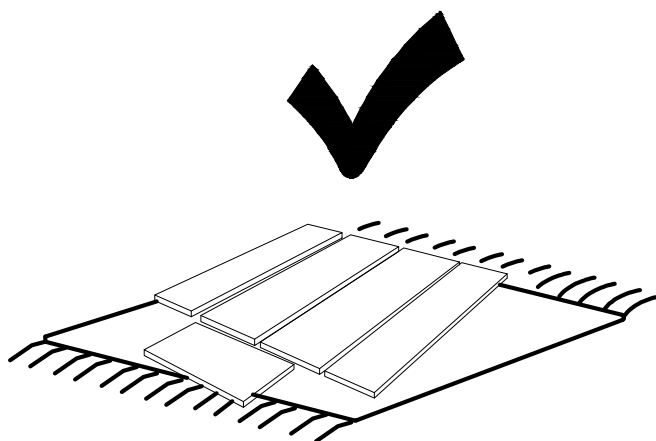
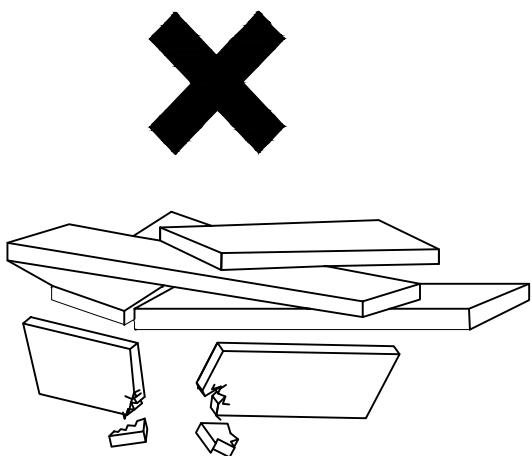


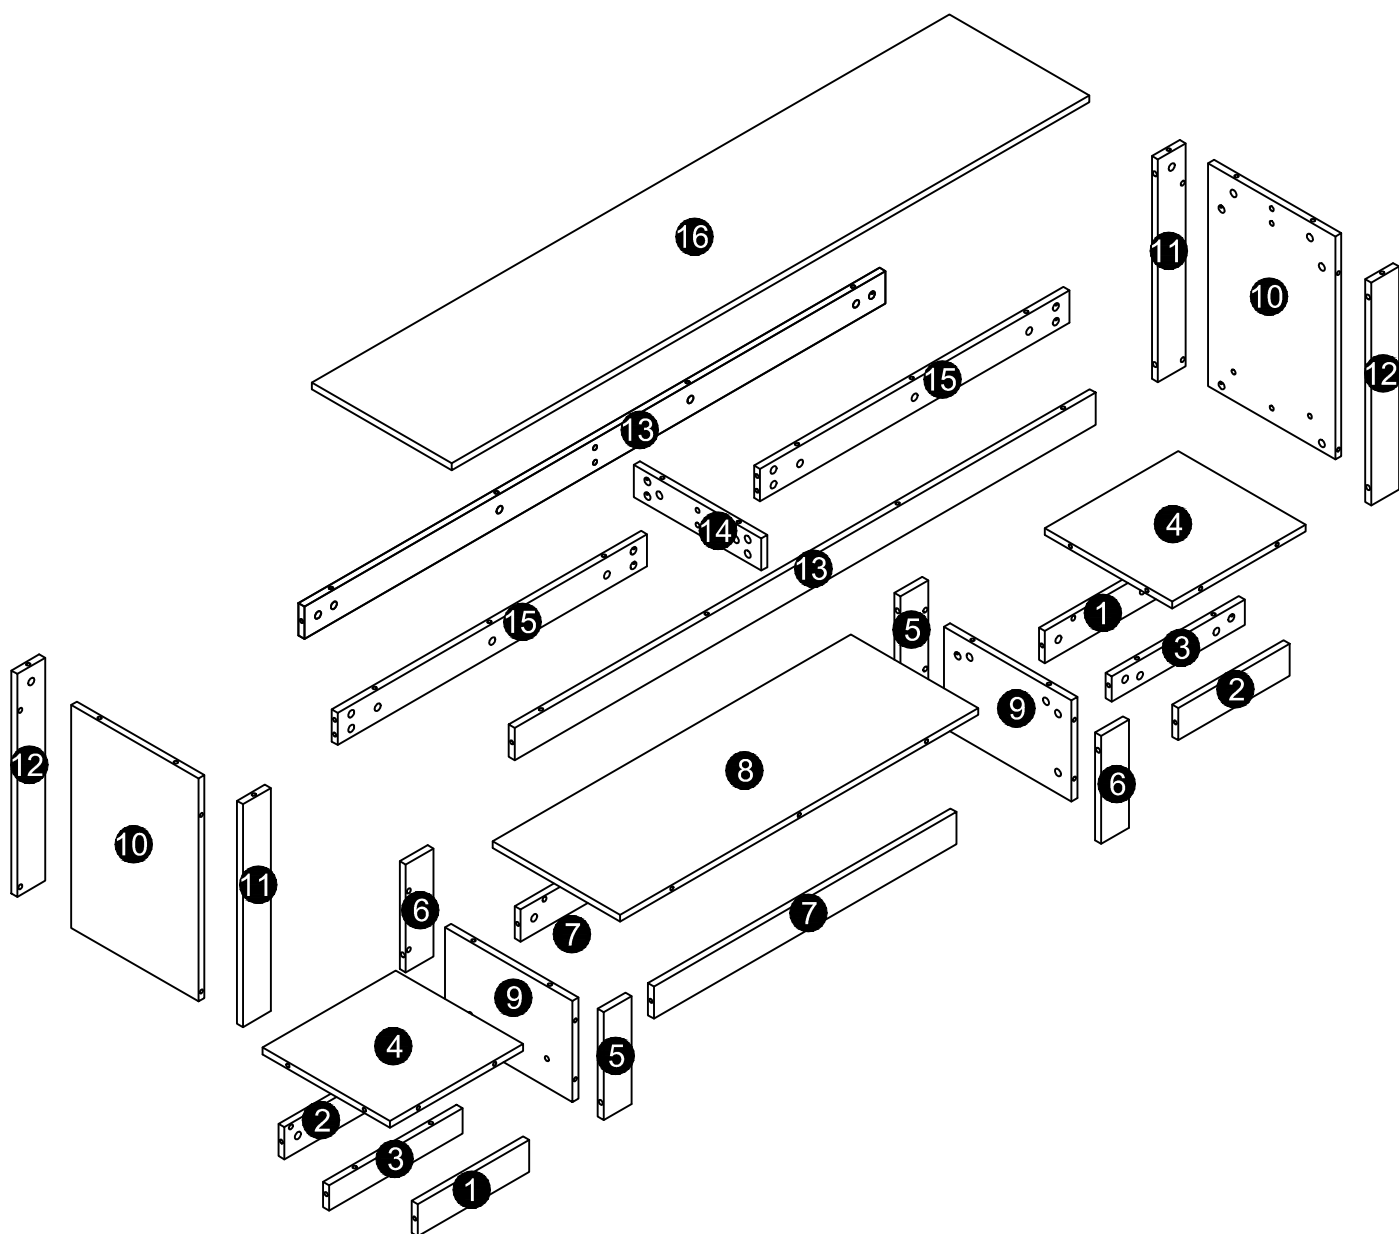




⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

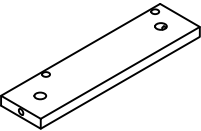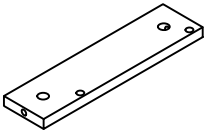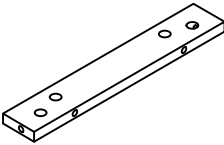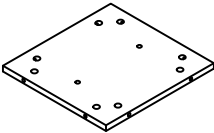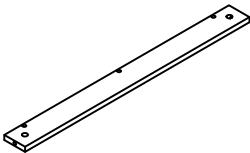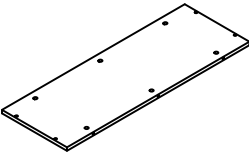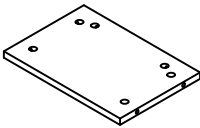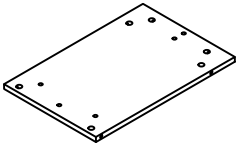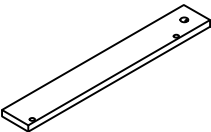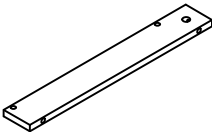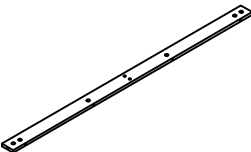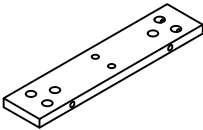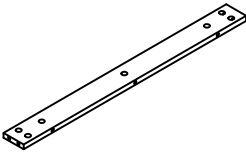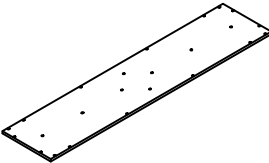
1  2 pcs	2  2 pcs	3  2 pcs	4  2 pcs	5  2 pcs
6  2 pcs	7  2 pcs	8  1 pc	9  2 pcs	10  2 pcs
11  2 pcs	12  2 pcs	13  2 pcs	14  1 pc	15  2 pcs
16  1 pc				

Hardware List

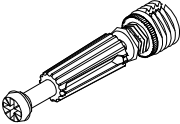
A	B	C	D	E	
 M6x40mm	 Ø15x12mm		 M6x35mm		
98pcs	102 pcs	12 pcs	4 pcs	1 pc	

Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

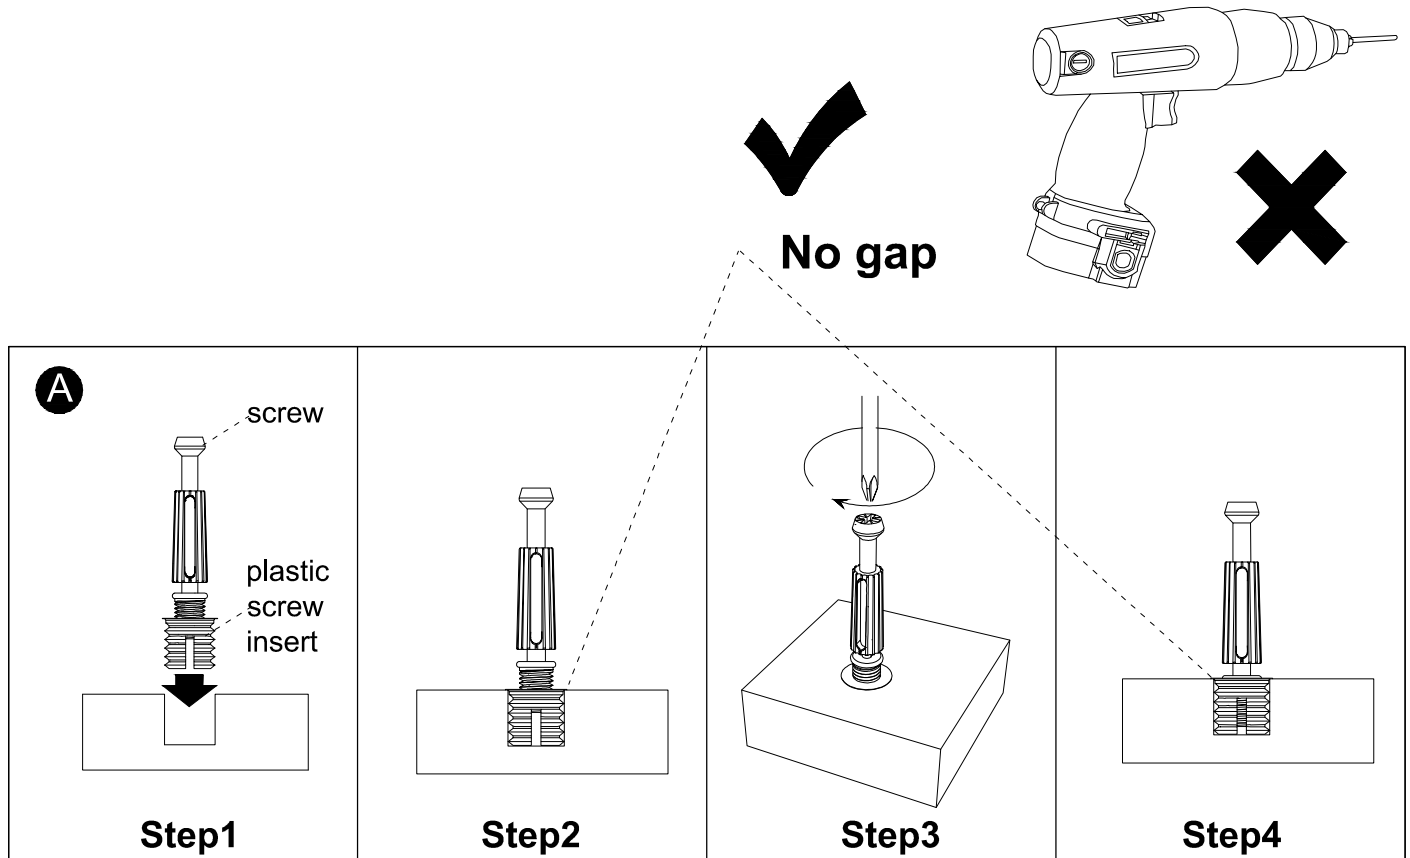


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

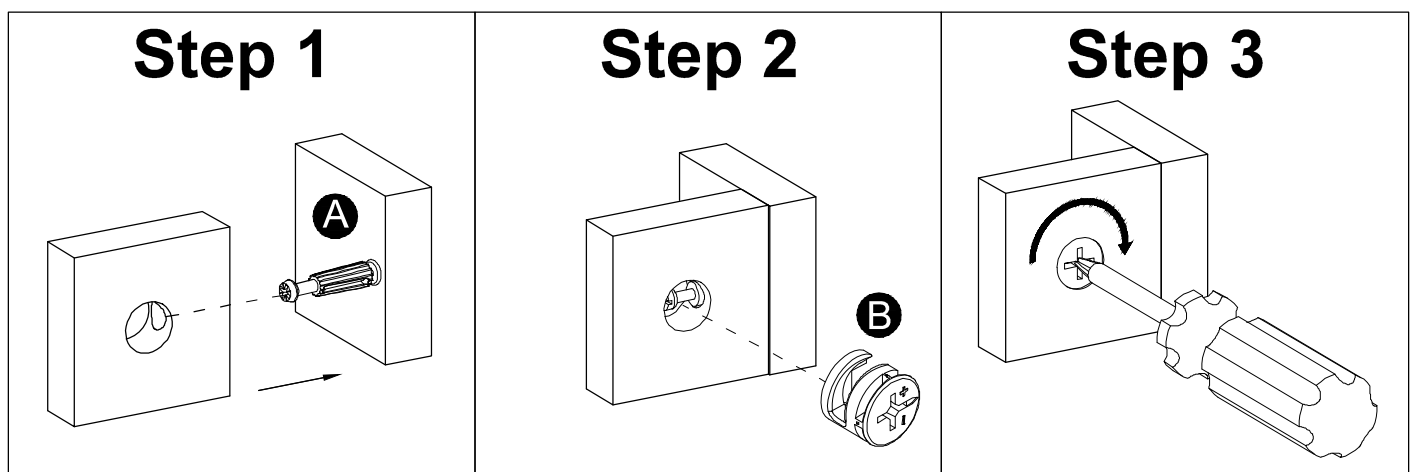

1

A

M6x40mm
4 pcs


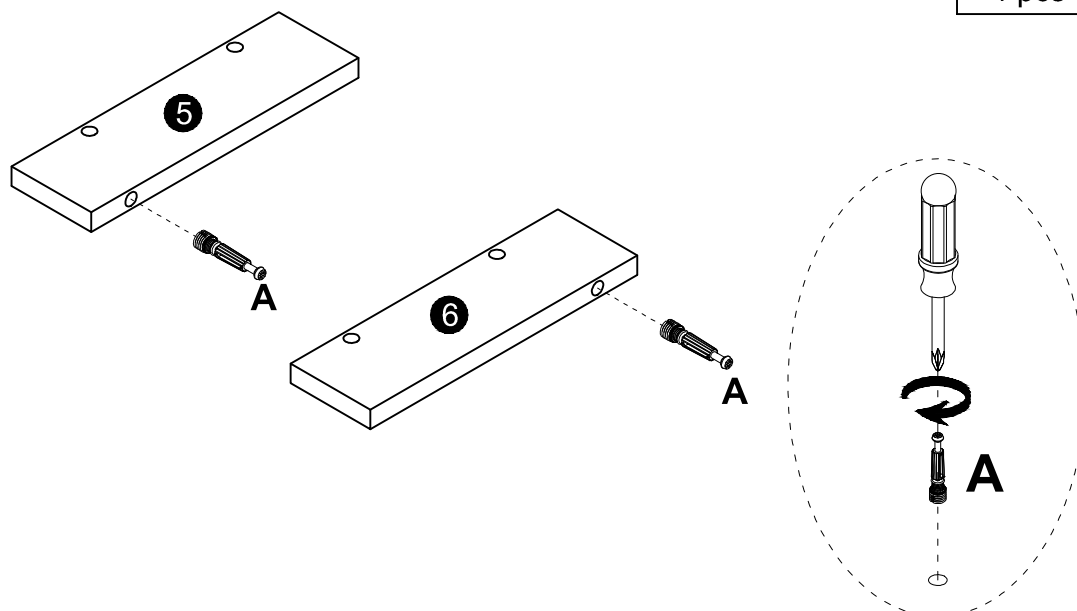


x2


2

B

Ø15x12mm
4 pcs

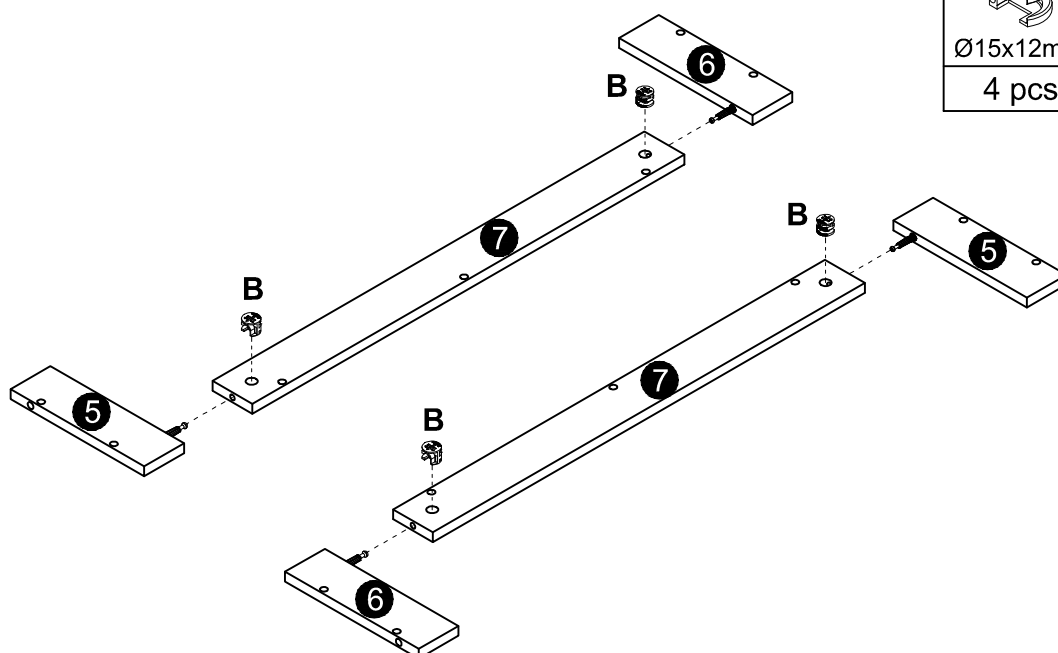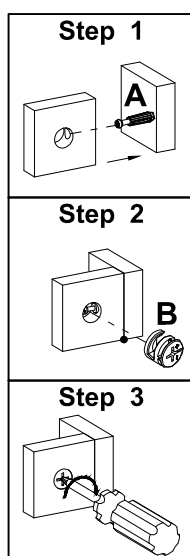


3

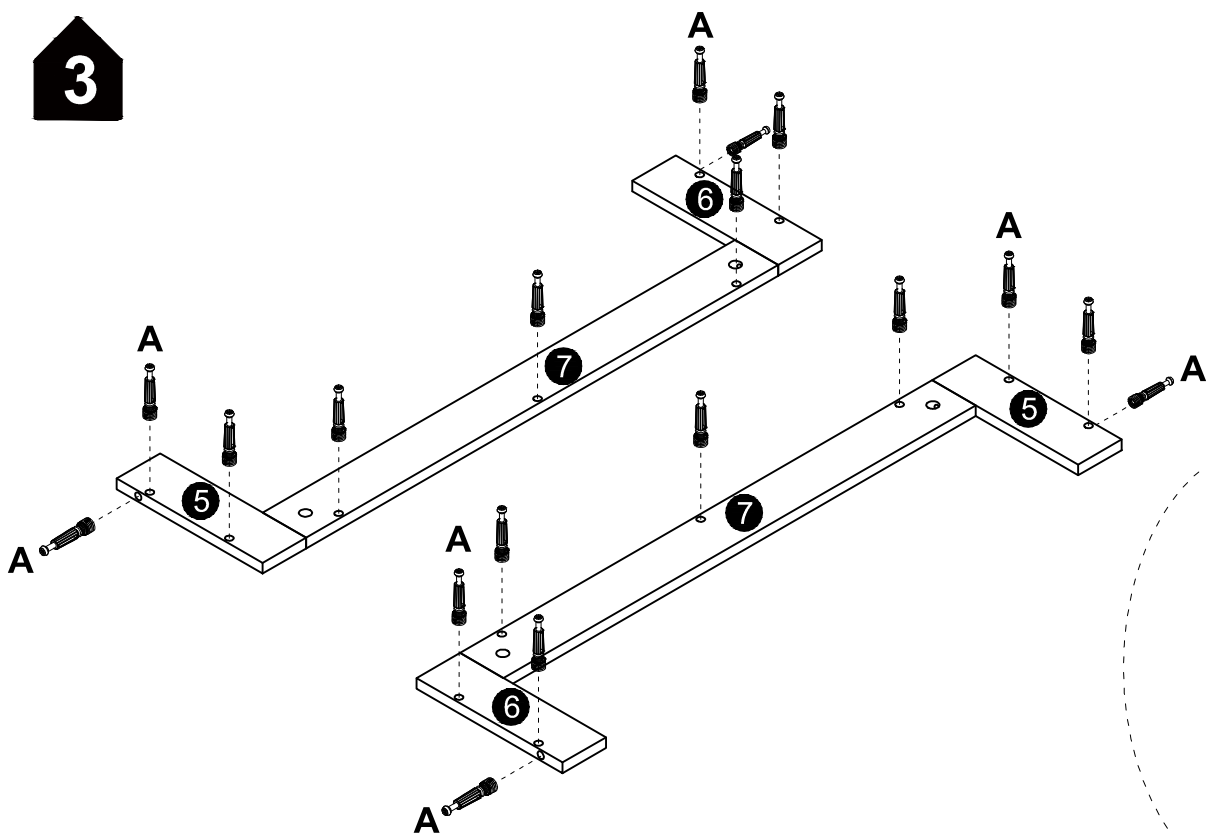

A

M6x40mm
18 pcs


4

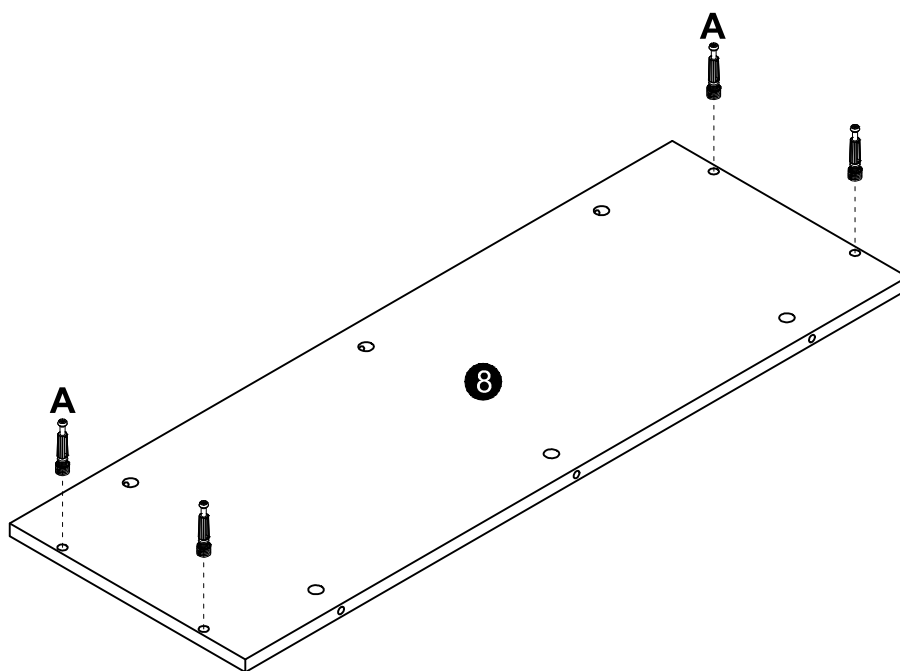

A


M6x40mm
4 pcs

5

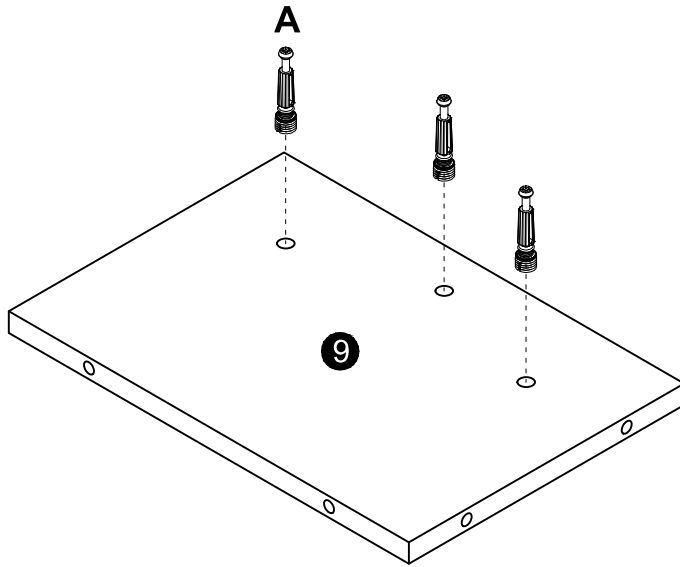



A

M6x40mm
6 pcs

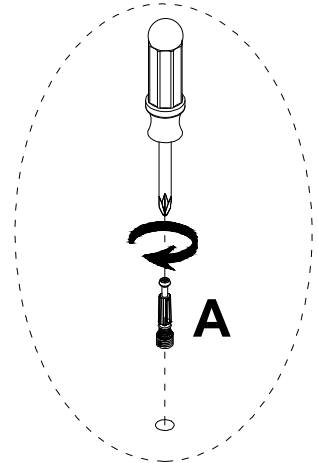

x2



6

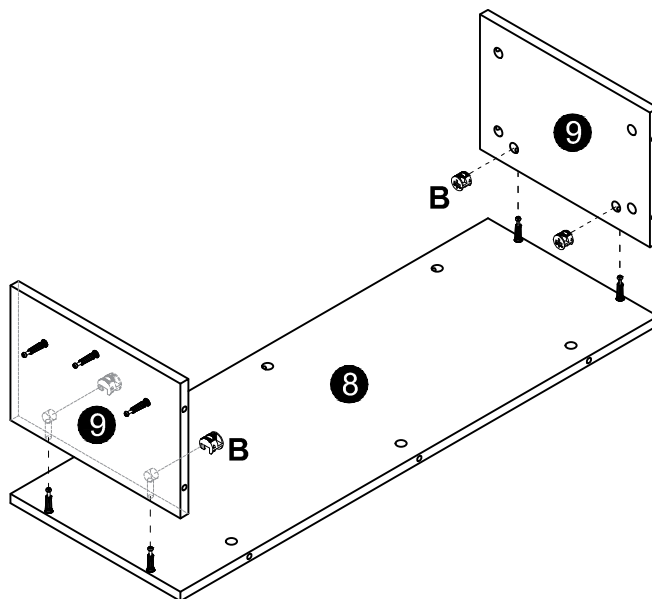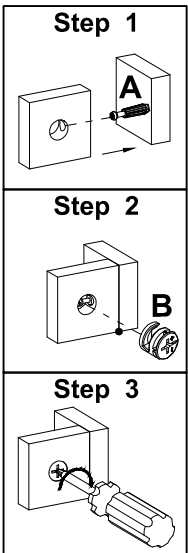

B

Ø15x12mm
4 pcs


7

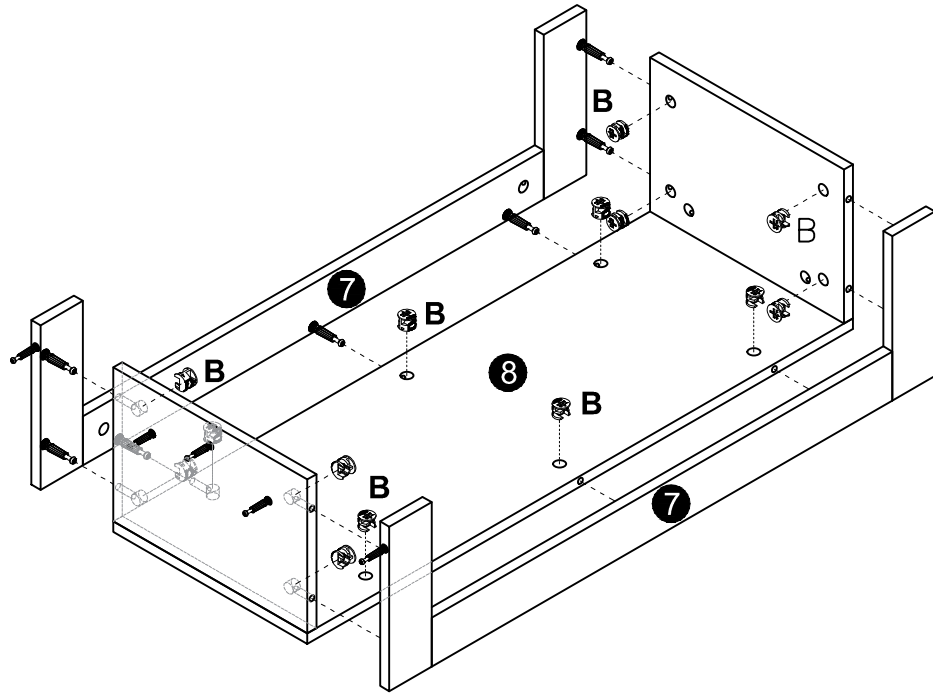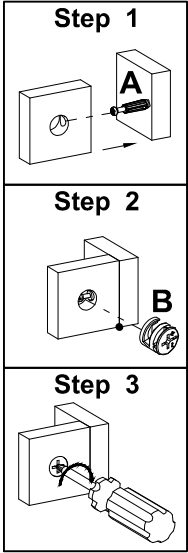

B


Ø15x12mm
14 pcs

8

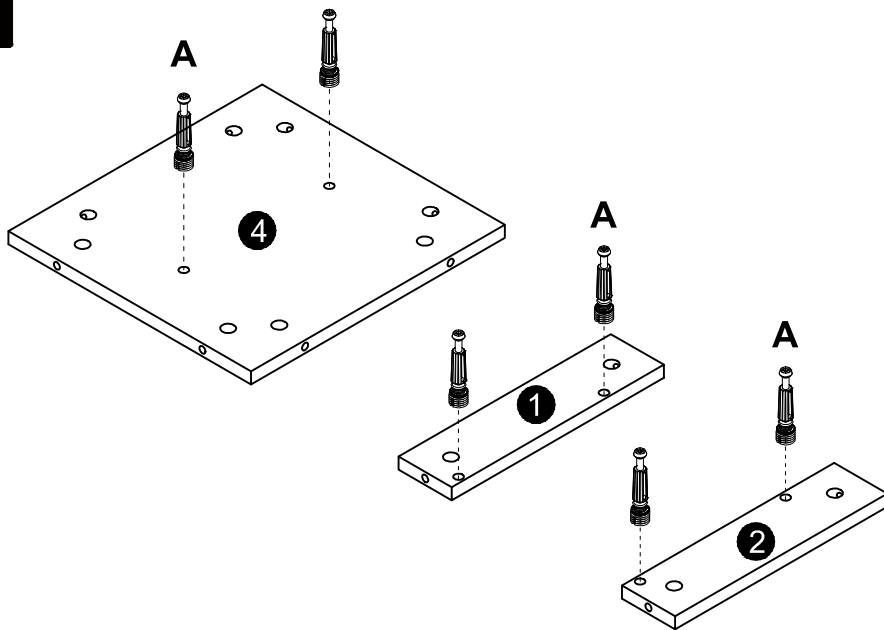

A

M6x40mm
12 pcs


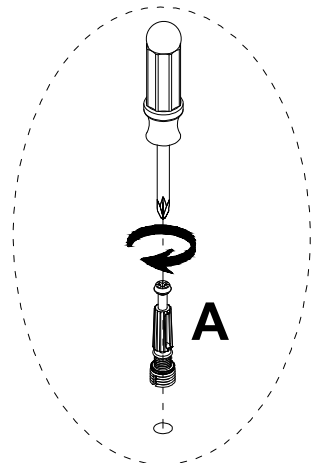


x2

9

B

Ø15x12mm
4 pcs

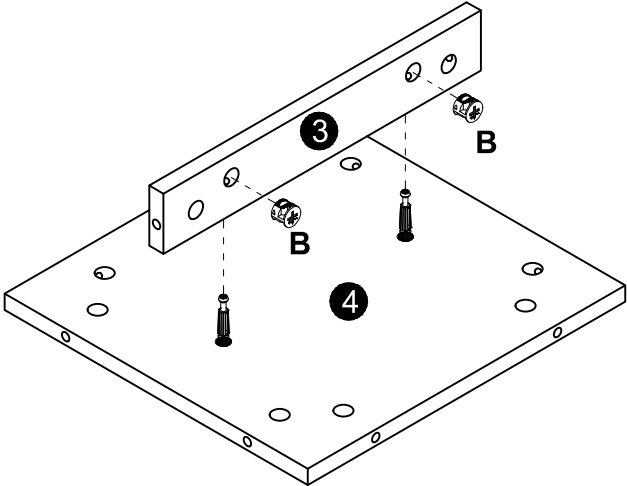
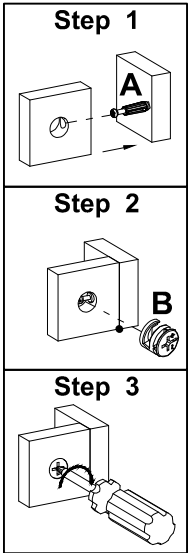


x2

10



B

Ø15x12mm
8 pcs

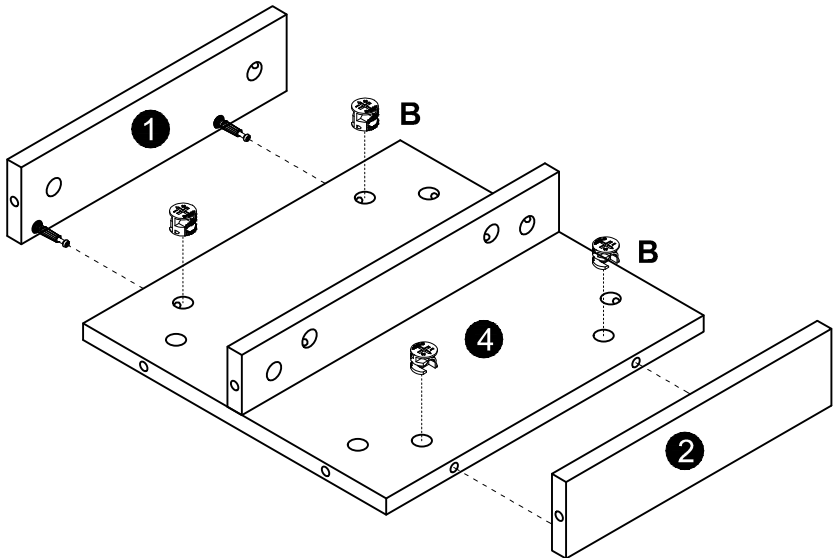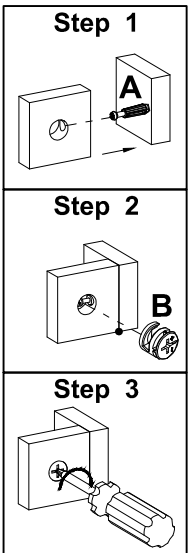

x2



11

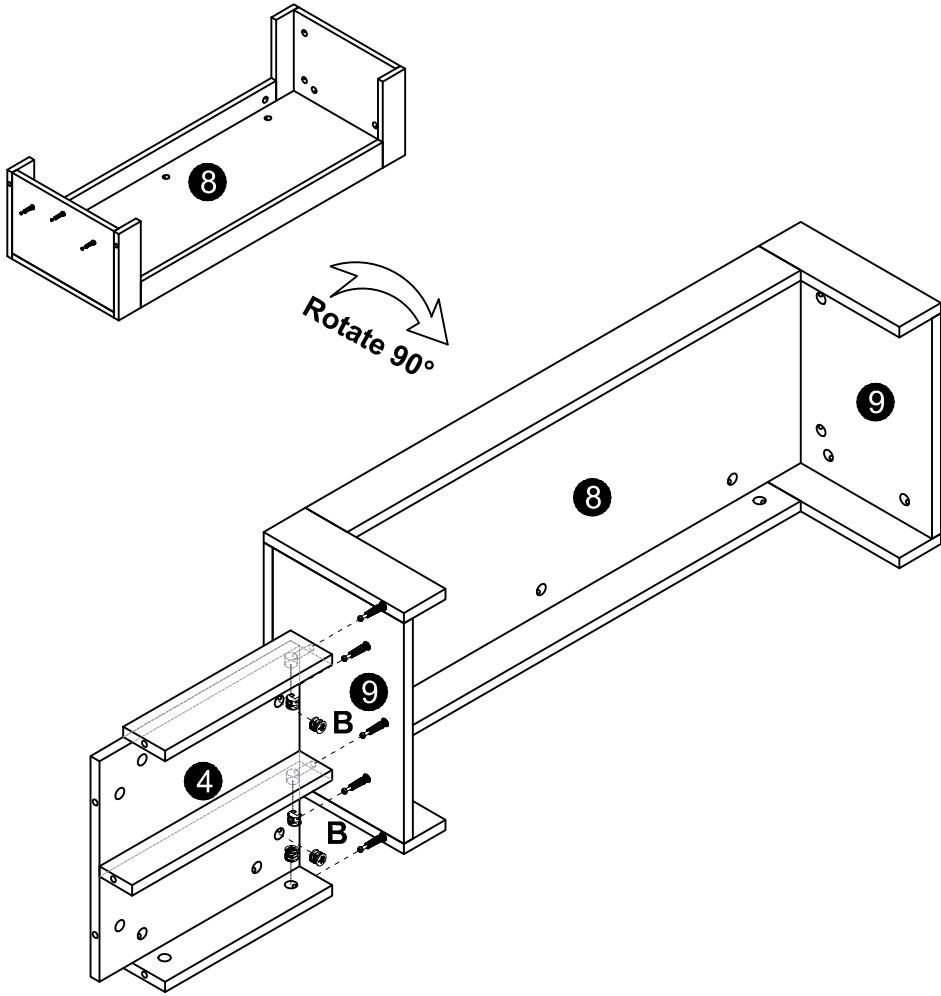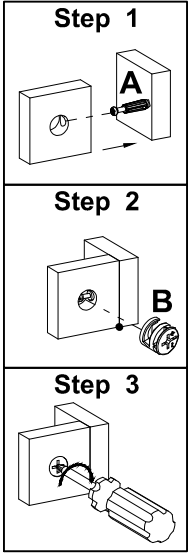

B

Ø15x12mm
5 pcs

12

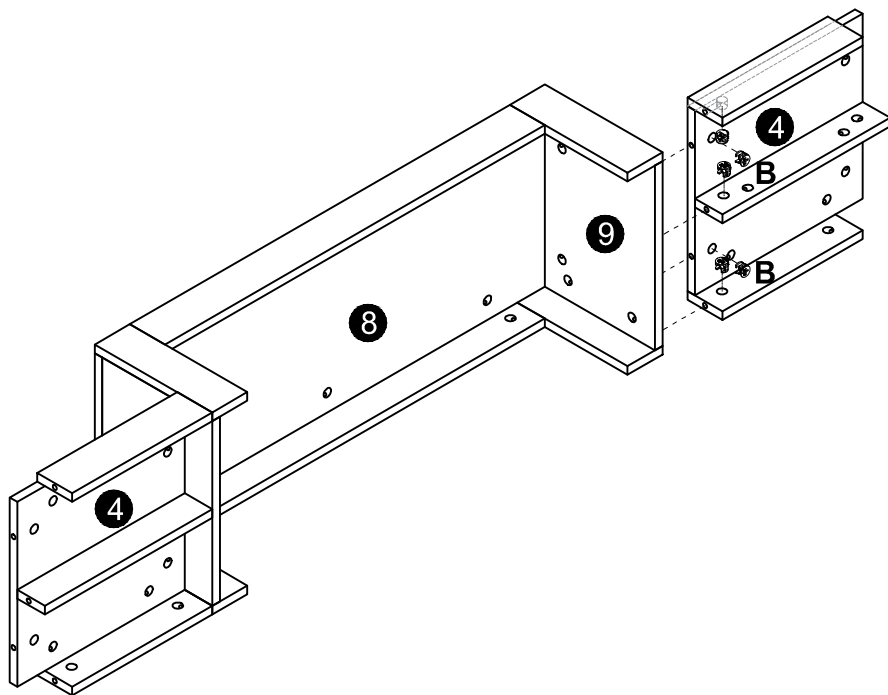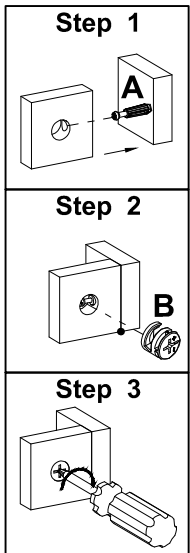



B

Ø15x12mm
5 pcs

13

A

M6x40mm
4 pcs

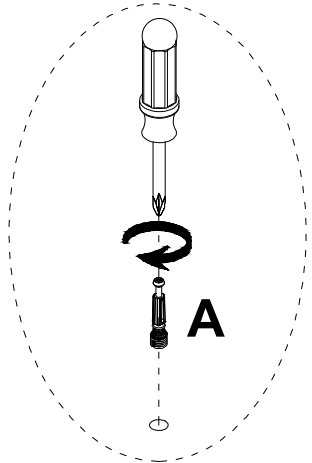
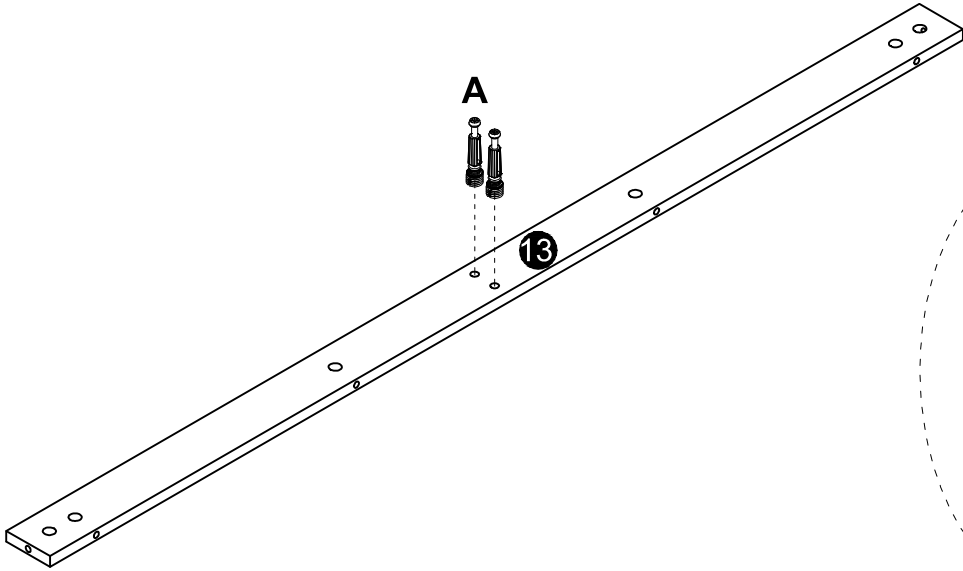


x2



14

D

M6x40mm
4pcs

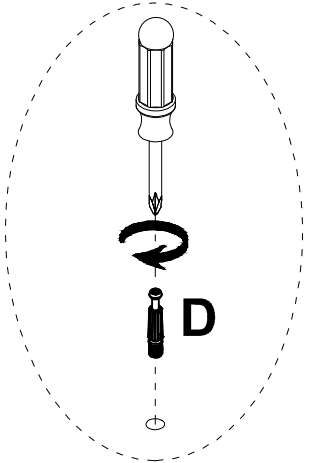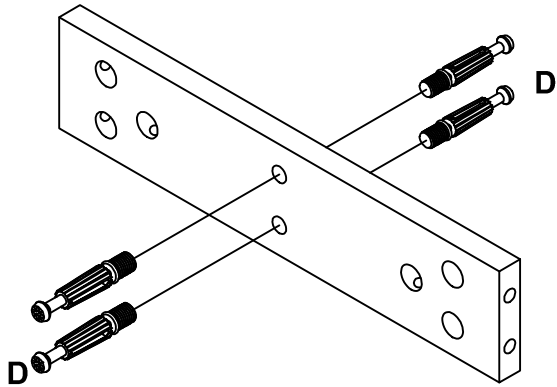



15

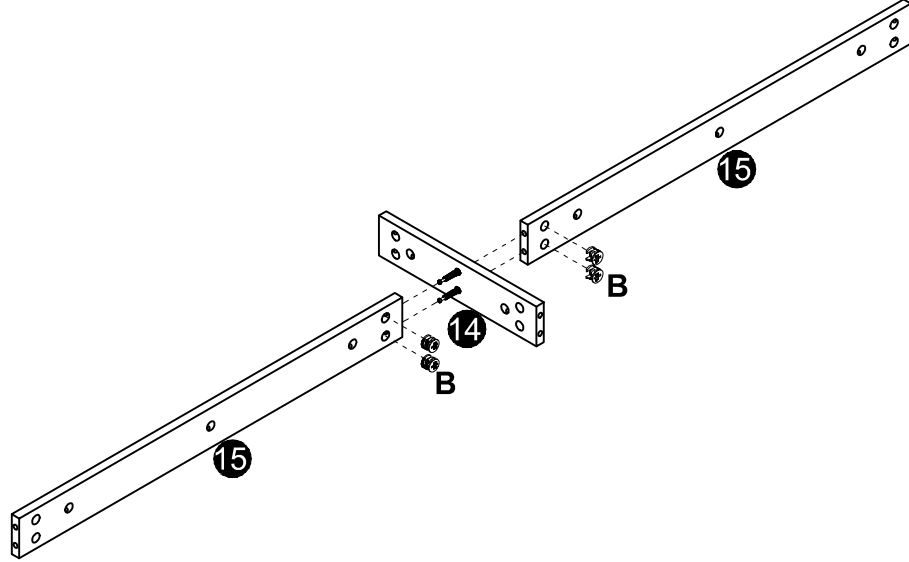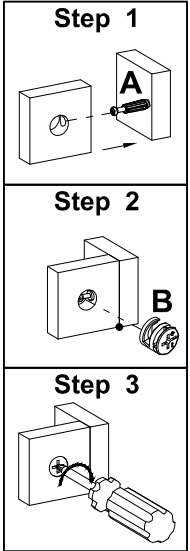

B

Ø15x12mm
4 pcs

16

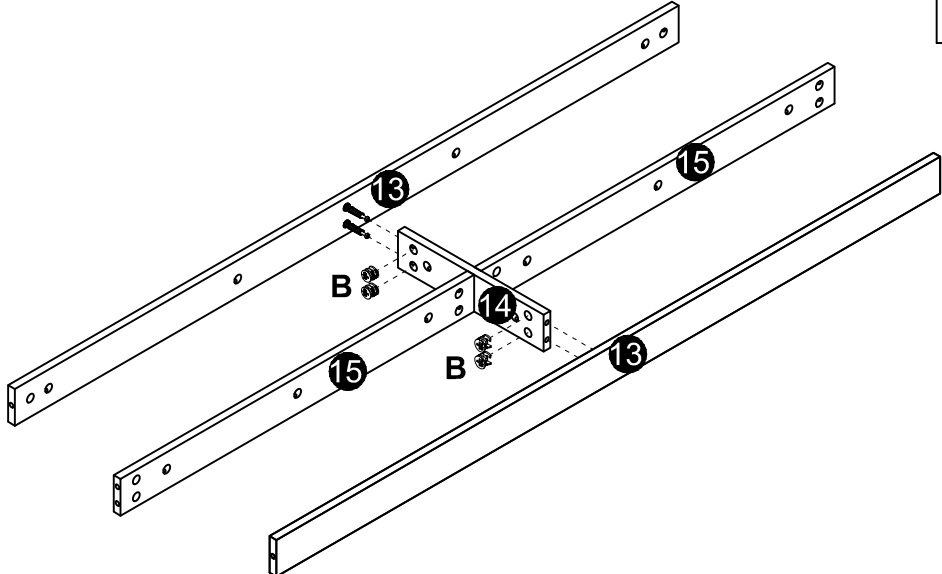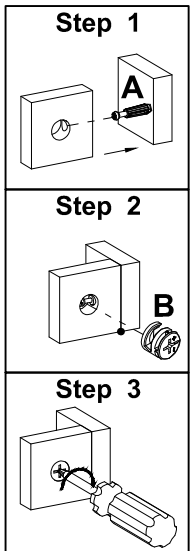



B

Ø15x12mm
4 pcs

17

A

M6x40mm
8 pcs

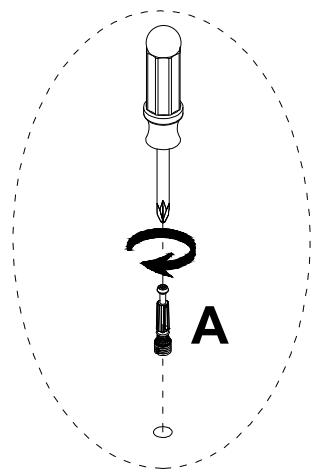
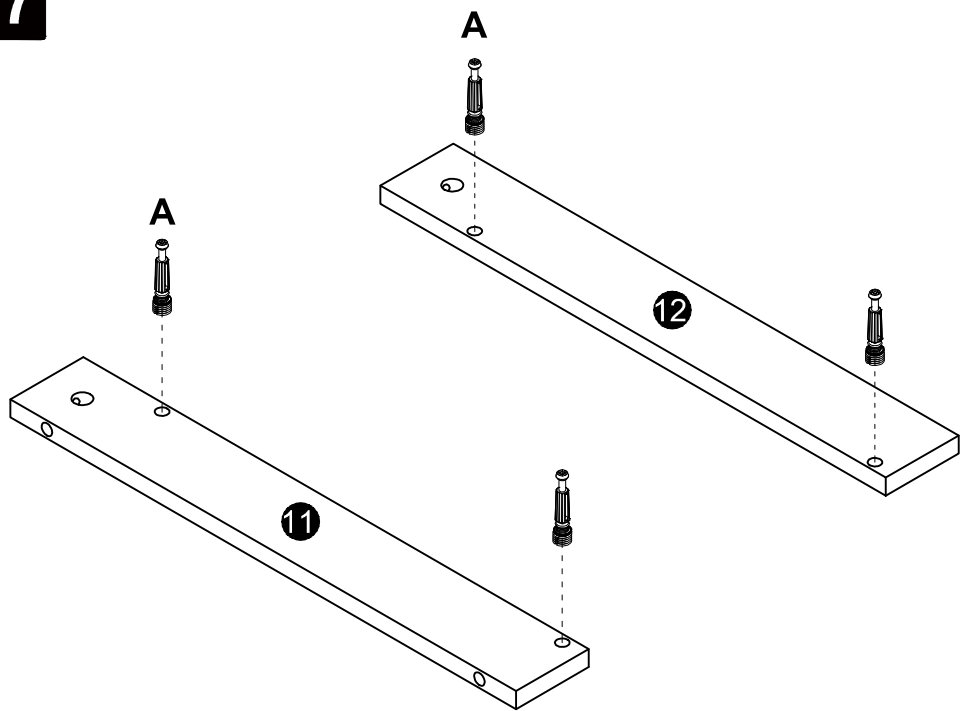


x2

18


B

Ø15x12mm
8 pcs

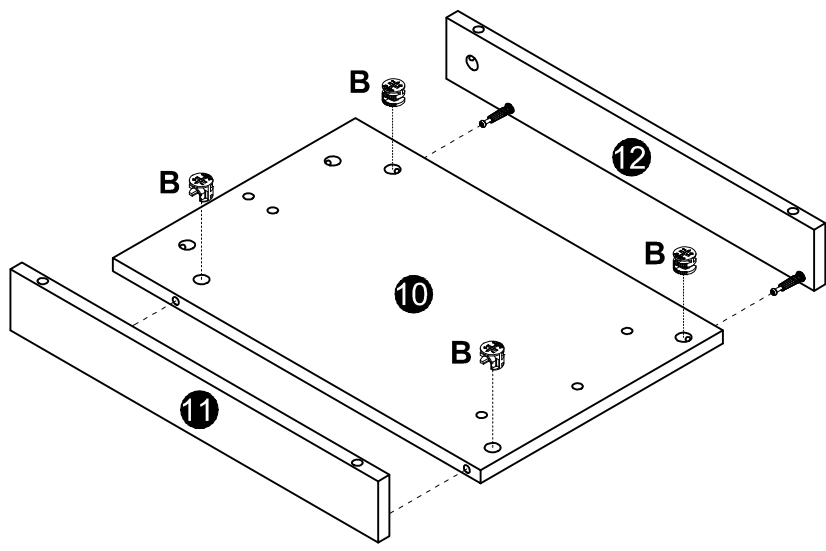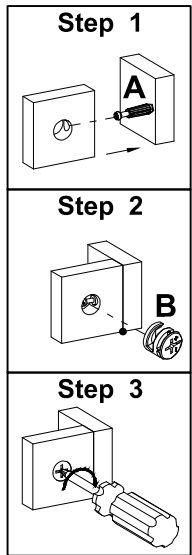


x2

19

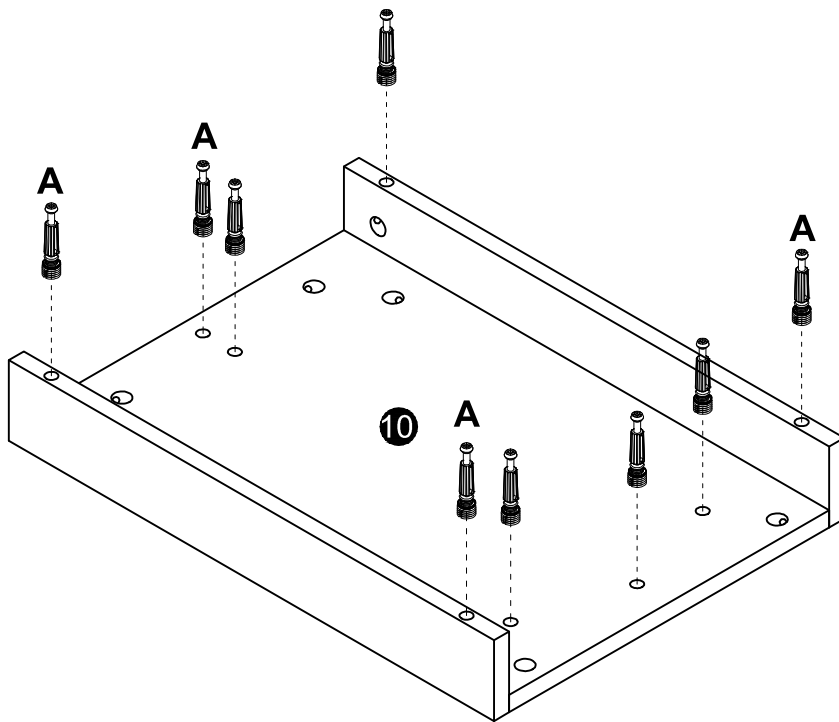



A

M6x40mm
18 pcs

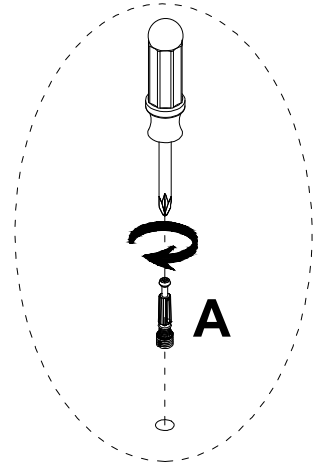

x2



20

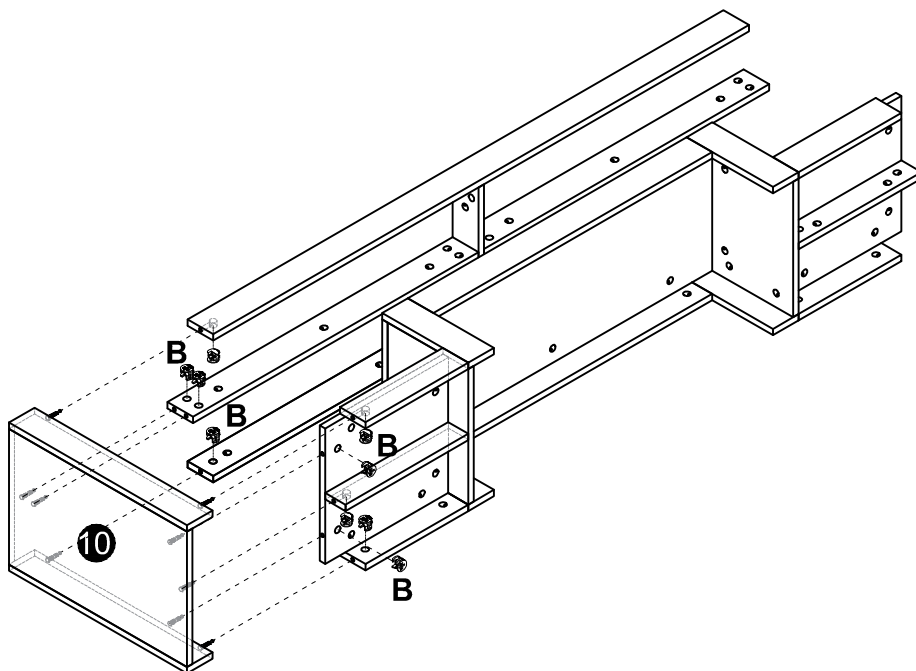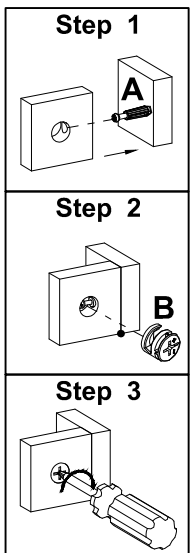

B

Ø15x12mm
9 pcs


21

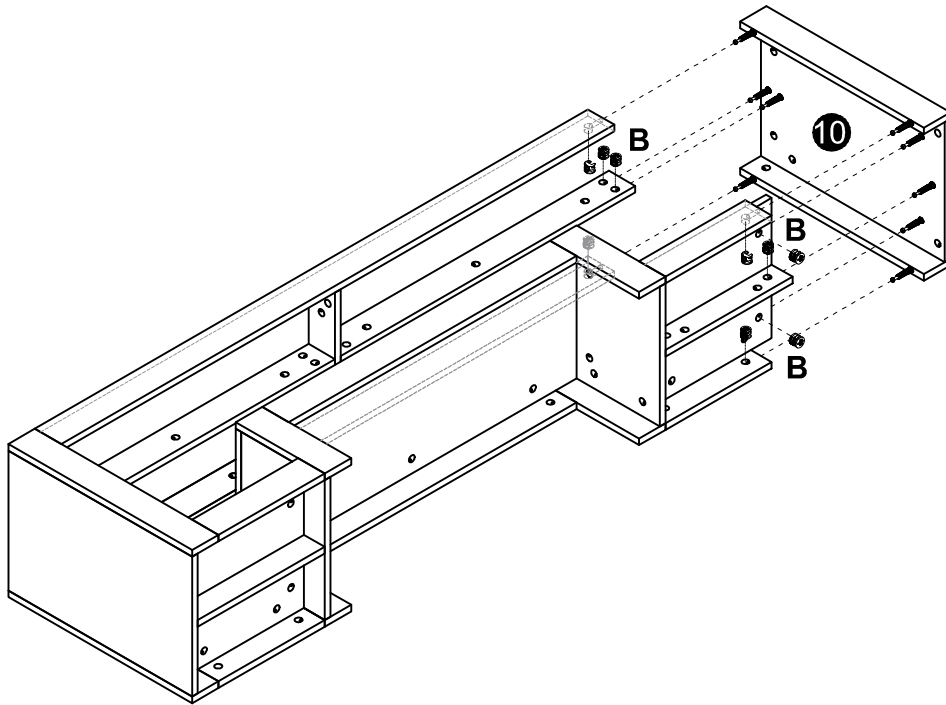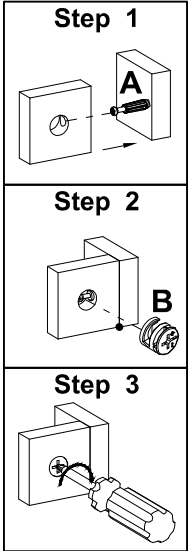

B


Ø15x12mm
9 pcs

22



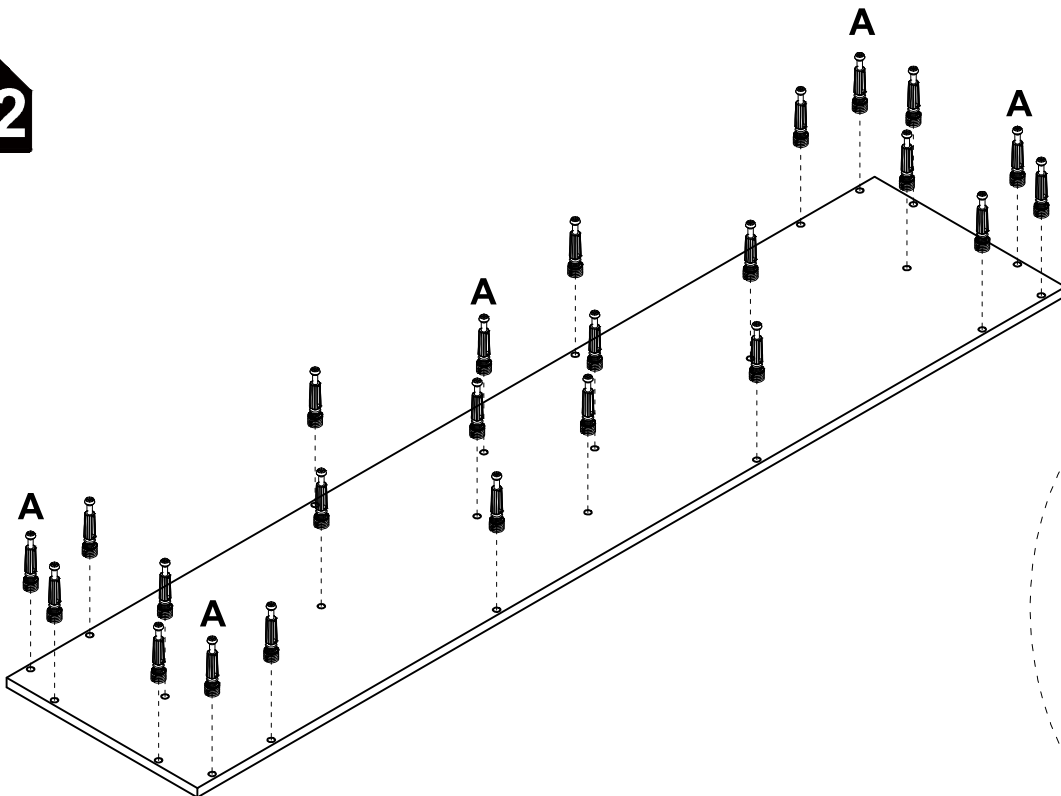


A


M6x40mm
24 pcs

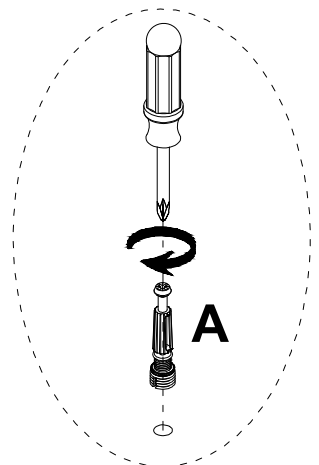



23

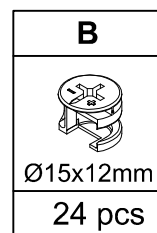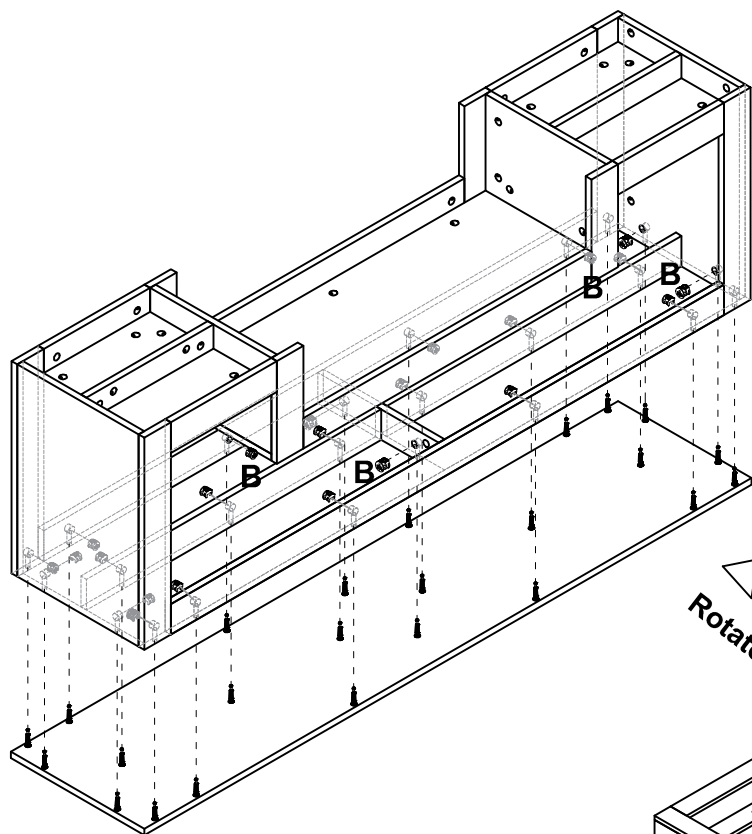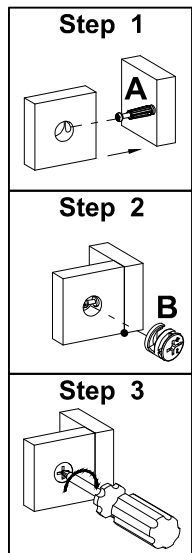

24

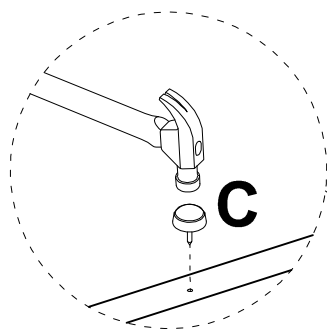

⚠ Caution! Tap lightly

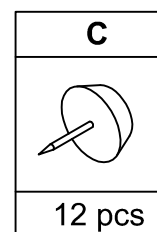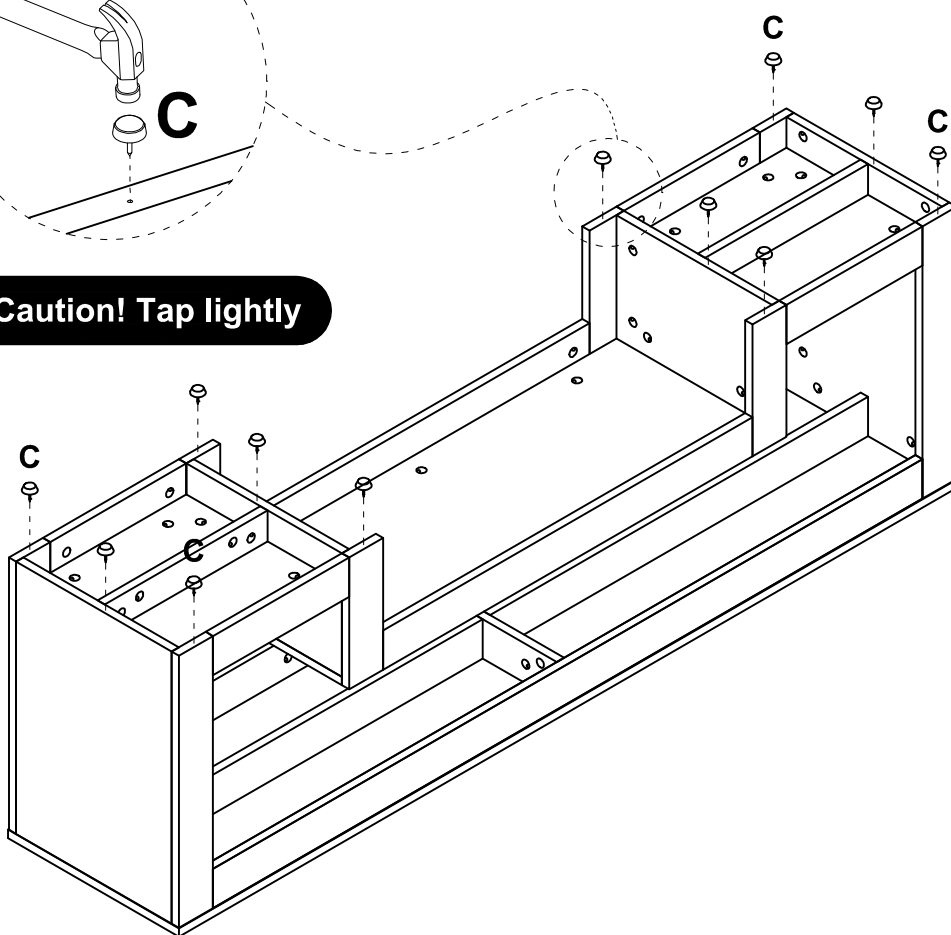

Thank you for your support !

