


Assembly Instructions

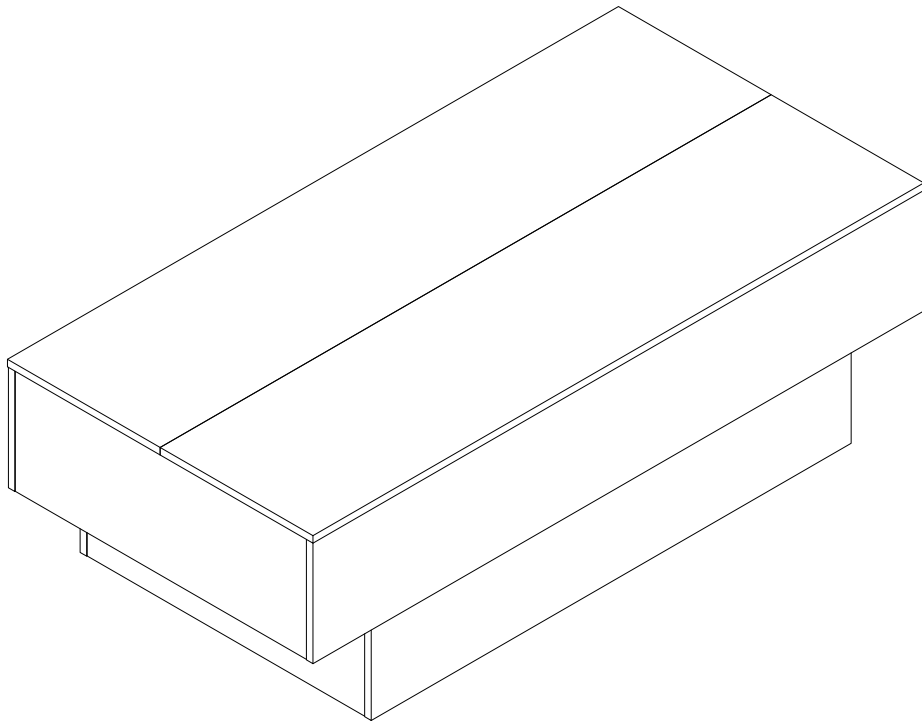

Coffee Table

Model No.
HOGA-RY0415

EN - Contact us. We're here to help you.



1-424-206-5666

US - 8:00 AM to 8:00 PM EST, Monday to Friday.

GB - 1:00 PM to 1:00 AM GMT, Monday to Friday.



support@yuzhouint.com





EN - We prioritize your satisfaction. Any issues with your product like missing or damaged parts, please keep the package, take photos of the packaging and the product, and contact us quickly.

Warm Tips



EN


1. Carefully read and keep these instructions for later.
2. Before assembling, ensure all parts and accessories are there.
3. Assemble on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten the screws until everything is correctly in place.

EN - We recommend using hand tools for assembly.
If an electric screwdriver is used, reduce its power to protect the product.

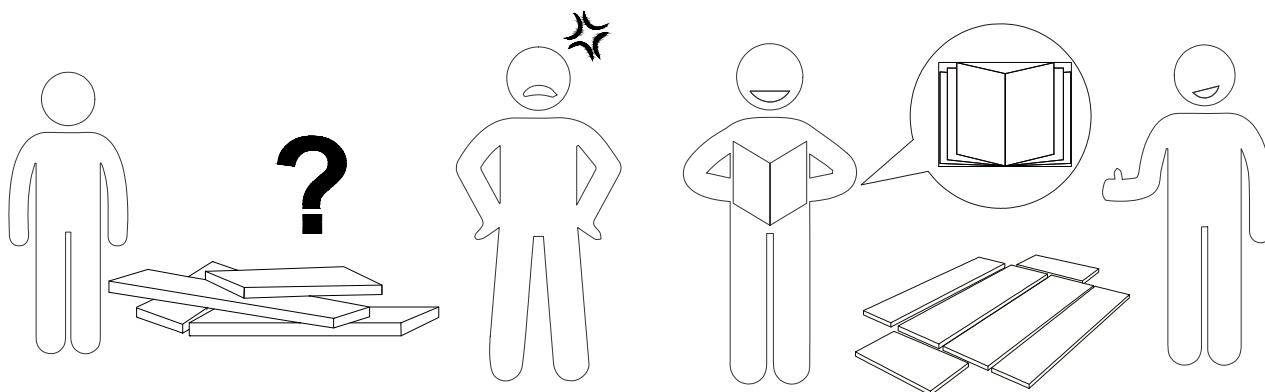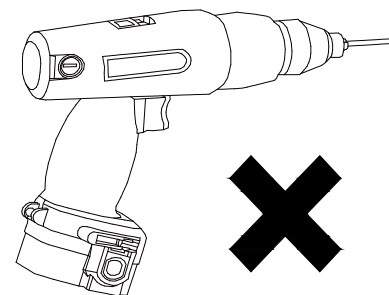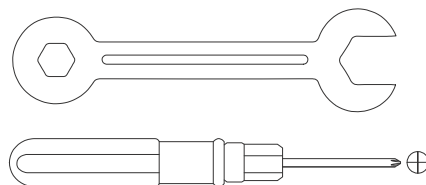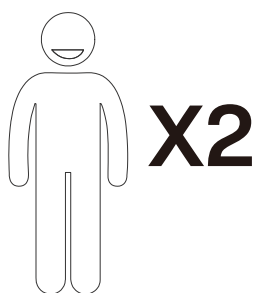

EN - In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.






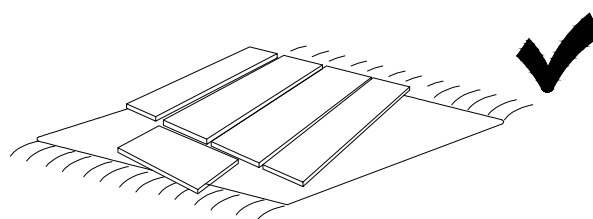
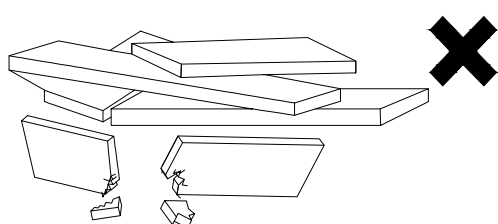


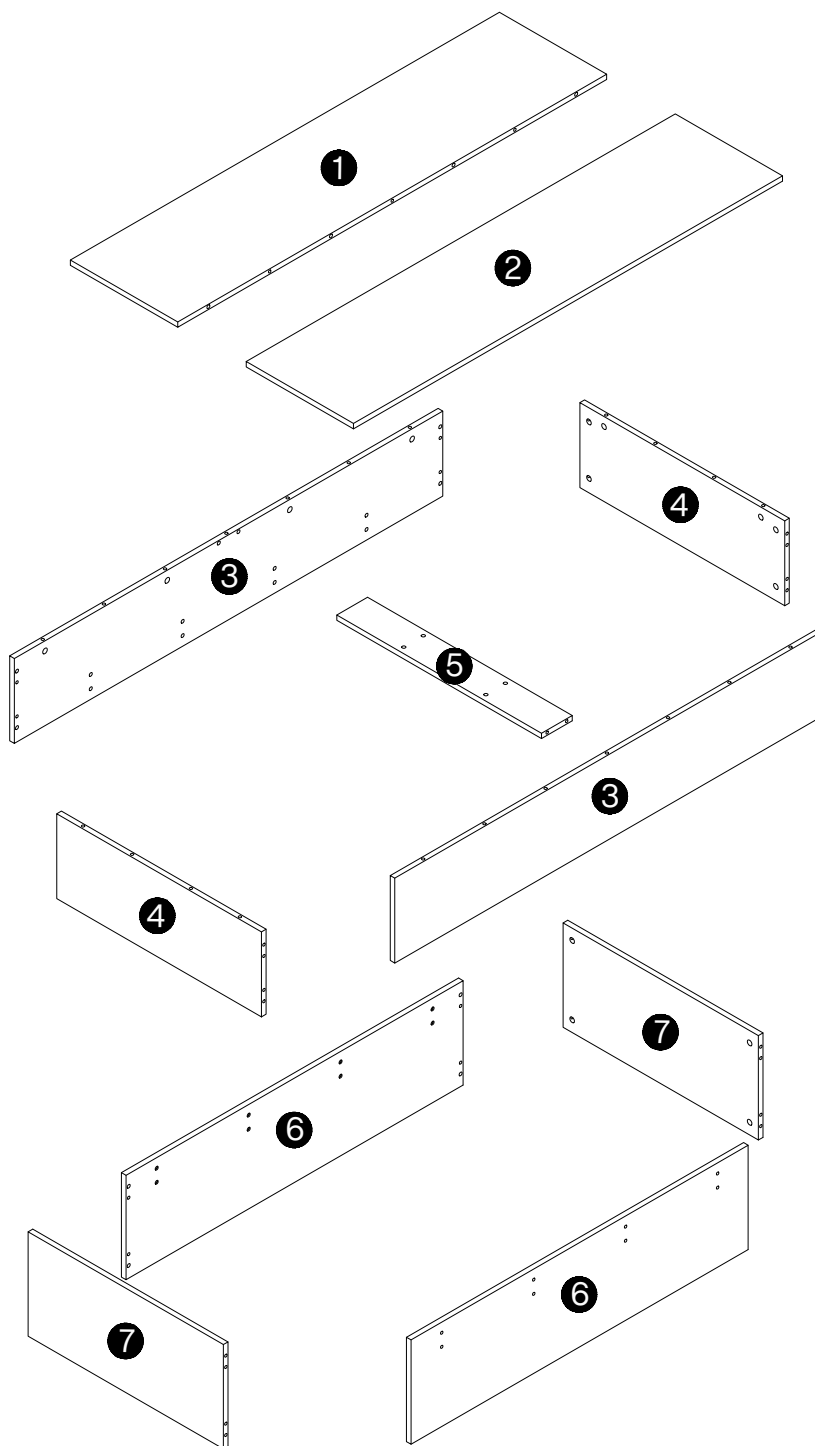




 **Caution**

EN - Check all parts. Most board parts are labeled on the edge.
Contact us for a free replacement if any are damaged or missing.

Parts List

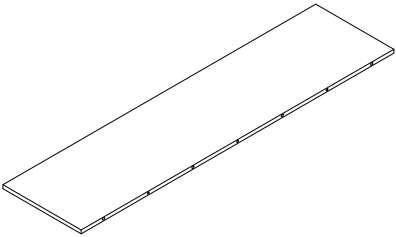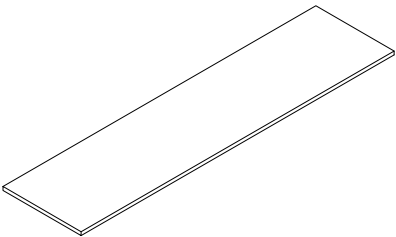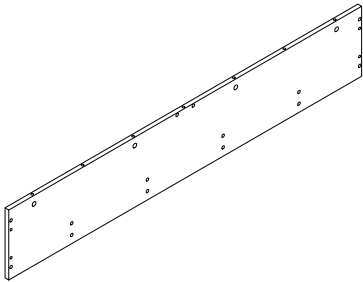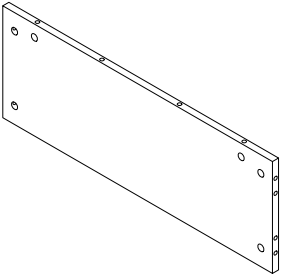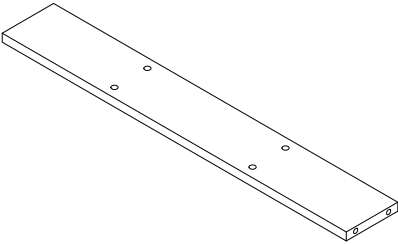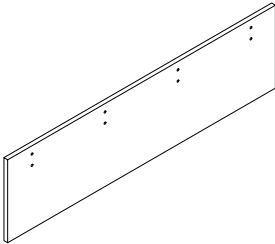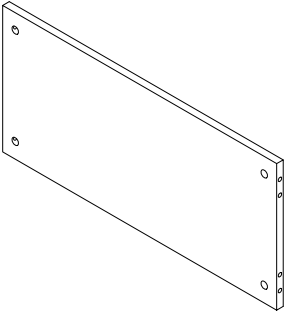1  1 pc	2  1 pc	3  2 pcs
4  2 pcs	5  1 pc	6  2 pcs
7  2 pcs		

Hardware List


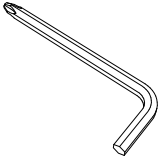
A	B	C	D	E
 Ø6X35 mm 36+2 pcs	 Ø15X12 mm 36+2 pcs	 Ø8X30 mm 29+2 pcs	 M6X25 mm 20+1 pcs	 1 pc
F	G			
 L100 mm 1 pc	 10+1 pcs			

EN - Install Plastic Insert and Connector Bolt

Step 1-2: Align the plastic insert with the mounting hole and press/tap it in until fully flush with the surface. If unable to press it in, loosen the bolt counterclockwise or completely remove the bolt from the plastic insert, then retry.

Step 3-4: After the plastic insert is pressed into place, tighten the bolt clockwise with a screwdriver until the metal threads are fully concealed.


EN - No gap

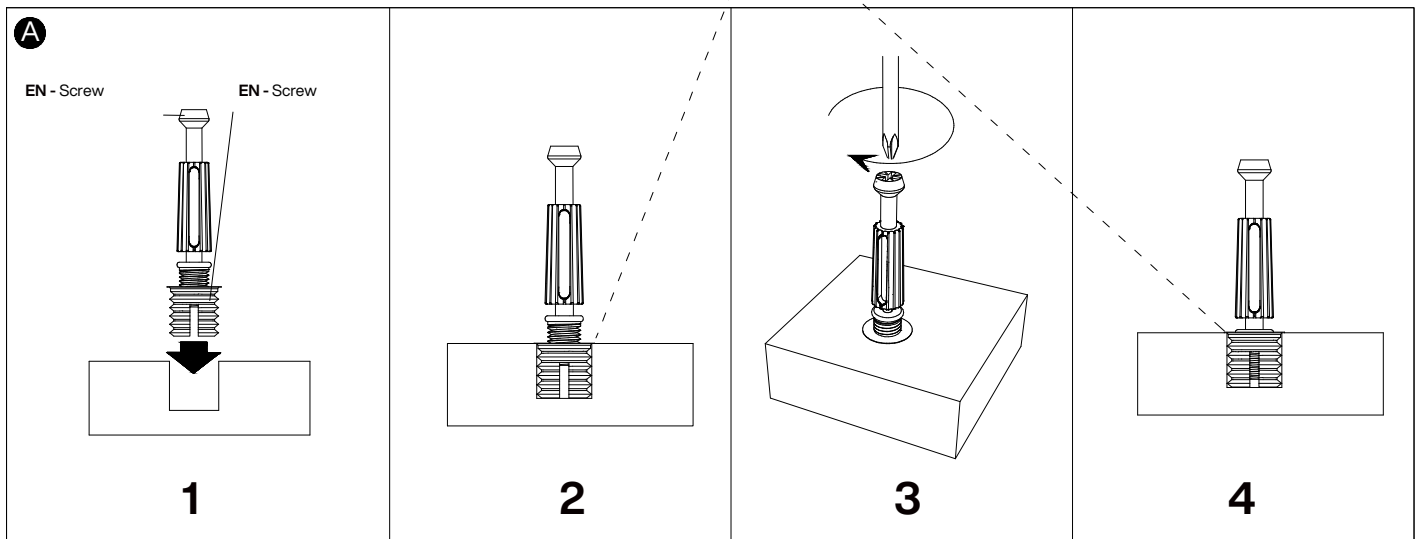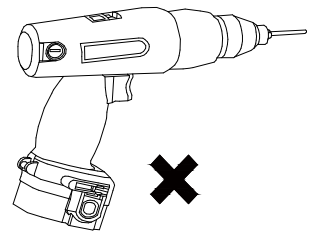



EN - Lock the Eccentric Cam

Step 1-2: Ensure the connector bolt is fully seated in the hole. Align the cam arrow with the bolt centerline.

Step 3: Rotate the cam head clockwise with a manual screwdriver until fully locked. Please do not use power tools – overtightening may strip components.


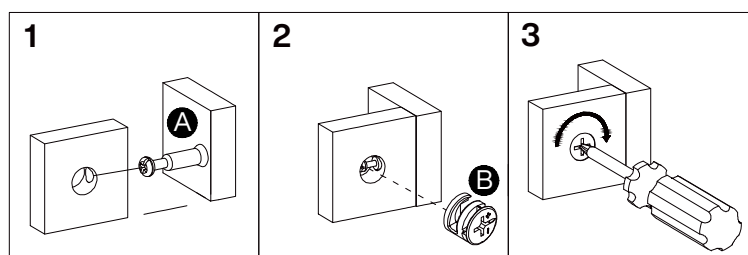


1

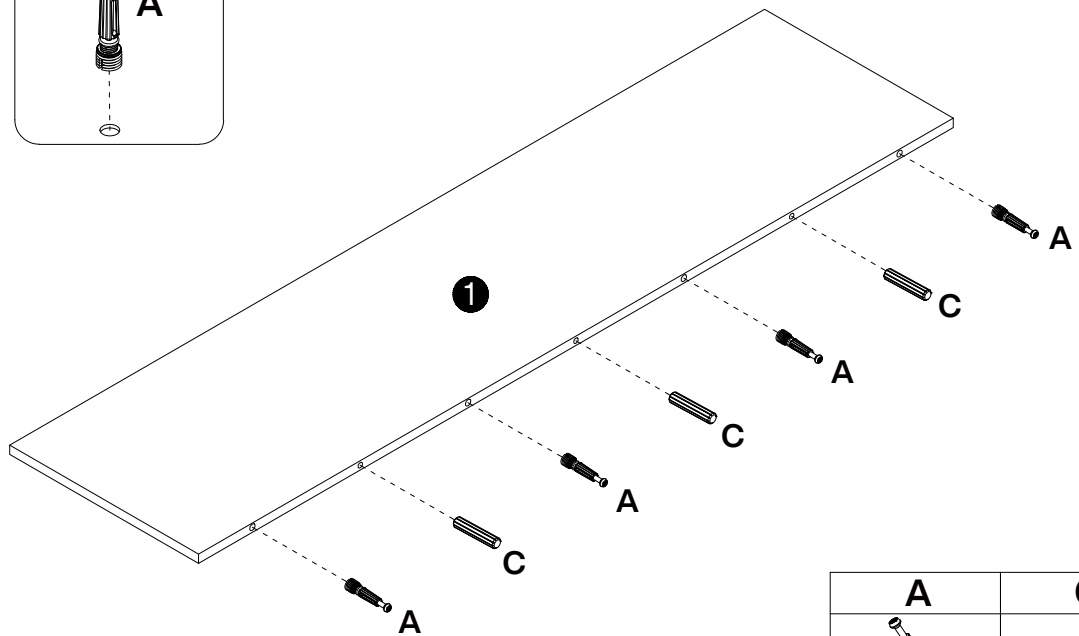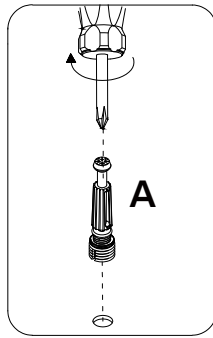

A	C
	
Ø6X35 mm 4 pcs	Ø8X30 mm 3 pcs


2

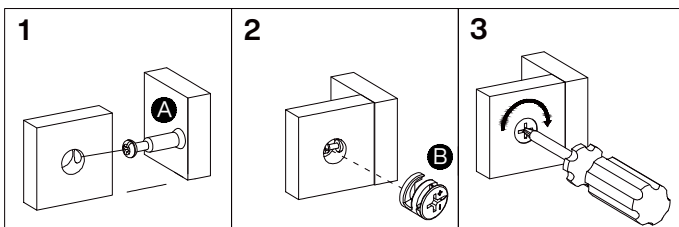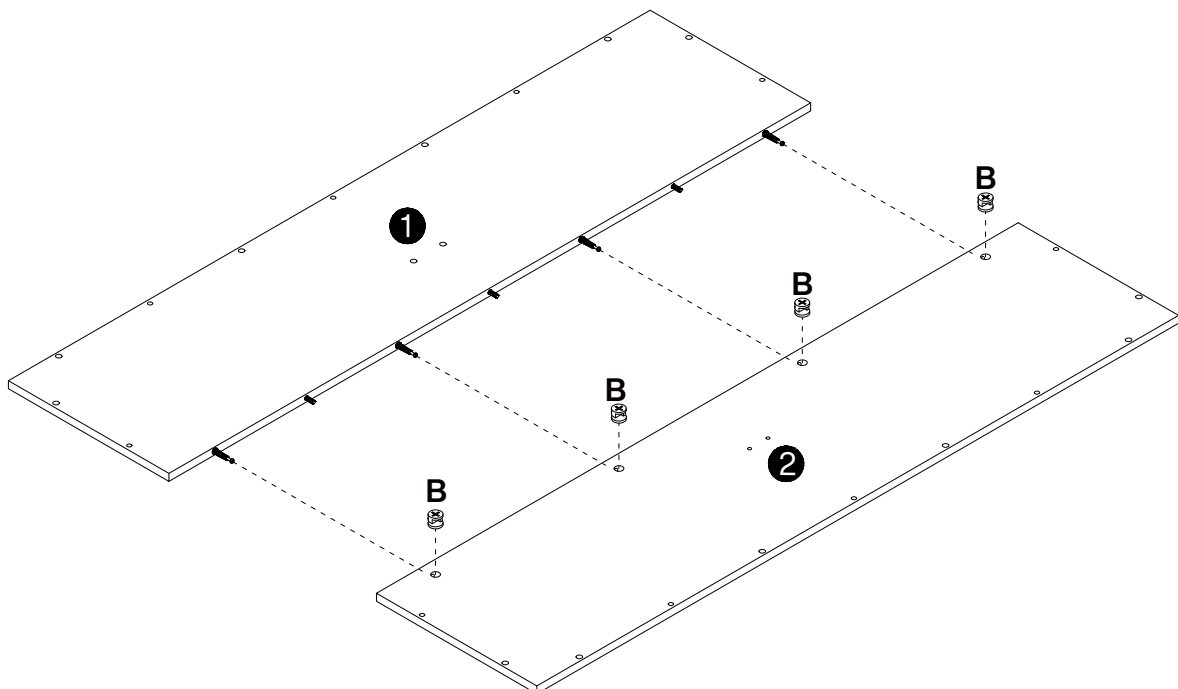

B


Ø15X12 mm 4 pcs

3

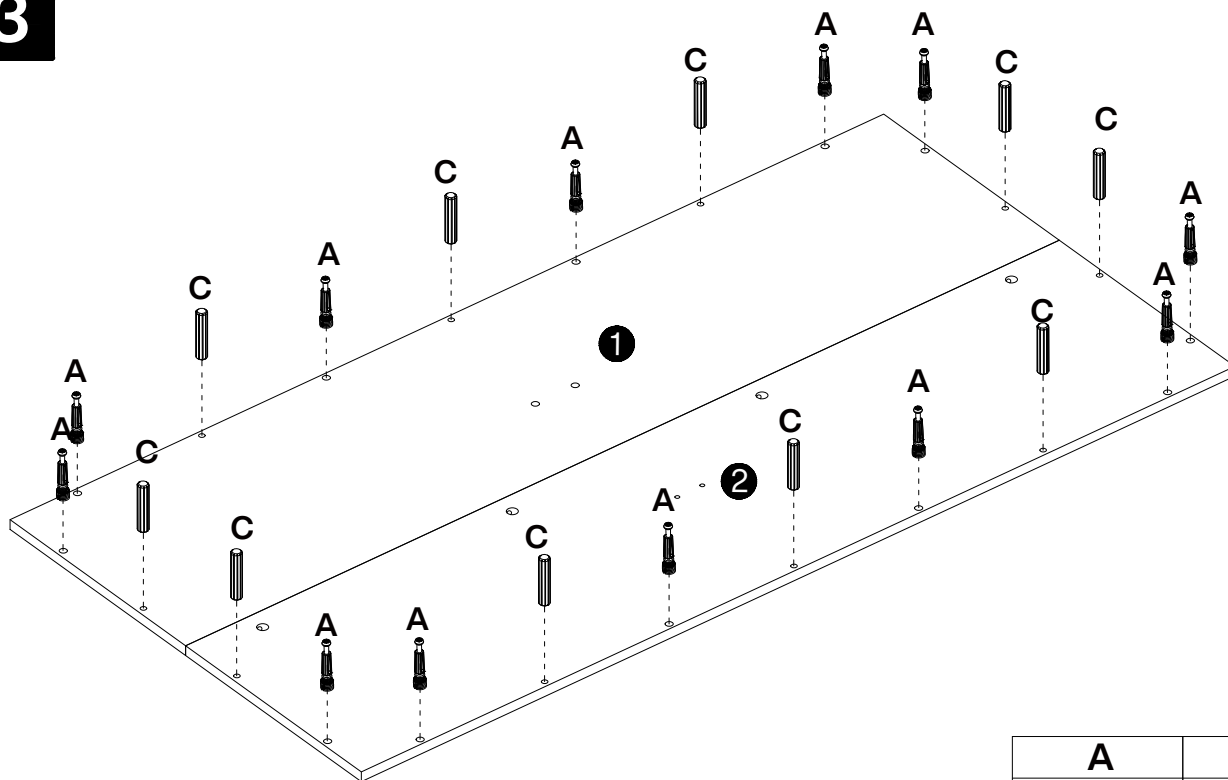


A	C
	
Ø6X35 mm 12 pcs	Ø8X30 mm 10 pcs

4

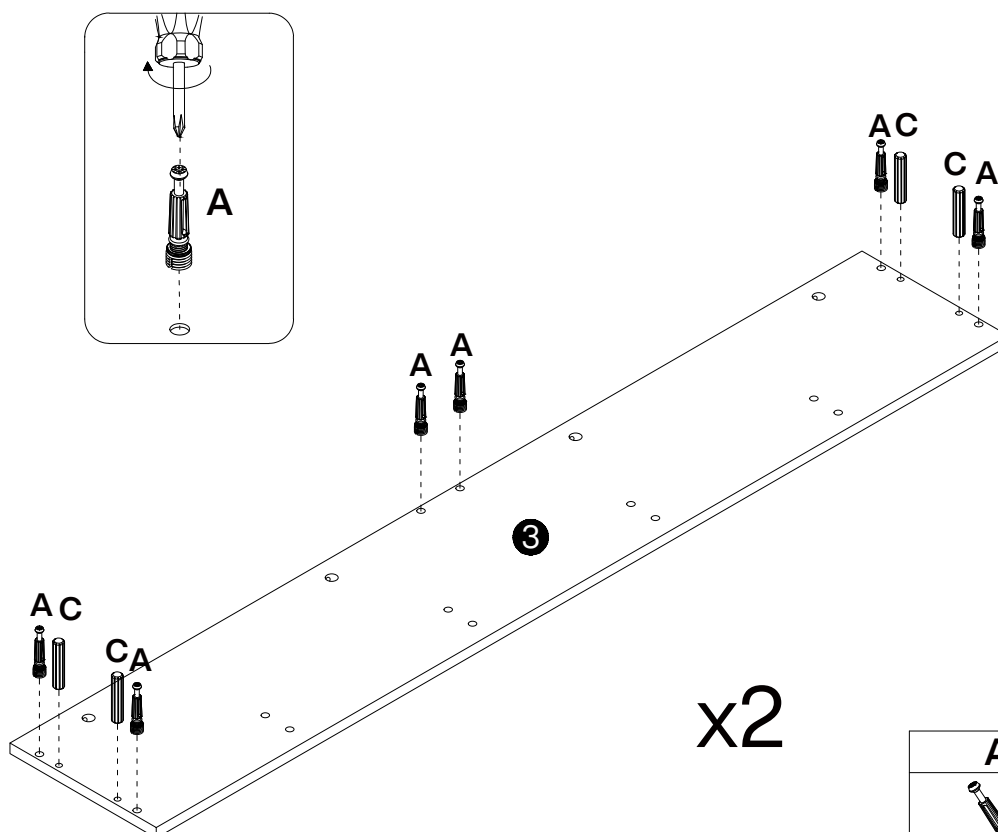

A	C
	
Ø6X35 mm 12 pcs	Ø8X30 mm 8 pcs


5

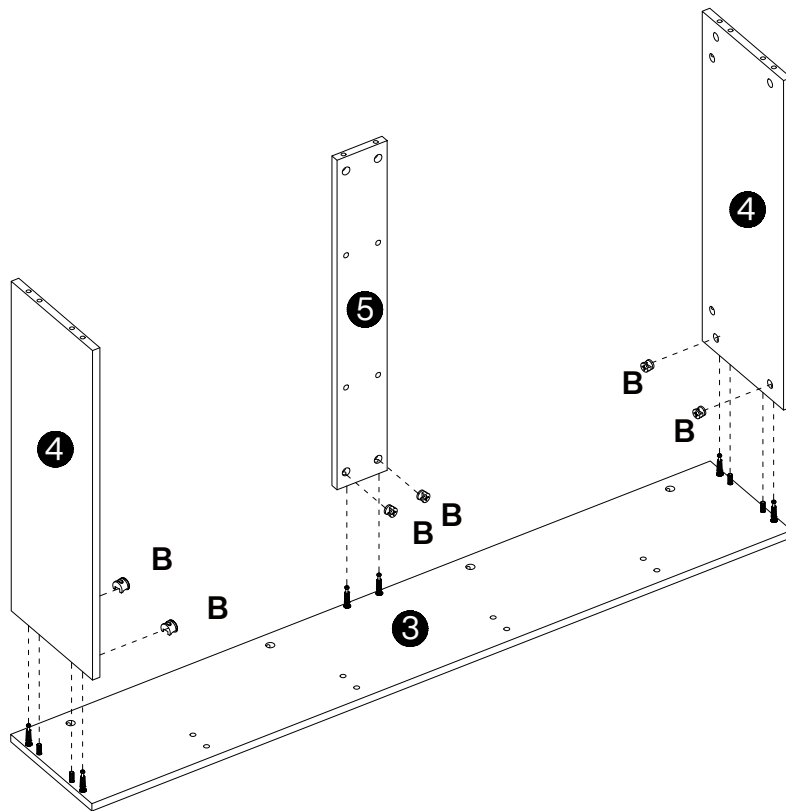

B


Ø15X12 mm
6 pcs

6


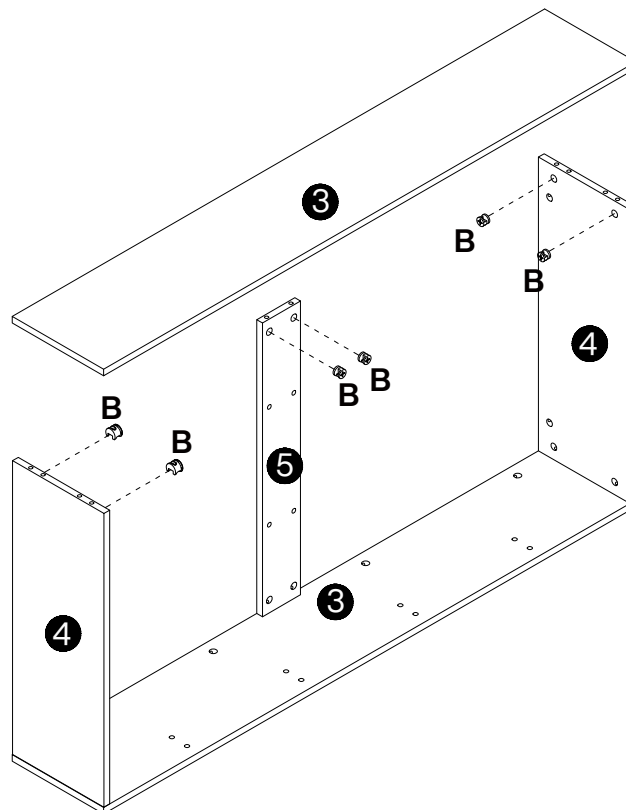


B

Ø15X12 mm
6 pcs

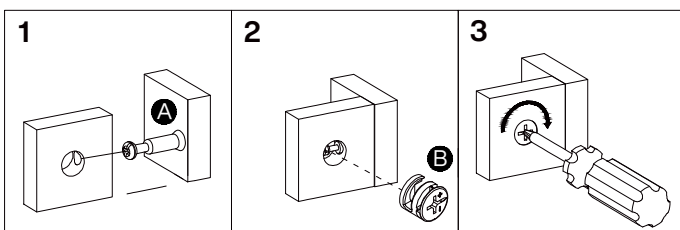


7

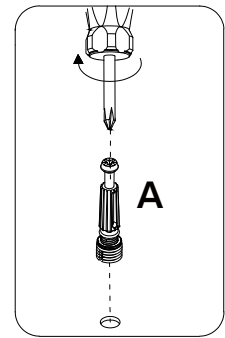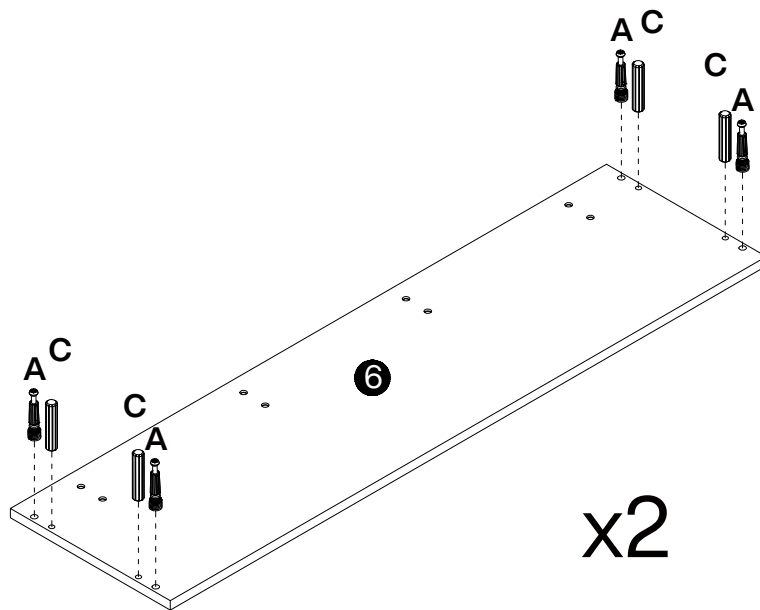


A	C
Ø6X35 mm 8 pcs	Ø8X30 mm 8 pcs


8

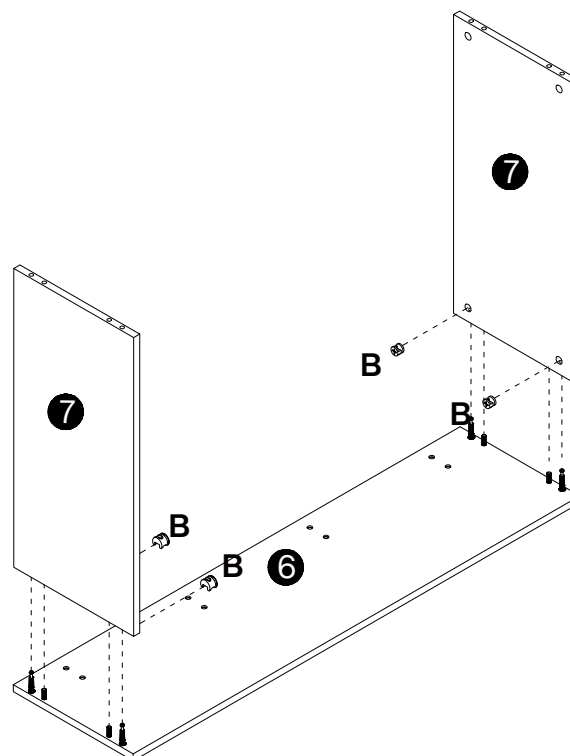

B
Ø15X12 mm 4 pcs

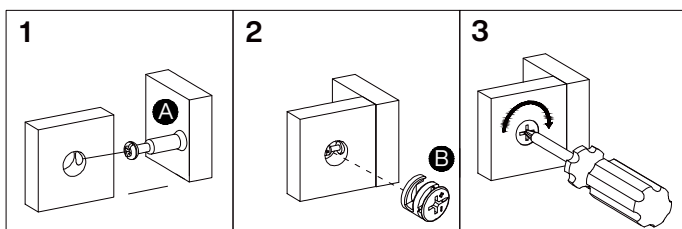


9


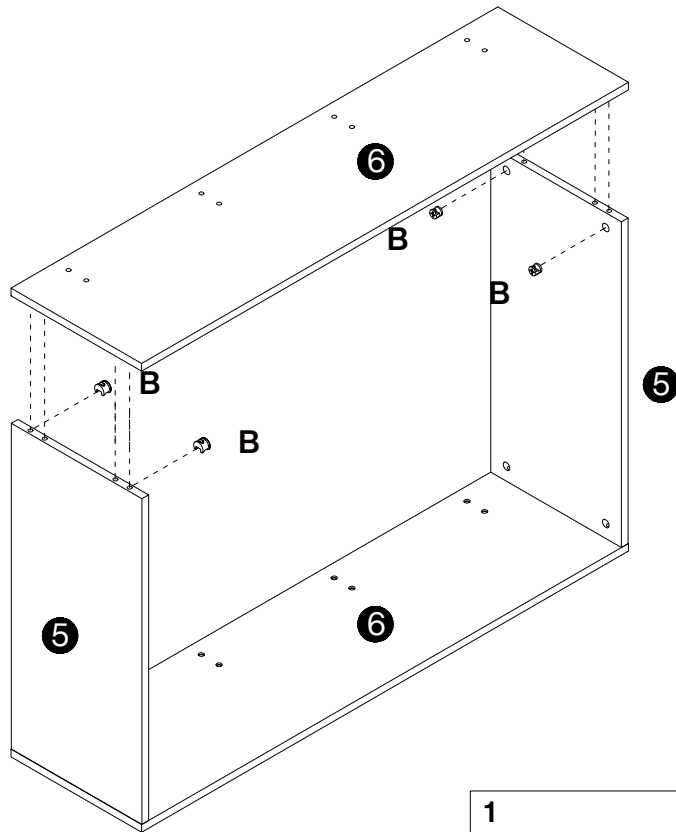


B

Ø6X35 mm
4 pcs

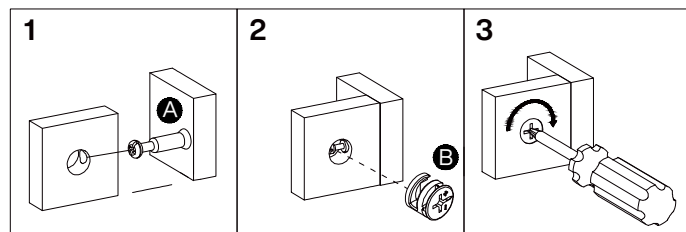



10

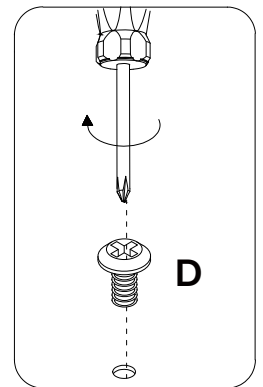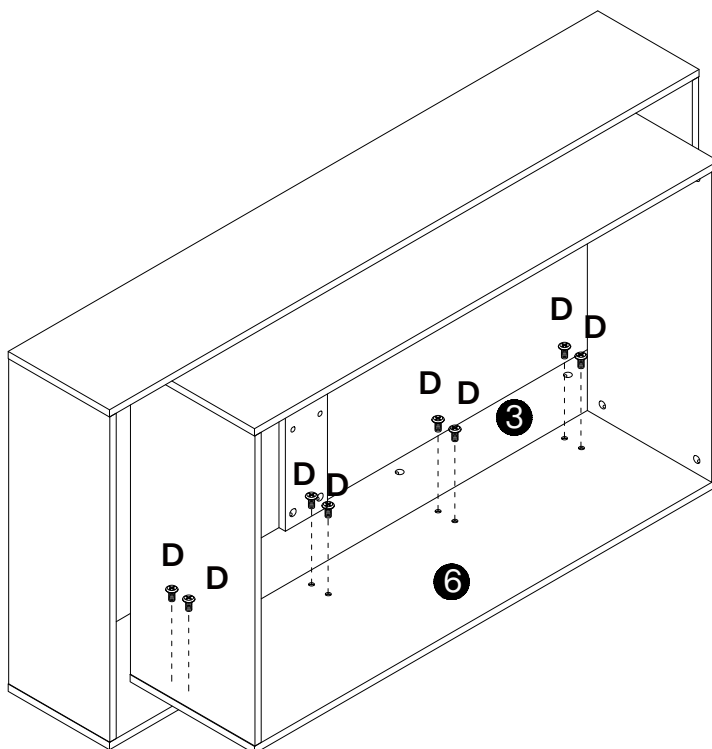

D

M6X25 mm
8 pcs


11

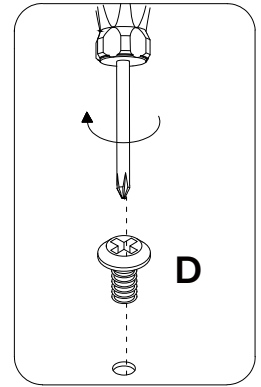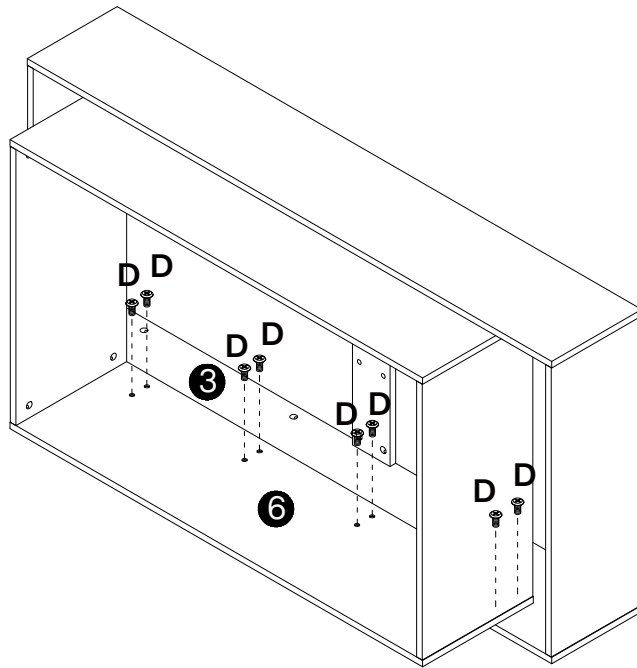

D


M6X25 mm
8 pcs

12

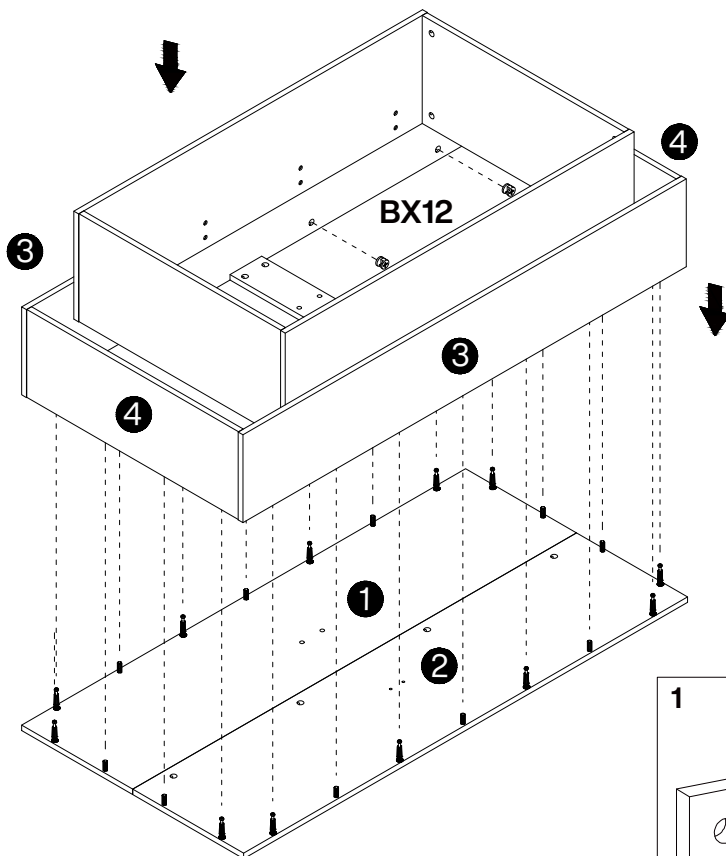


B

Ø6X35 mm
12 pcs

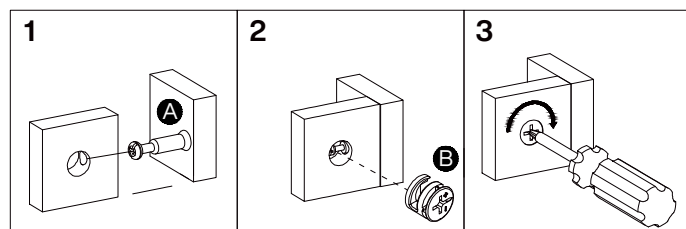


13

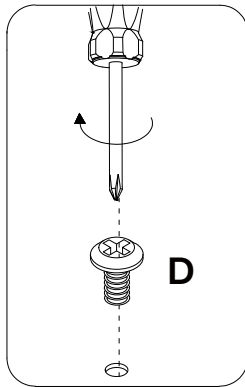



D

M6X25 mm
4 pcs

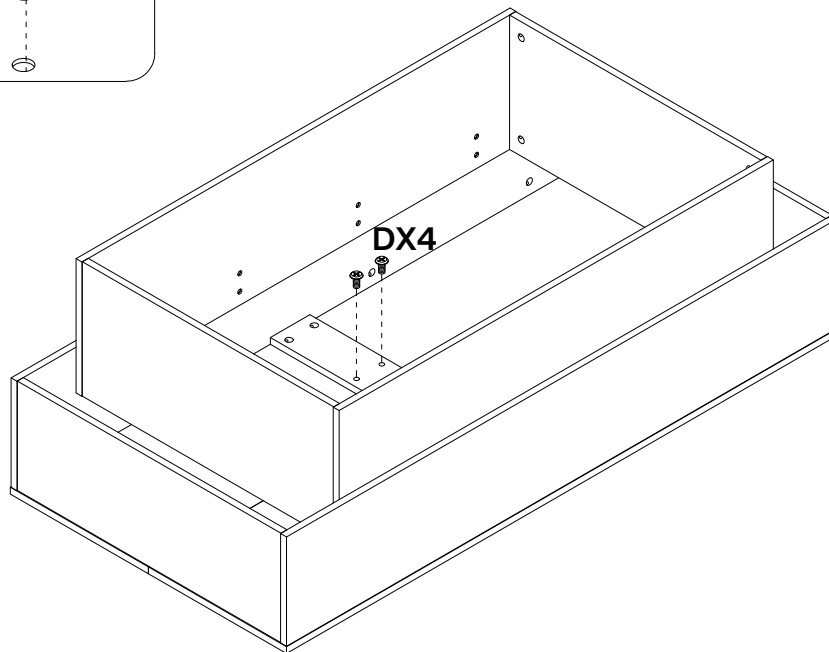

EN - Tap lightly.

14

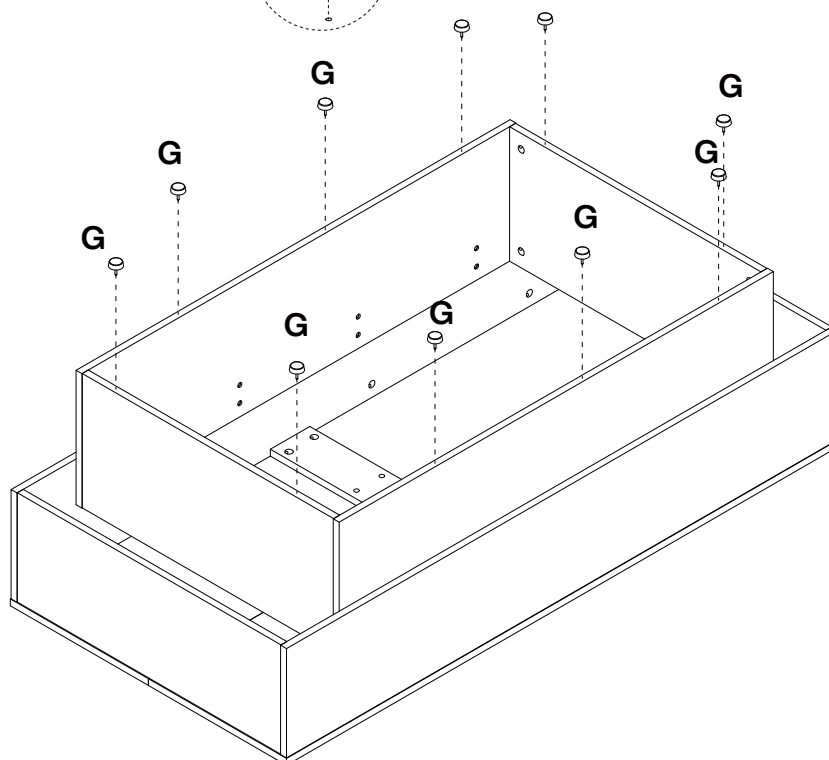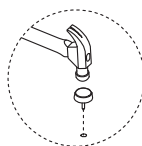

G

10 pcs

