


Assembly Instructions

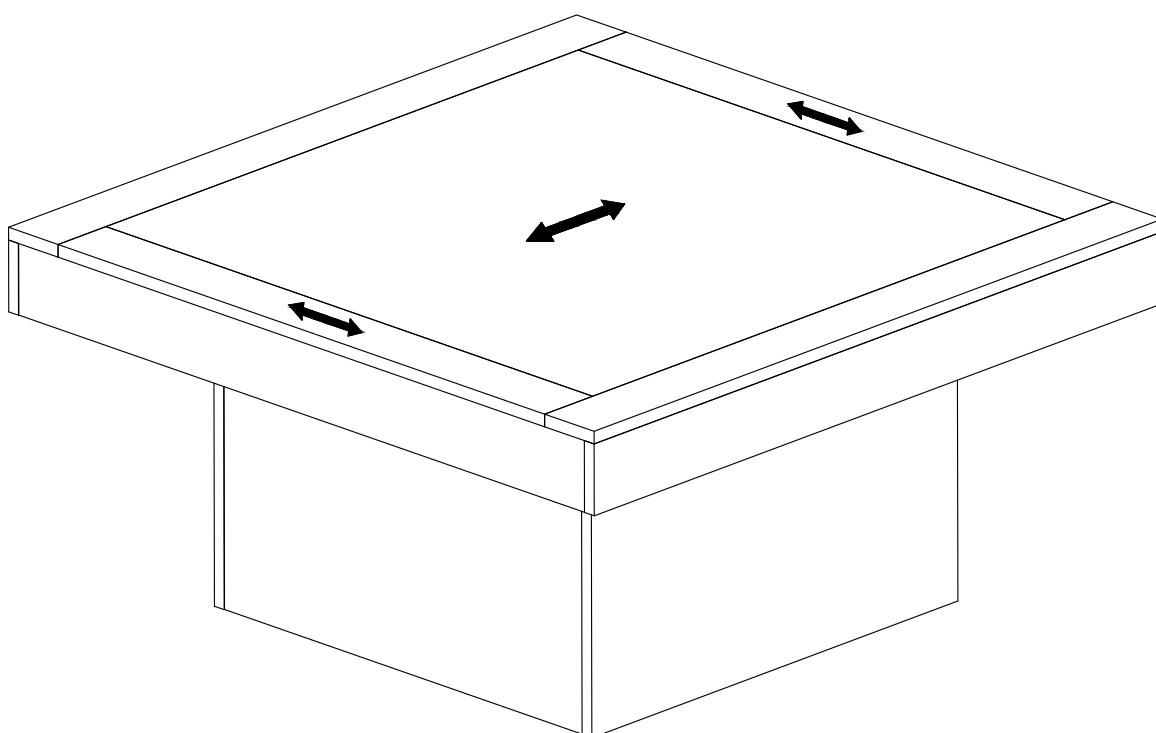

Coffee Table

Model No.
HOGA-XK00590
HOGA-XK00672
HOGA-XK00681
HOGA-XK00705

Contact Us




We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

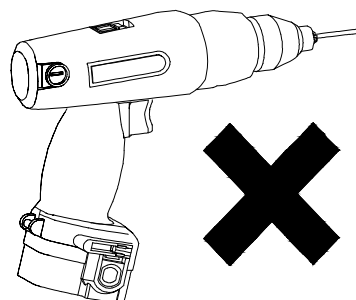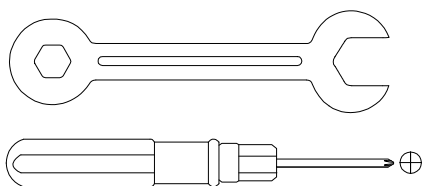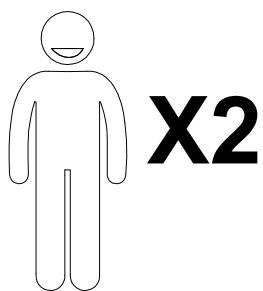



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

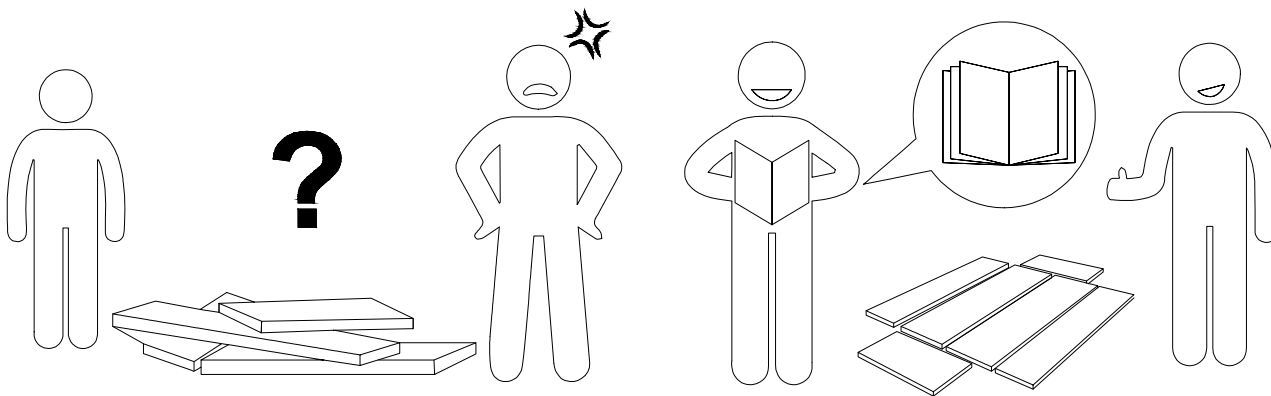

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

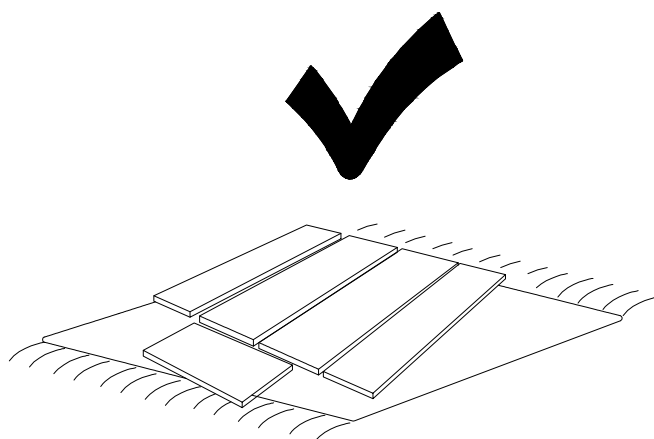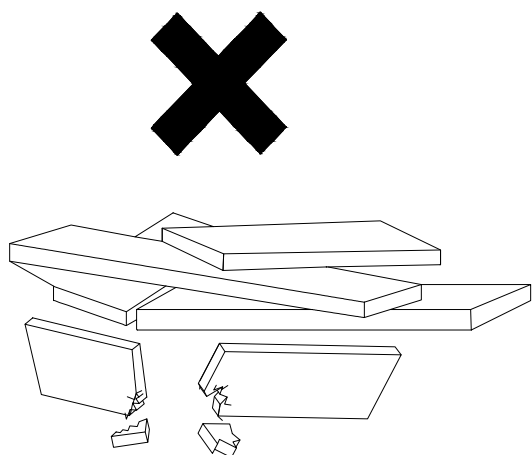


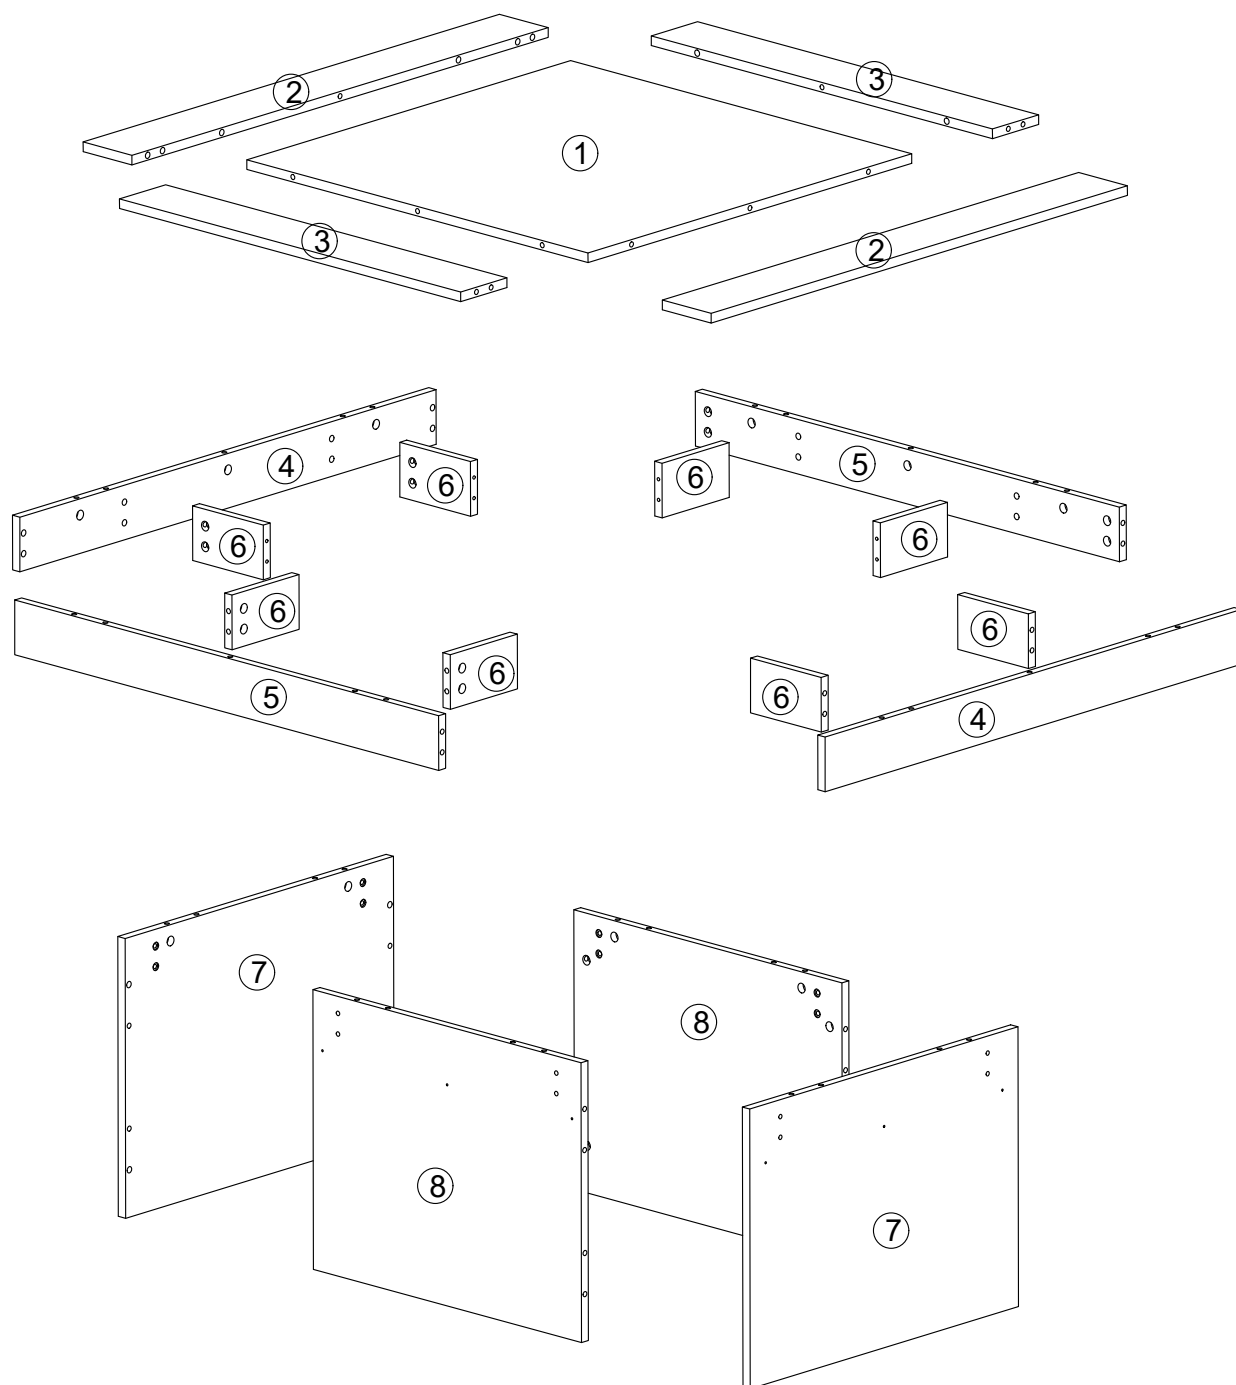


⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.


Parts List




① 1pc

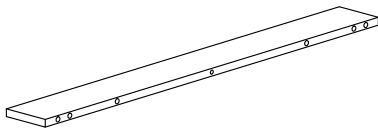


② 2pcs



③ 2pcs

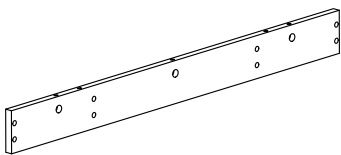


④ 2pcs

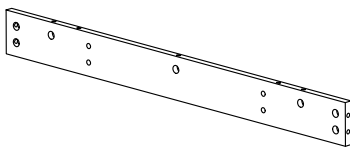


⑤ 2pcs



⑥ 8pcs


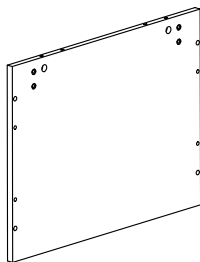


⑦ 2pcs

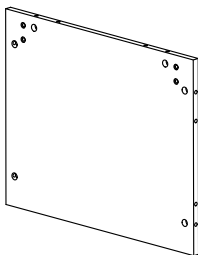


⑧ 2pcs

Hardware List


A	X68+1	B	X68+1	C	X28+1	D	X16+1	E	X1
									
Ø6X40mm		Ø15X12mm		Ø8X30mm		Ø7X47mm		M4X65mm	
F	X1								
									

Installation of Cams and Pins



Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

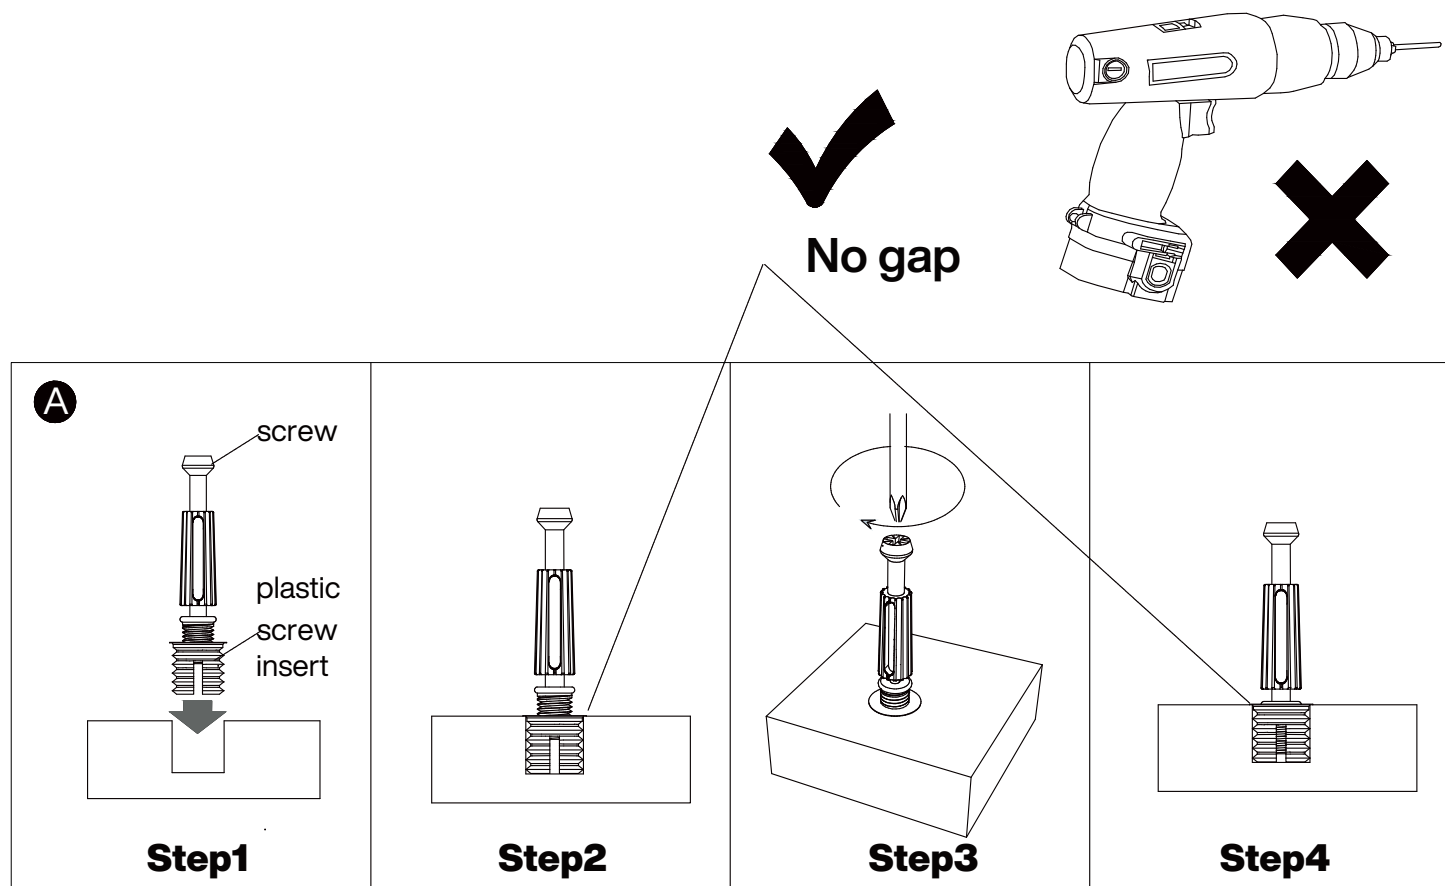


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.


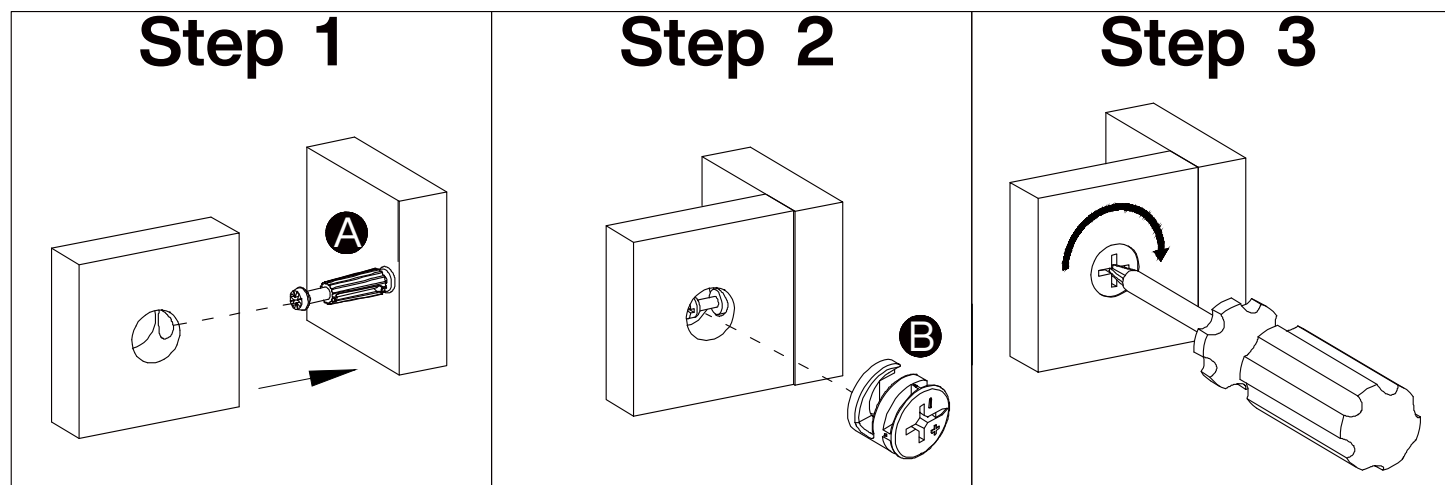


1

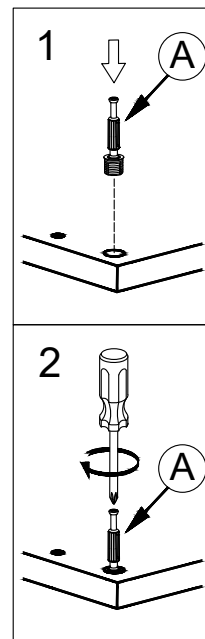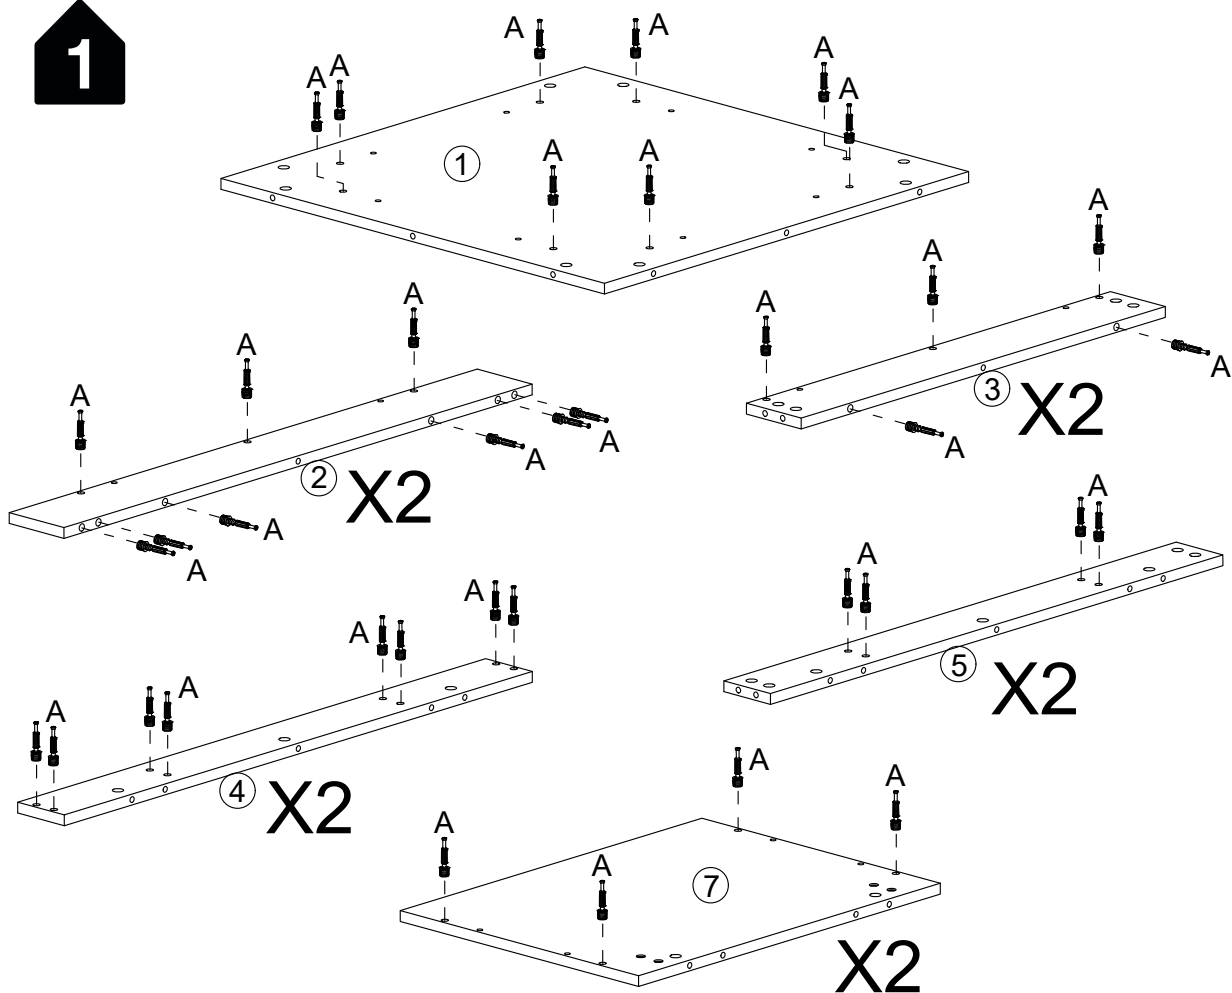



A	X68
	
Ø6X40mm	

2

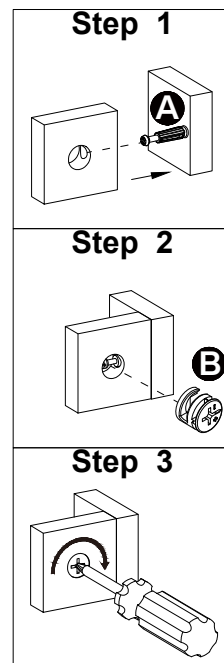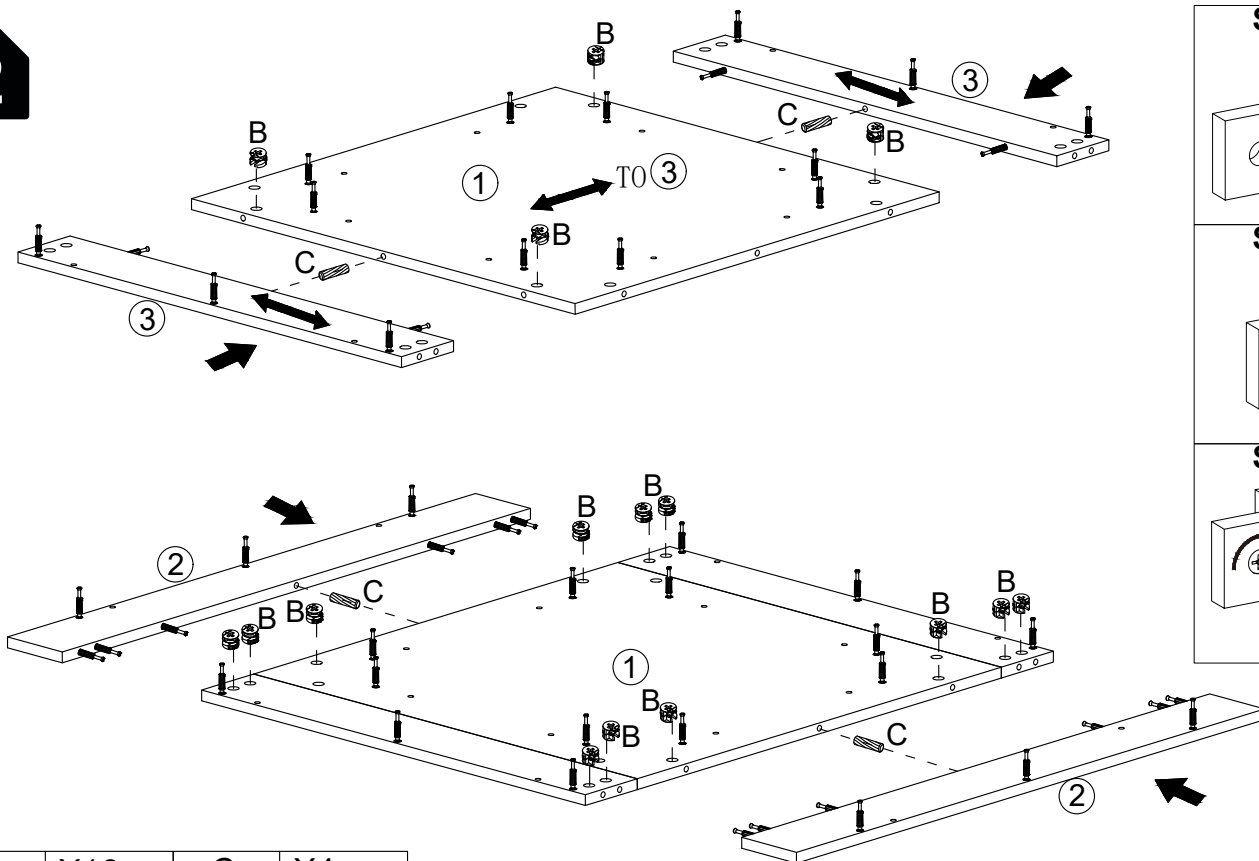


B	X16	C	X4
			
Ø15X12mm		Ø8X30mm	

3

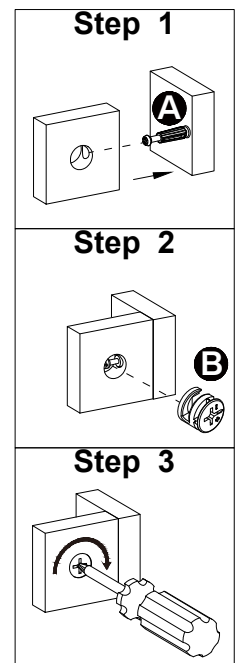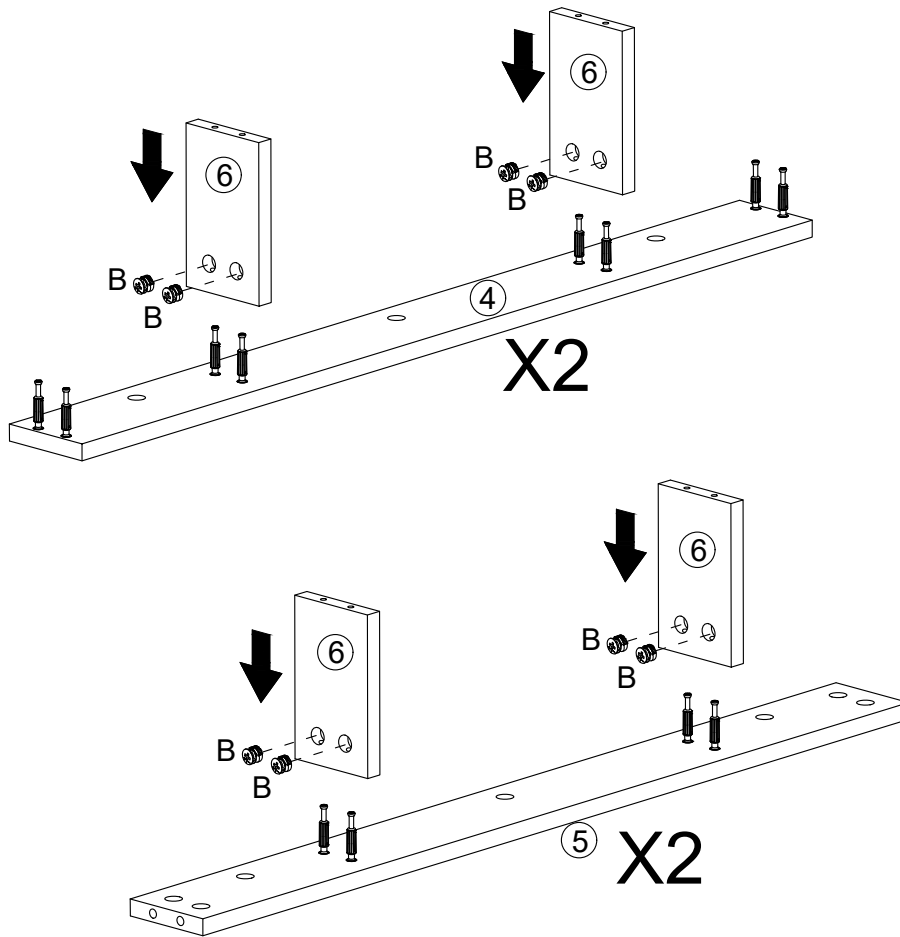


B	X16
Ø15X12mm	

4

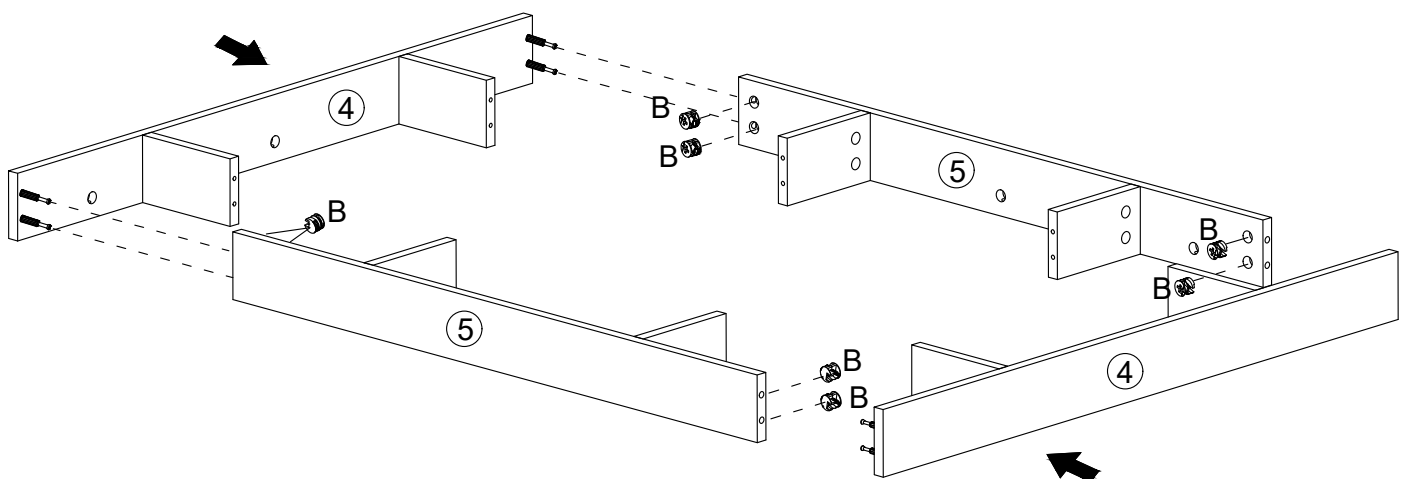


B	X8
Ø15X12mm	


5

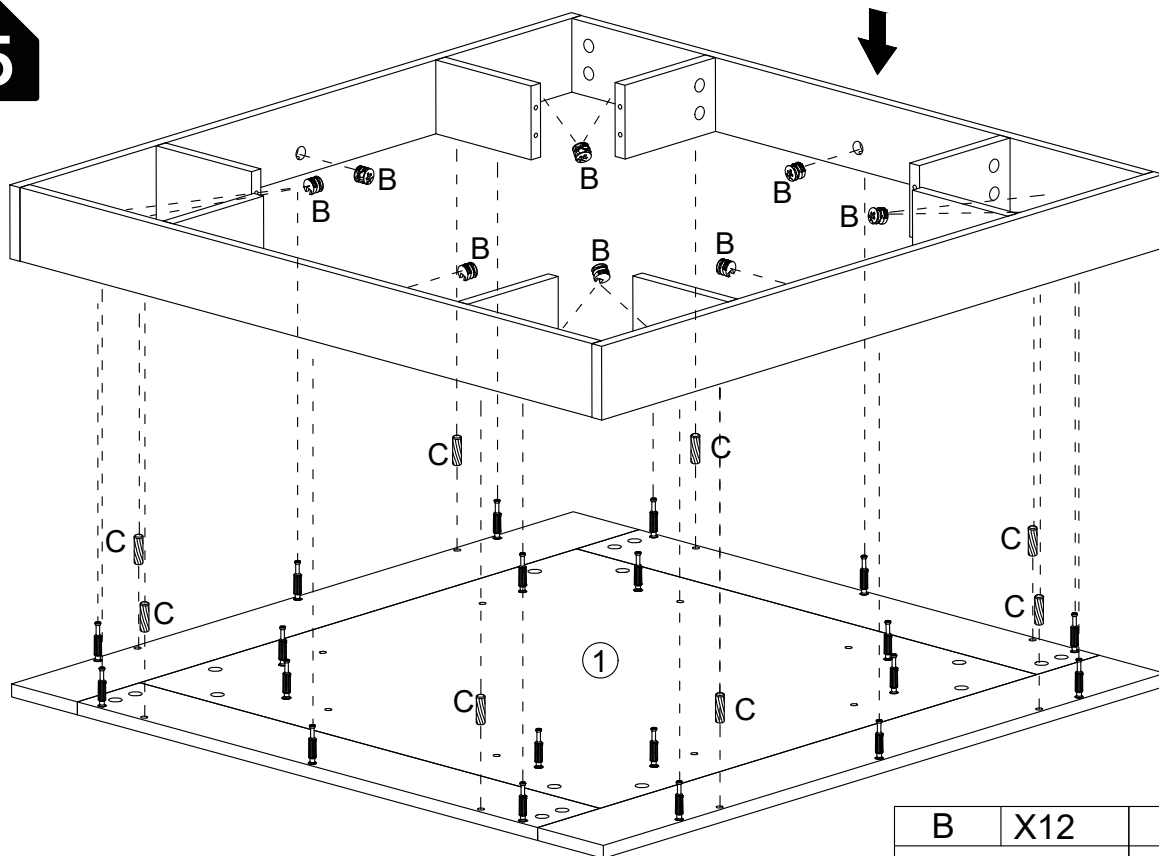


Step 1

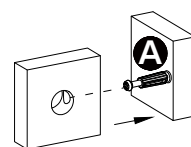

Step 2


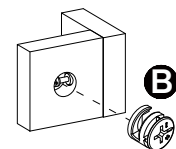


Step 3

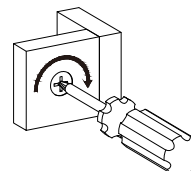



B	X12	C	X8
			
Ø15X12mm		Ø8X30mm	

6

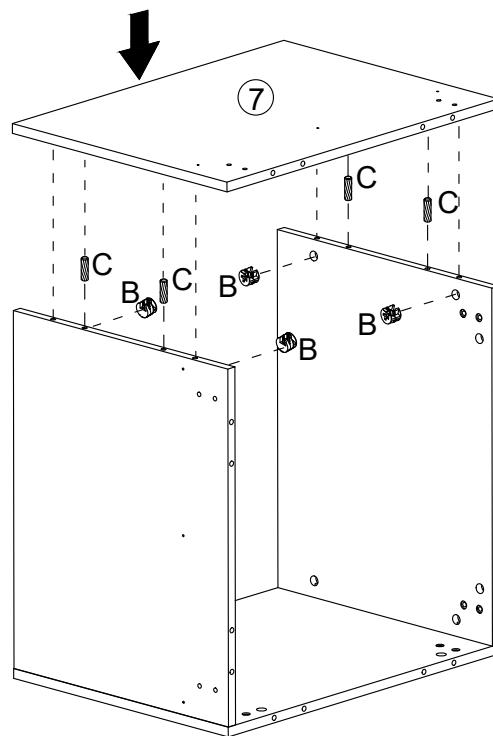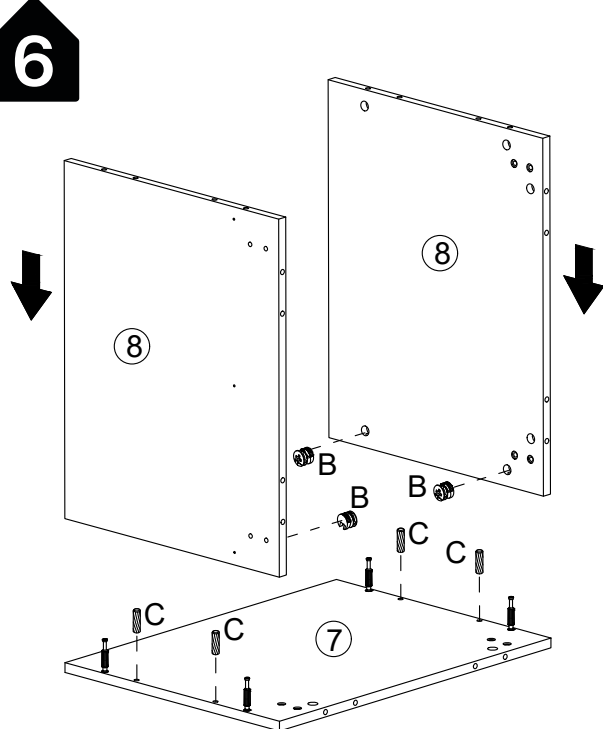



B	X8	C	X8
			
Ø15X12mm		Ø8X30mm	

7

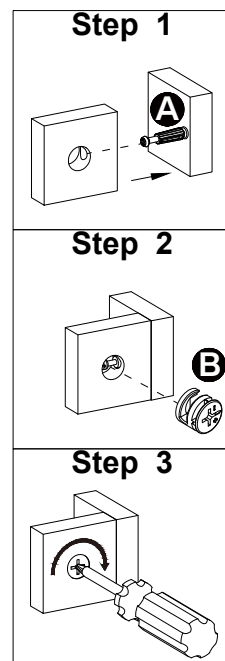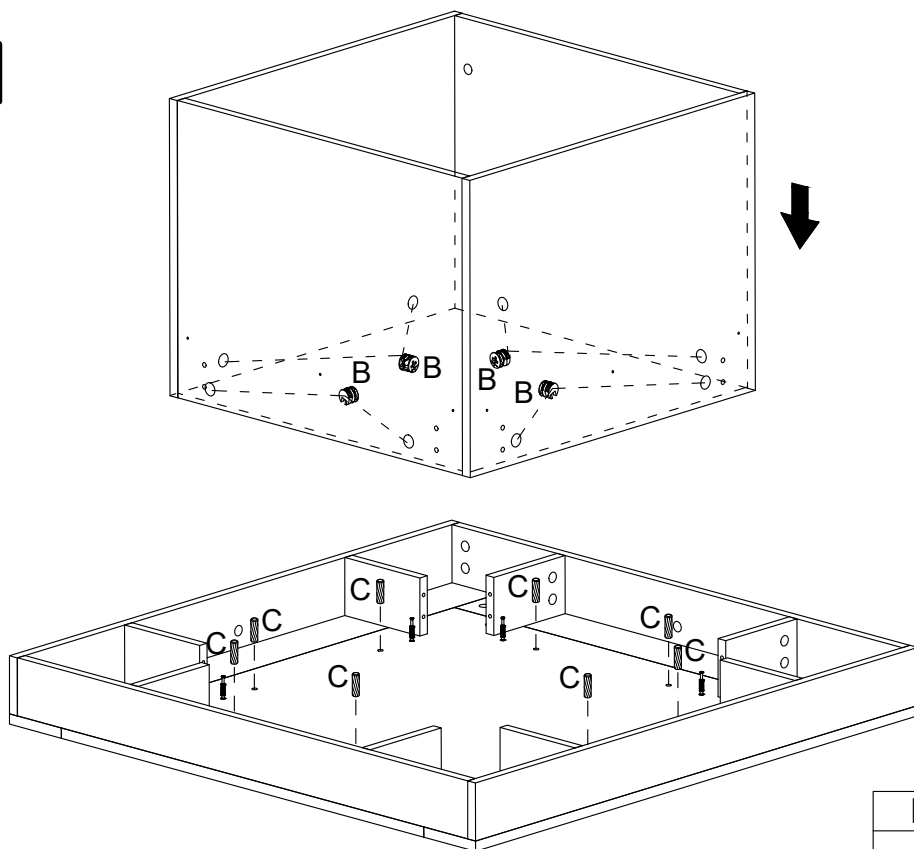


B	X8	C	X8
Ø15X12mm		Ø8X30mm	

8

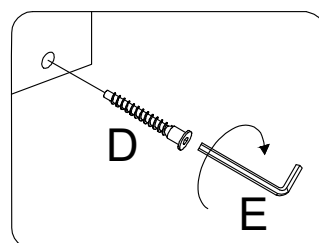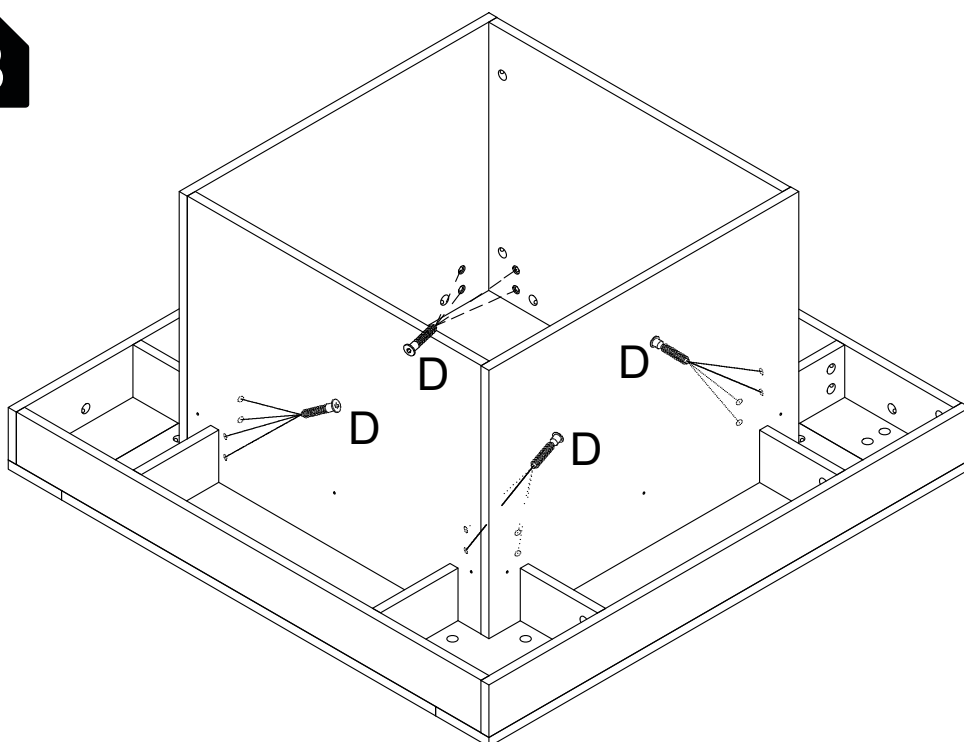


D	X16	E	X1
Ø7X47mm		M4X65mm	

9

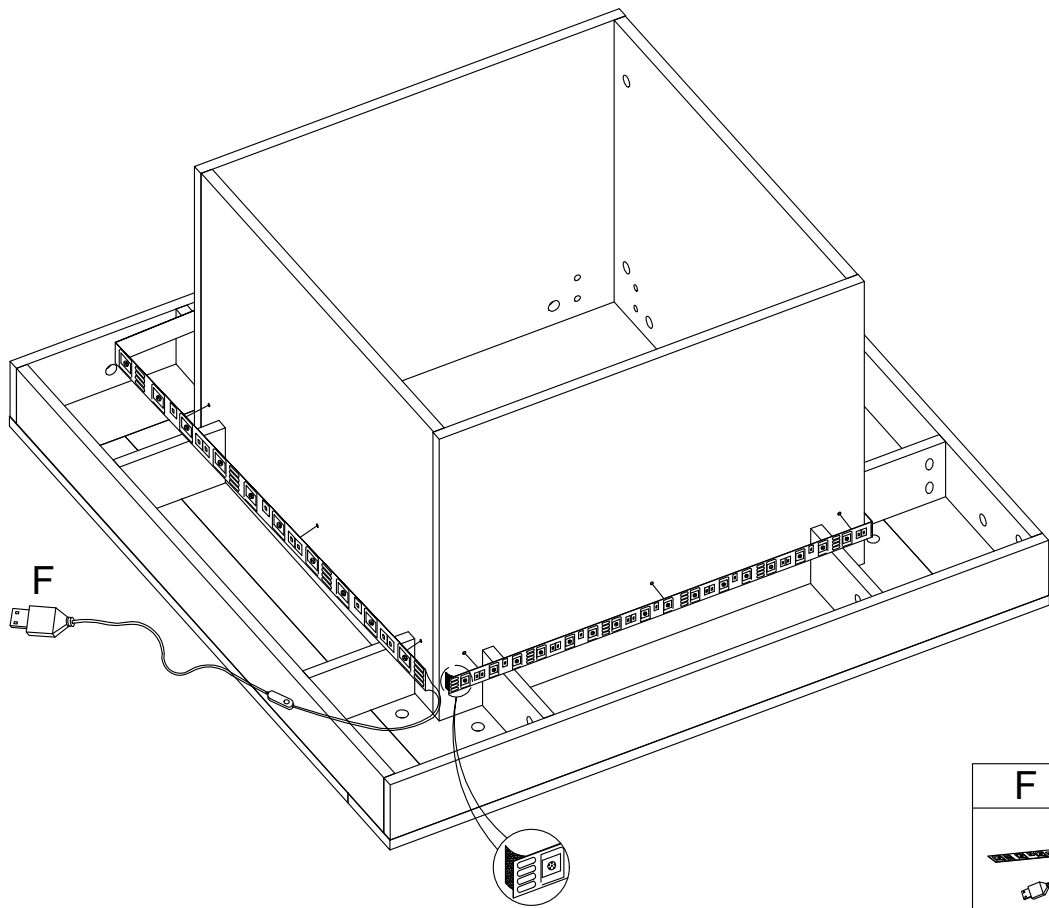

F	X1

10

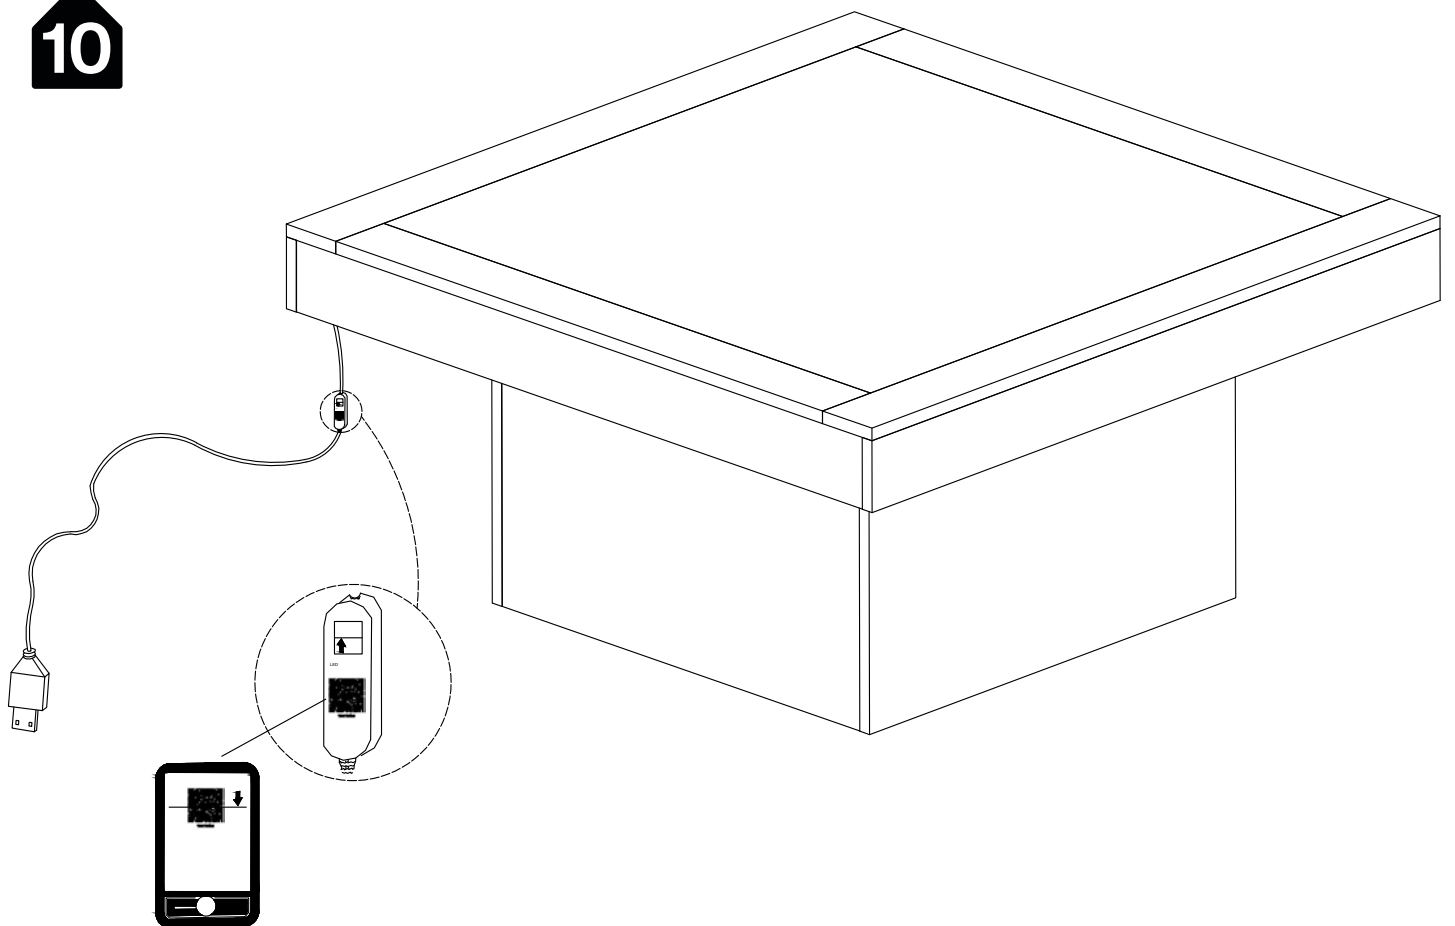

Thank you for your support!

