
Assembly Instructions

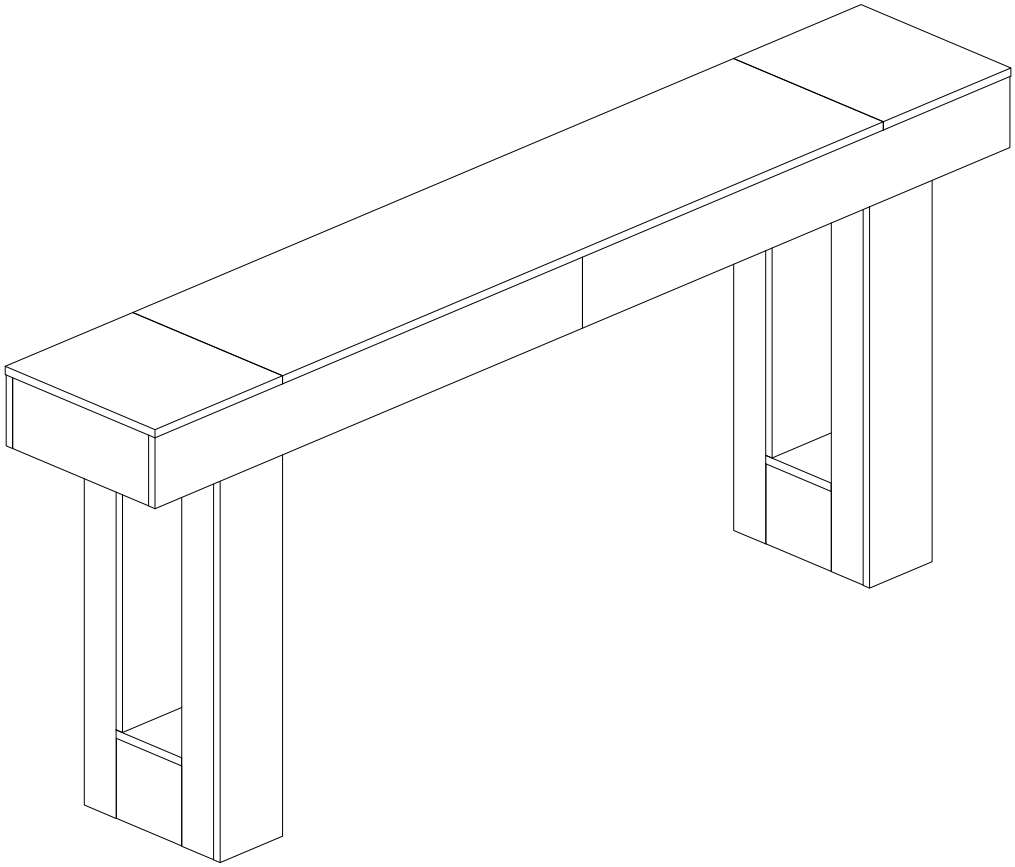

Console Table

Model No.
HOGA-JW1330

EN - Contact us. We're here to help you.

1-424-206-5666

US - 8:00 AM to 8:00 PM EST, Monday to Friday.
GB - 1:00 PM to 1:00 AM GMT, Monday to Friday.

support@yuzhouint.com


EN - We prioritize your satisfaction. Any issues with your product like missing or damaged parts, please keep the package, take photos of the packaging and the product, and contact us quickly.

Warm Tips


EN


1. Carefully read and keep these instructions for later.
2. Before assembling, ensure all parts and accessories are there.
3. Assemble on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten the screws until everything is correctly in place.

EN - We recommend using hand tools for assembly.
If an electric screwdriver is used, reduce its power to protect the product.

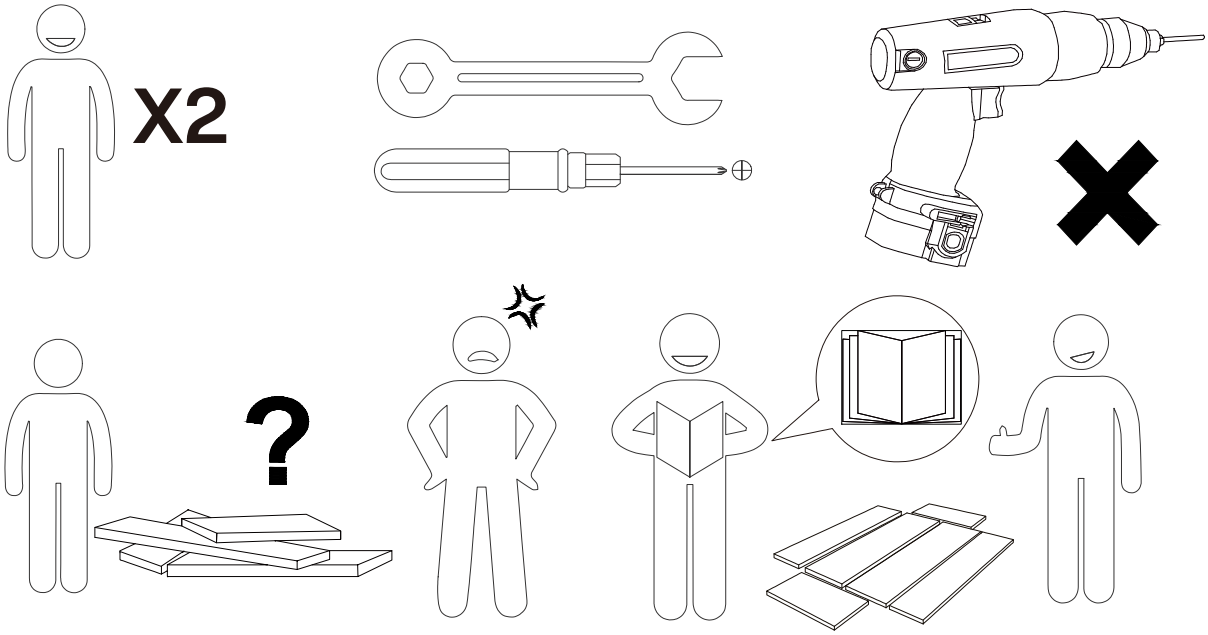













EN - Install the Anti-Tip Straps
Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

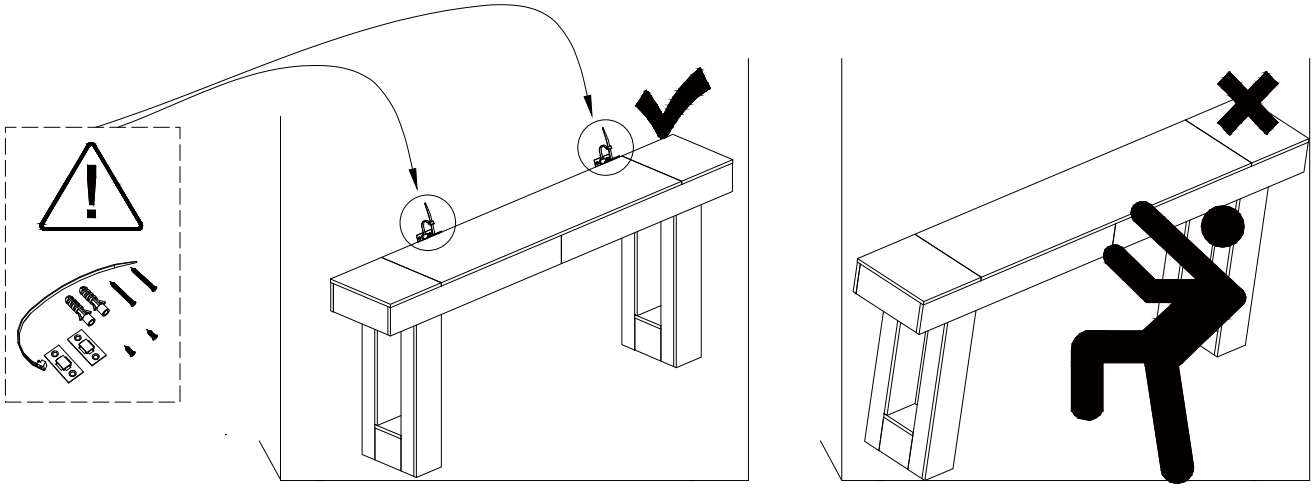



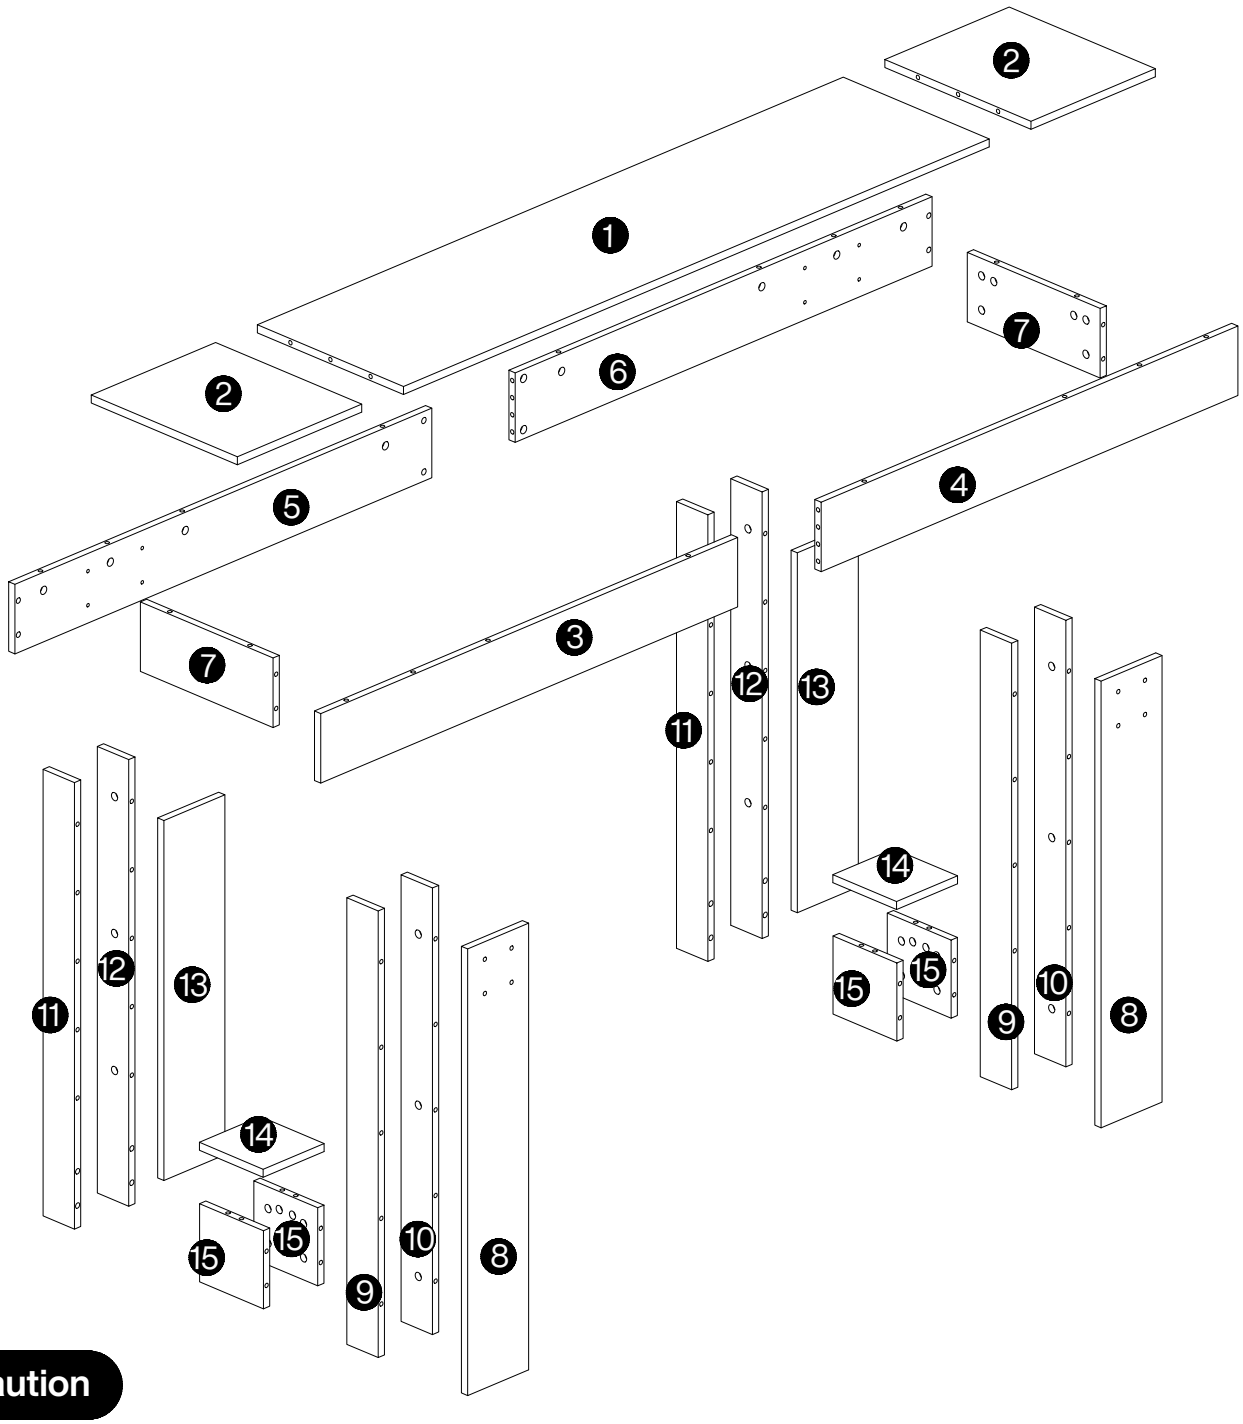


⚠ Caution


EN - Check all parts. Most board parts are labeled on the edge.
Contact us for a free replacement if any are damaged or missing.

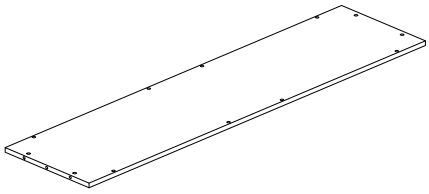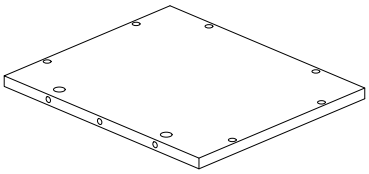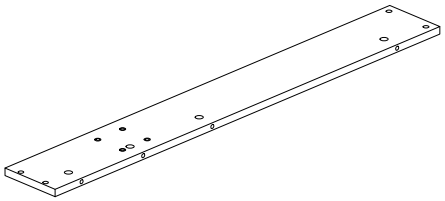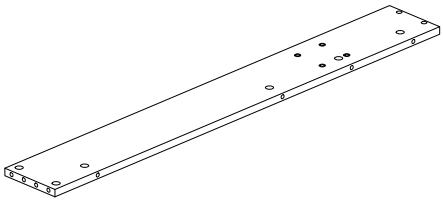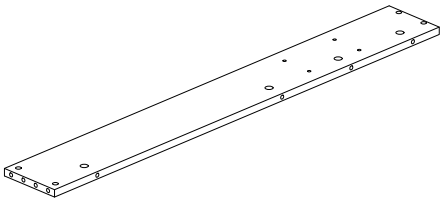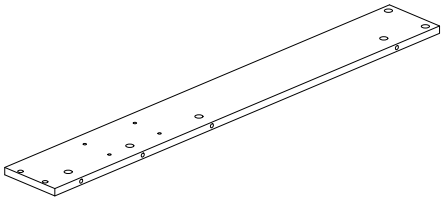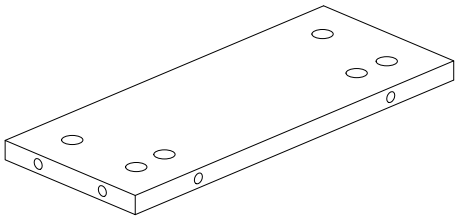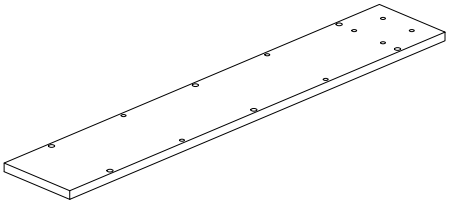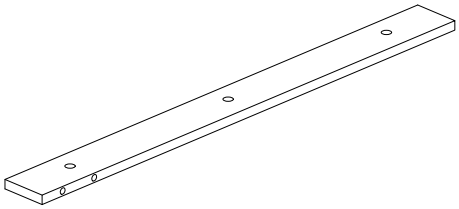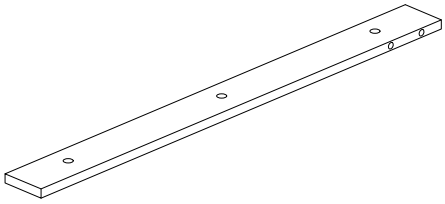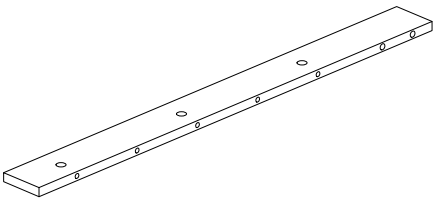
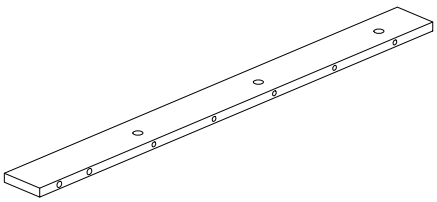
❶  1 pc	❷  2 pcs	❸  1 pc
❹  1 pc	❺  1 pc	❻  1 pc
❼  2 pcs	❽  2 pcs	❾  2 pcs
❿  2 pcs	⓫  2 pcs	⓬  2 pcs

EN - Parts List

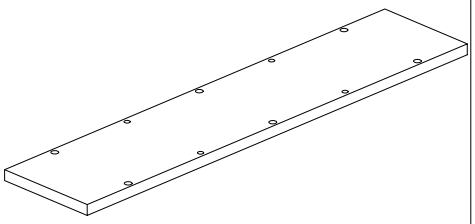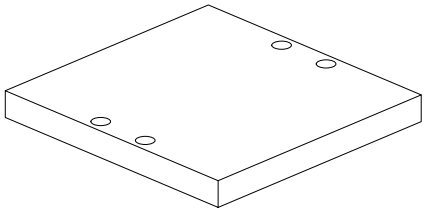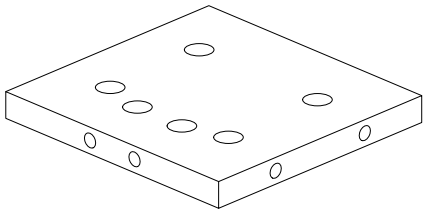⓭	⓮	⓯
		
2 pcs	2 pcs	4 pcs

EN - Hardware List

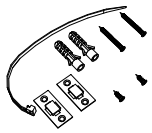
A	B	C	D	E
				
Ø15X12 mm	Ø6X40 mm	M6X25 mm	M4	
84+2 pcs	84+2 pcs	8 pcs	1 pc	2 pcs

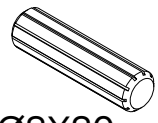F	G	H	I	J
				
M5X38 mm	Ø8X30 mm	M6		
8 pcs	22 pcs	8 pcs	8 pcs	1 pc


EN - Install Plastic Insert and Connector Bolt

Step 1-2: Align the plastic insert with the mounting hole and press/tap it in until fully flush with the surface. If unable to press it in, loosen the bolt counterclockwise or completely remove the bolt from the plastic insert, then retry.


Step 3-4: After the plastic insert is pressed into place, tighten the bolt clockwise with a screwdriver until the metal threads are fully concealed.

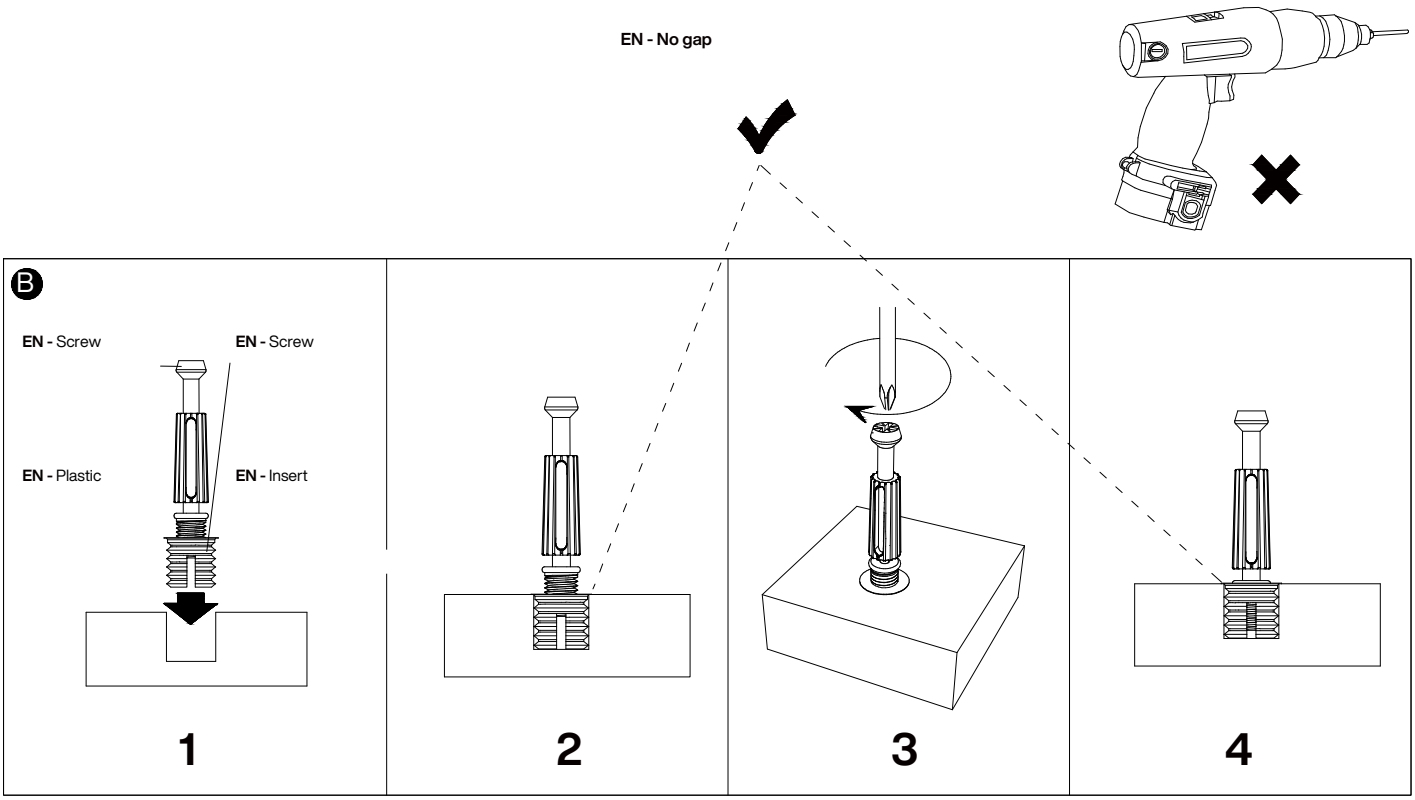

EN - Lock the Eccentric Cam
Step 1-2: Ensure the connector bolt is fully seated in the hole. Align the cam arrow with the bolt centerline.
Step 3: Rotate the cam head clockwise with a manual screwdriver until fully locked. Please do not use power tools – overtightening may strip components.

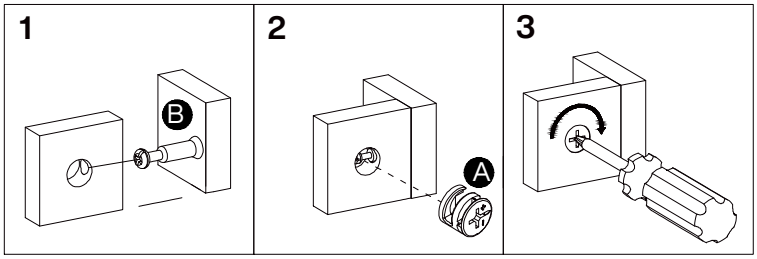

1

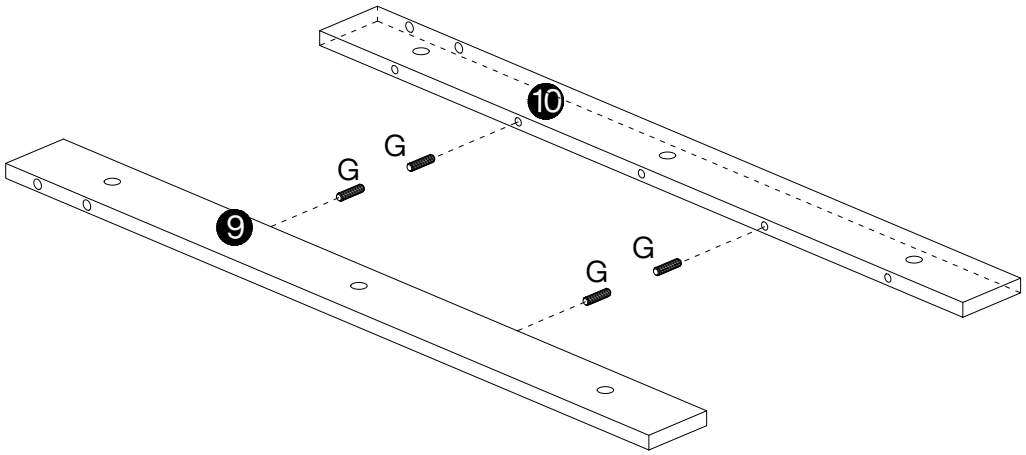


x2

G

Ø8X30 mm
8 pcs

2

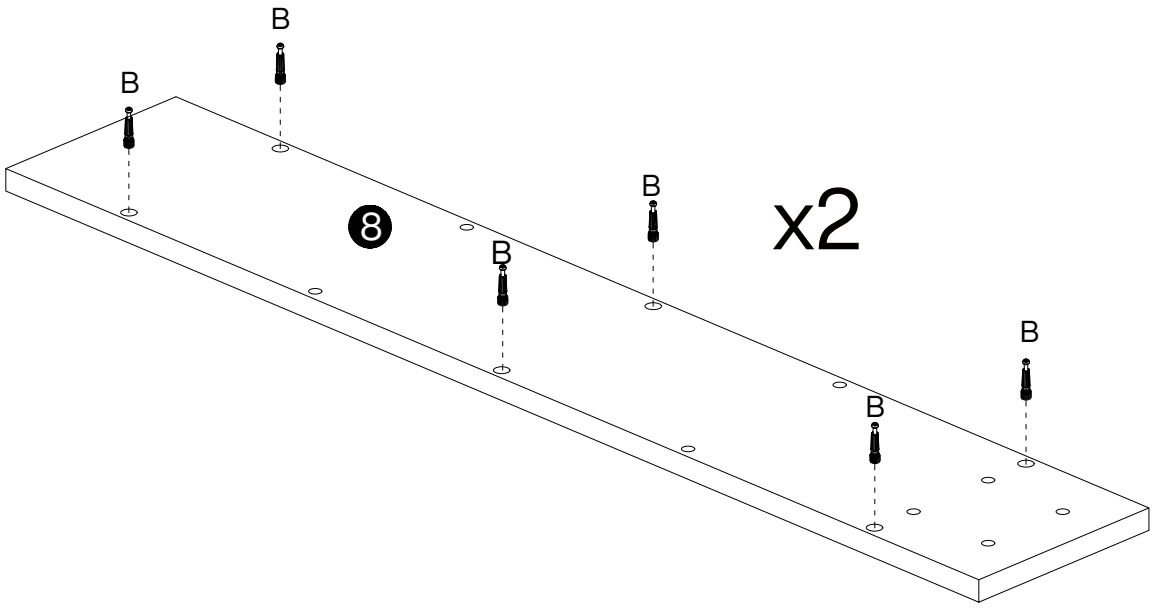


x2

B

Ø6X40 mm
12 pcs


3

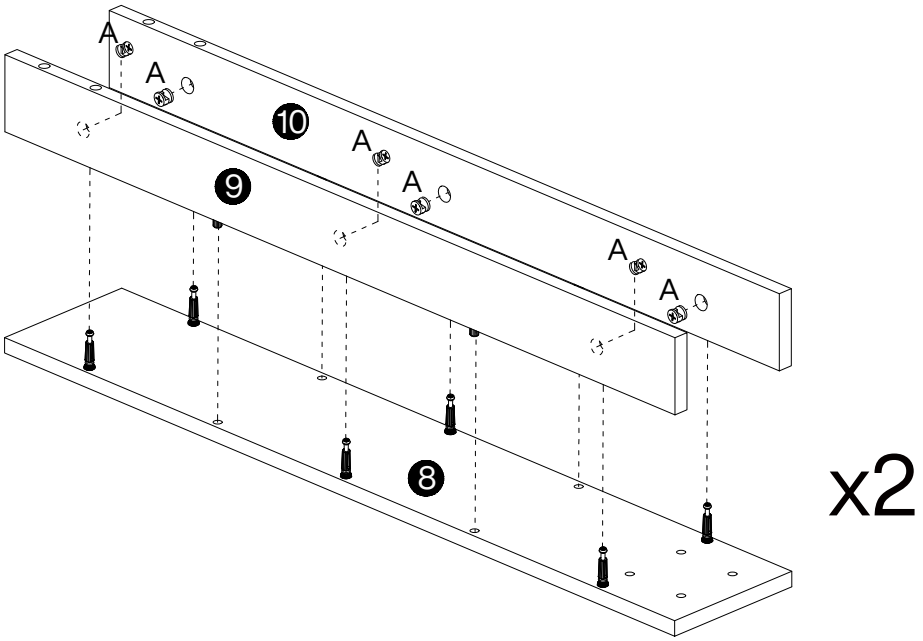

A

Ø15X12 mm
12 pcs


4

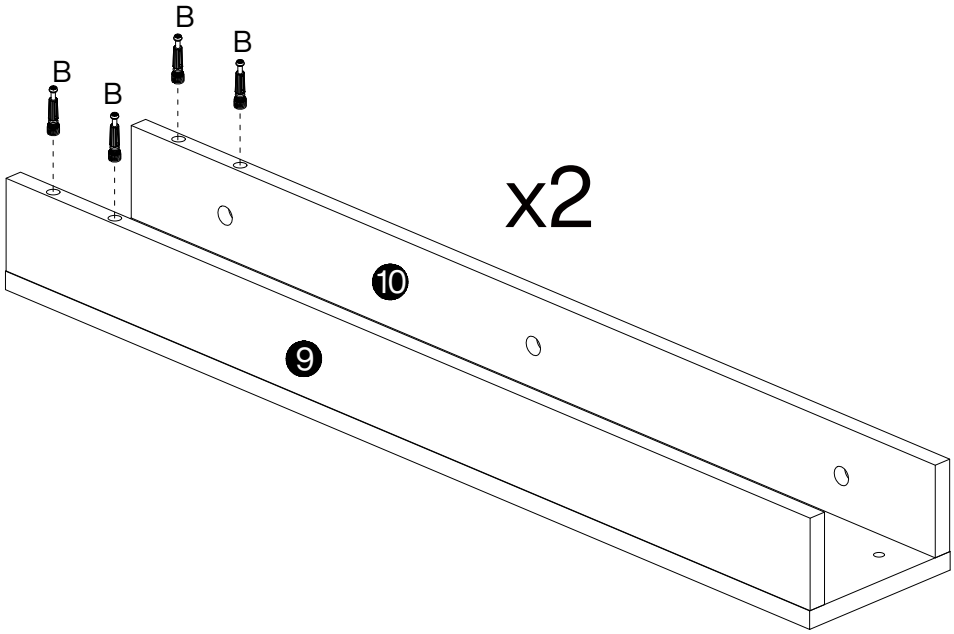

B

Ø6X40 mm
8 pcs

5

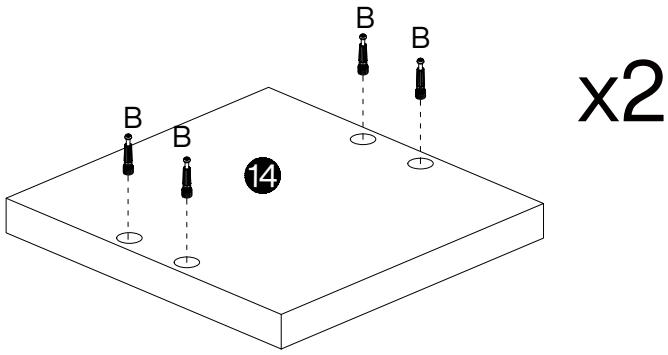


x2

B

Ø6X40 mm
8 pcs

6

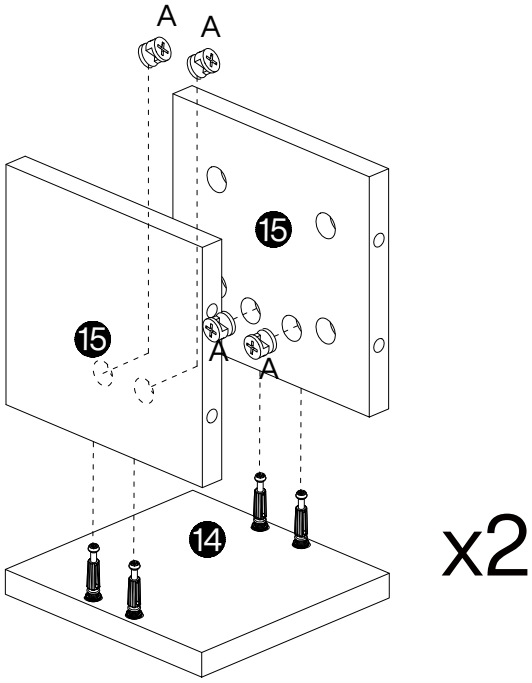


x2

A

Ø15X12 mm
8 pcs


7

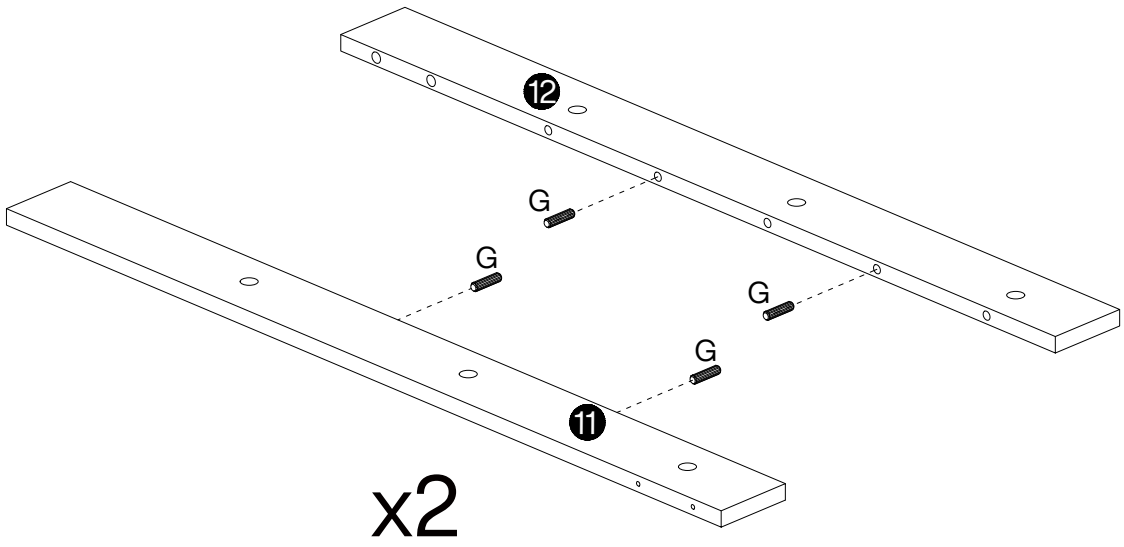

G

Ø8X30 mm
8 pcs


8

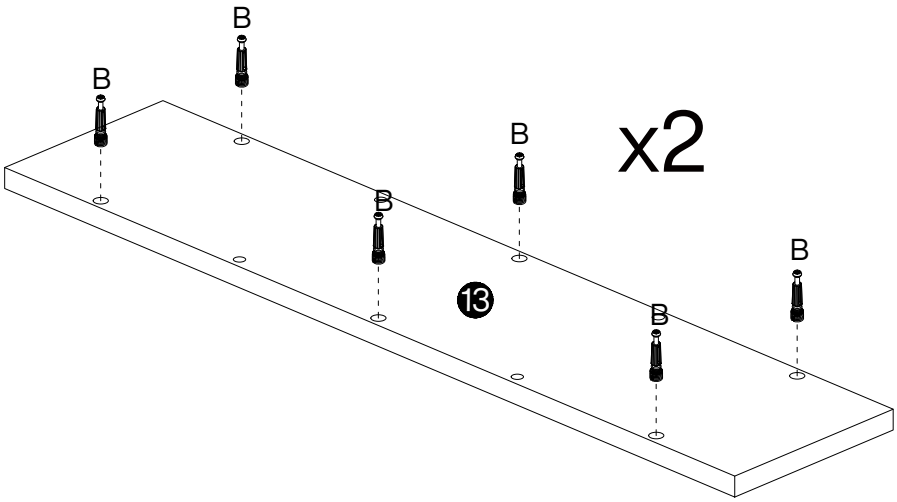

B

Ø6X40 mm
12 pcs

9

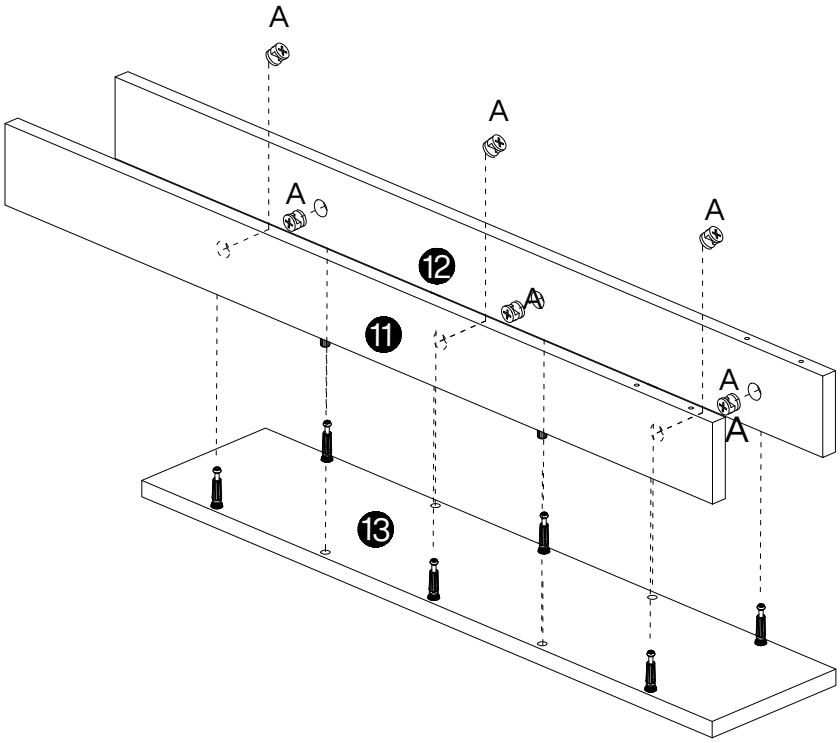


x2

A

Ø15X12 mm
12 pcs

10

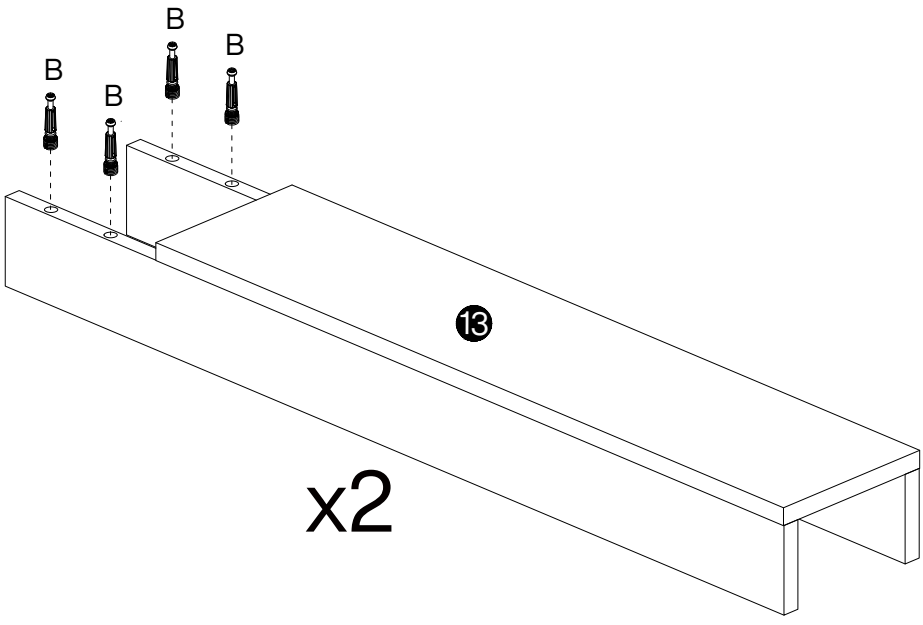


x2

B

Ø6X40 mm
8 pcs


11

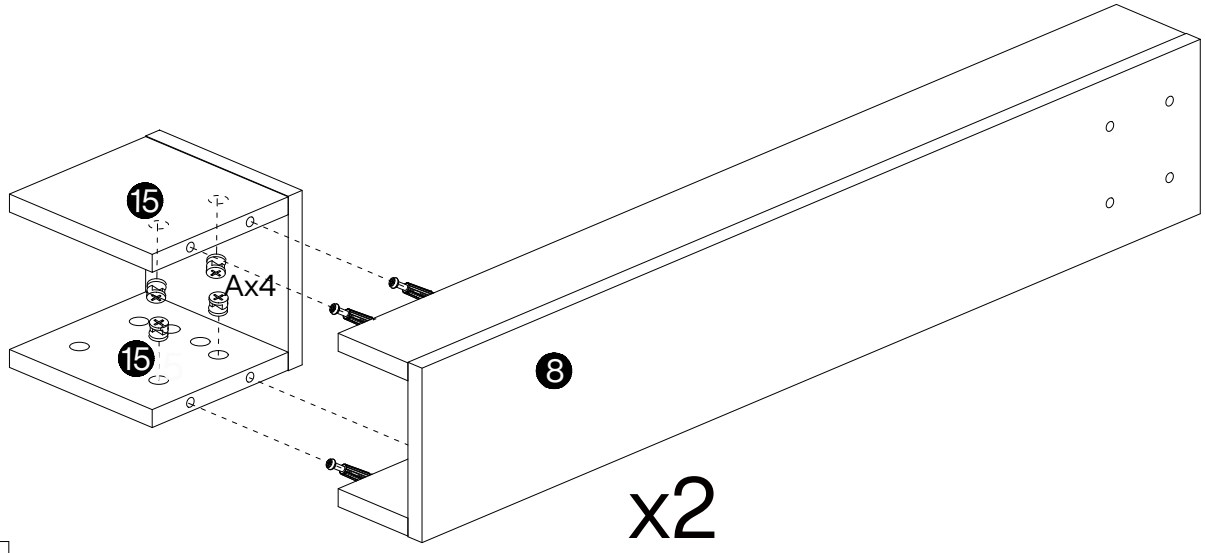

A

Ø15X12 mm
8 pcs


12

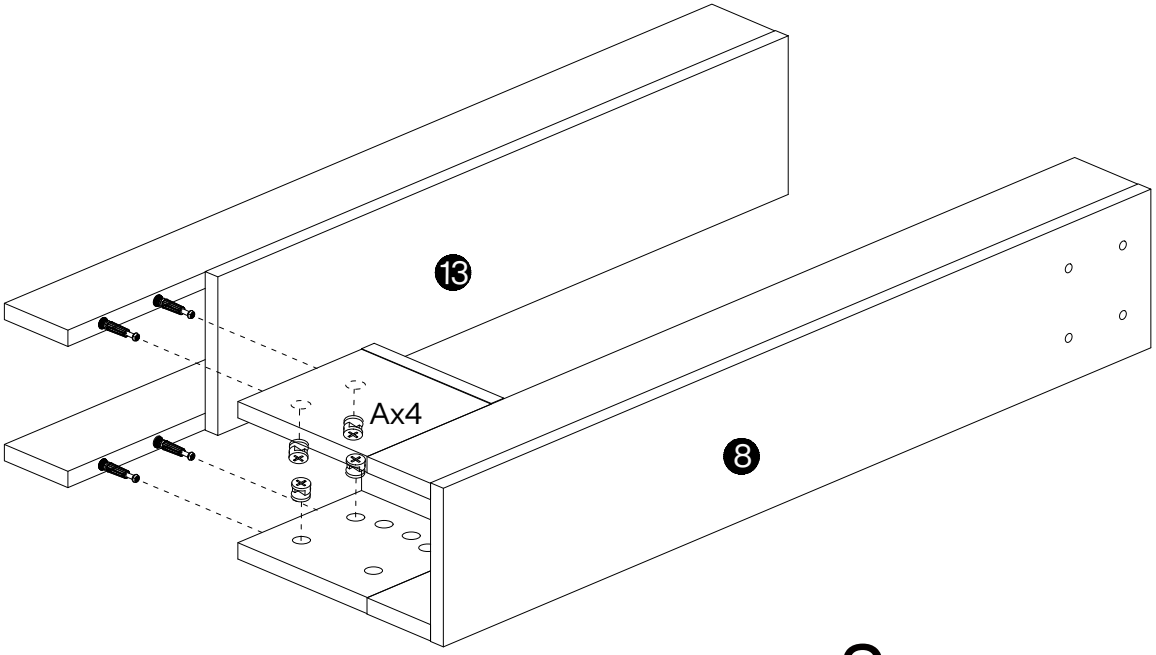

A

Ø15X12 mm
8 pcs


13

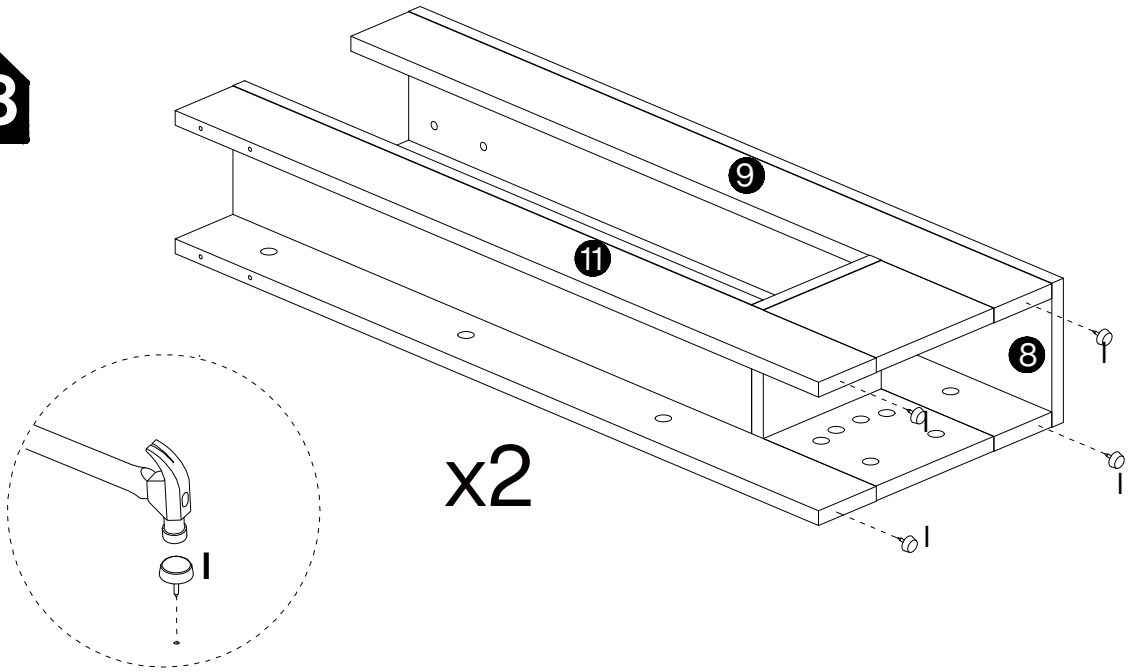

EN - Tap lightly.


I
8 pcs


14

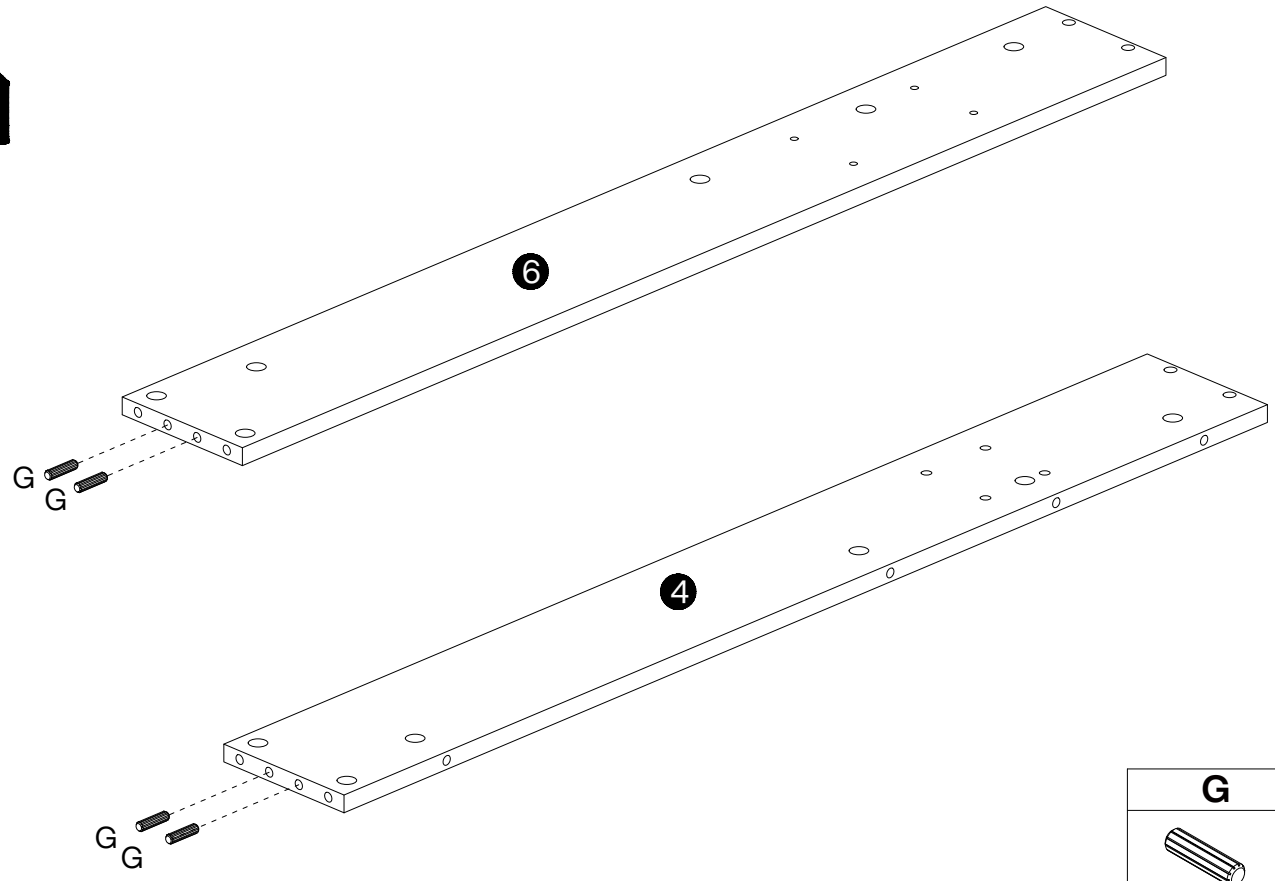


G
Ø8X30 mm
4 pcs

15

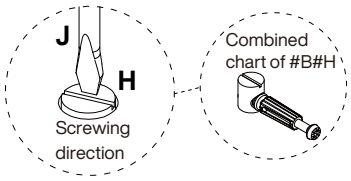

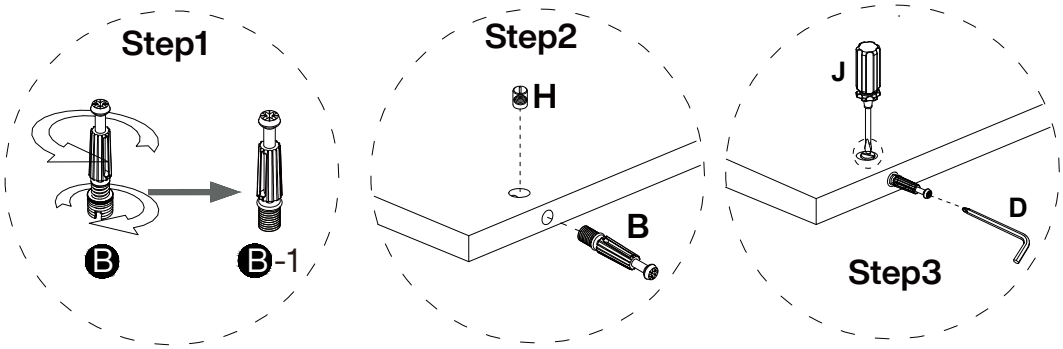


EN -1. Remove the insert nut of #B
2. Insert #H into the hole.
3. Using a screwdriver, rotate #H until its groove aliggns with #B-1. Lock in place by turning #B-1 clockwise.

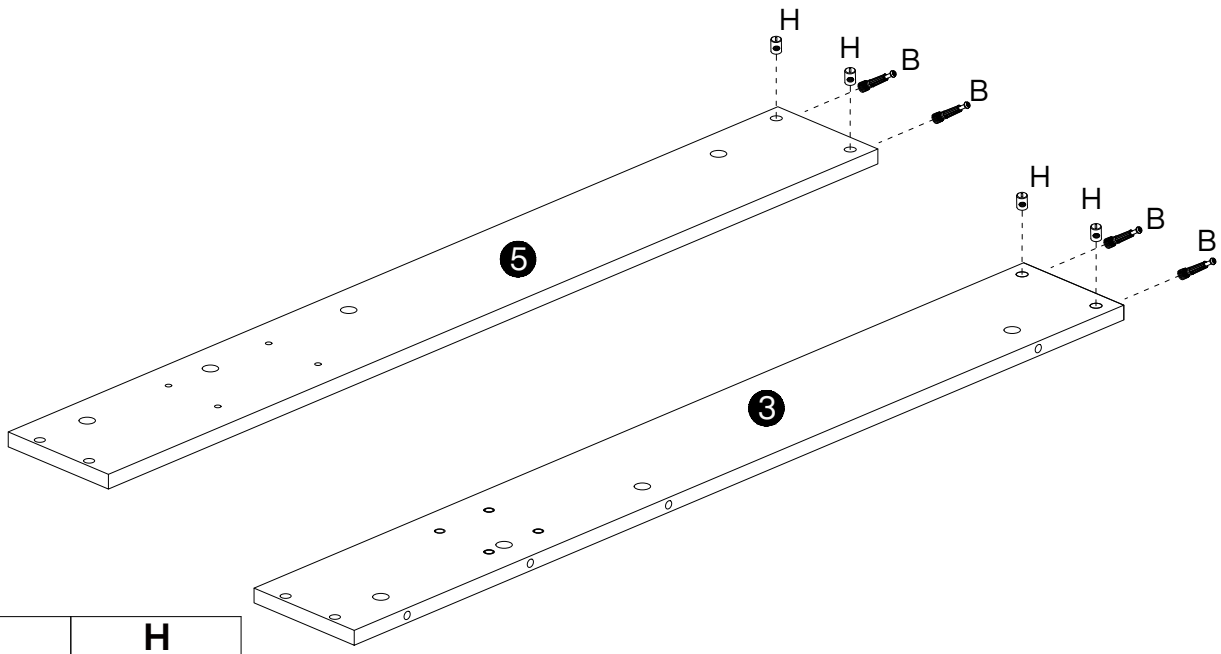

B	H
 Ø6X40 mm	 M6
4 pcs	4 pcs


16

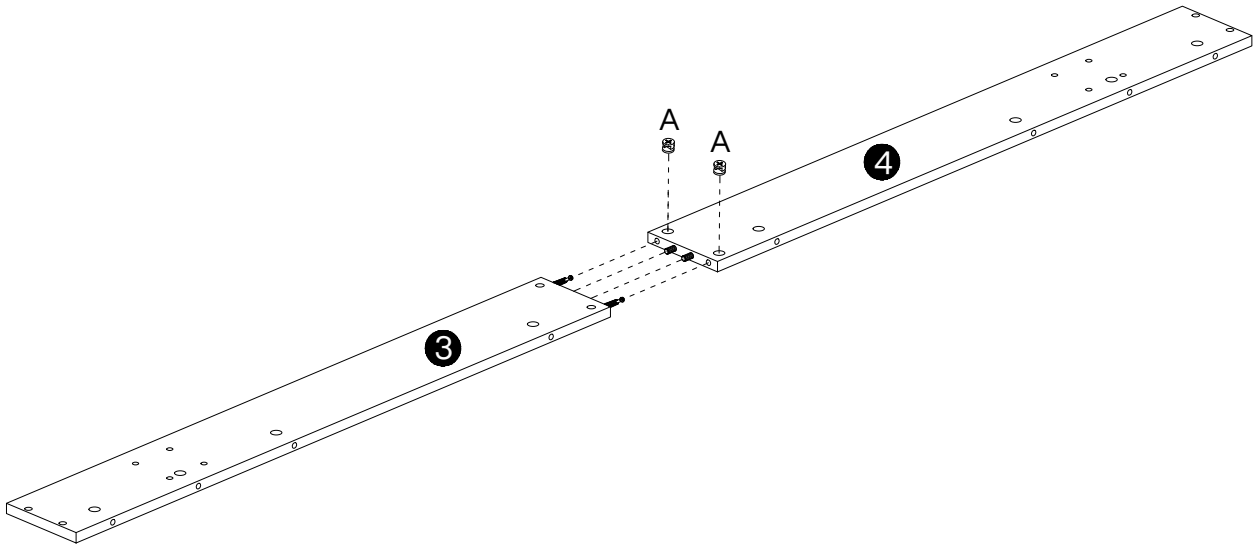

A

Ø15X12 mm
2 pcs


17

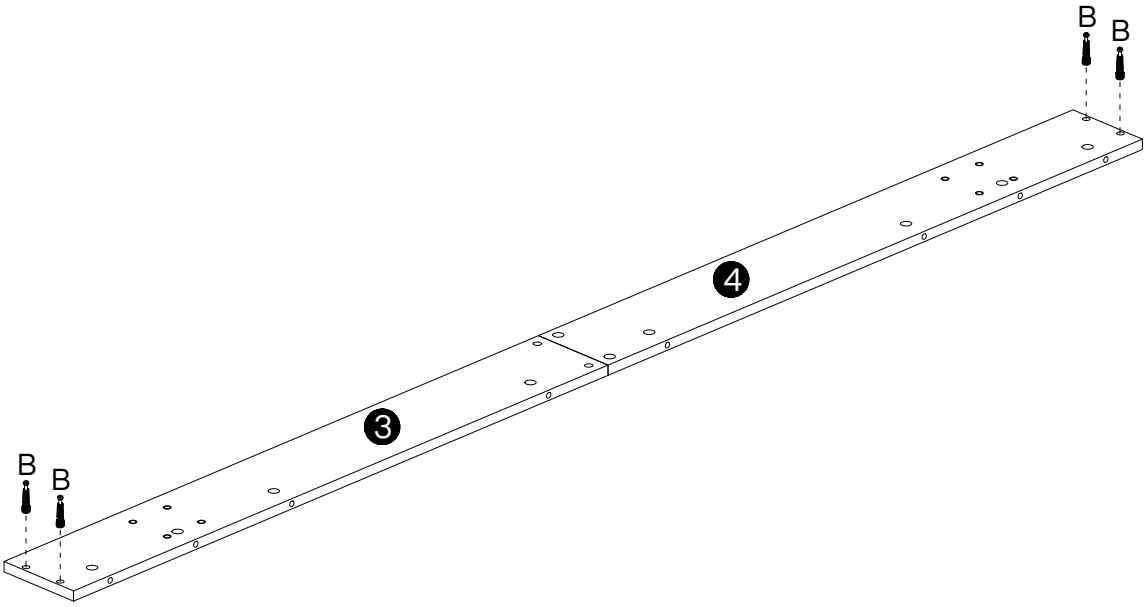

B

Ø6X40 mm
4 pcs


18

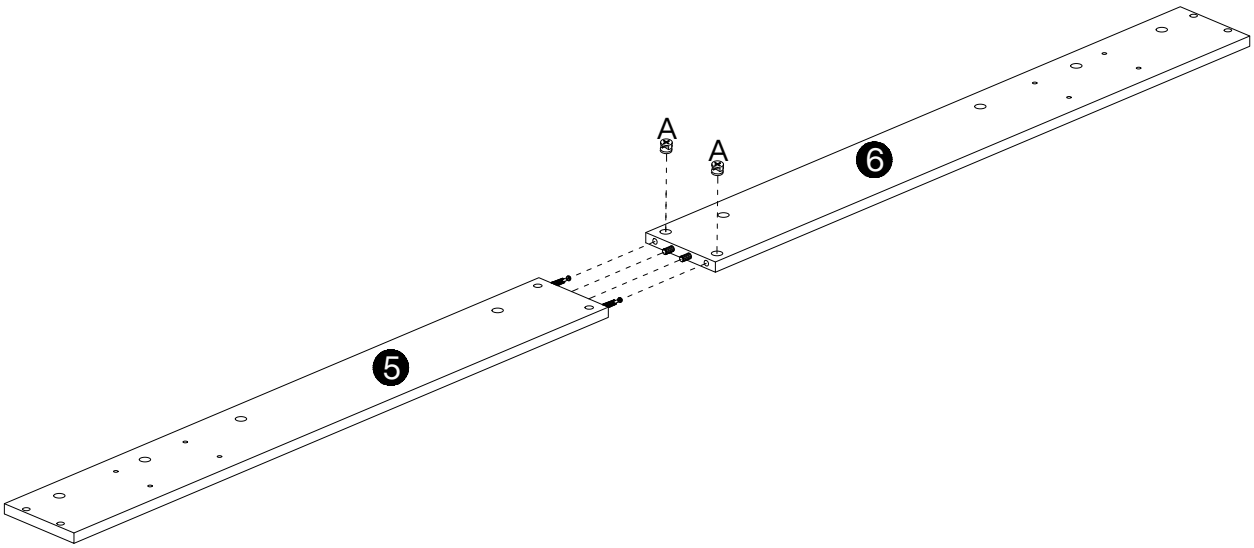

A

Ø15X12 mm
2 pcs


19

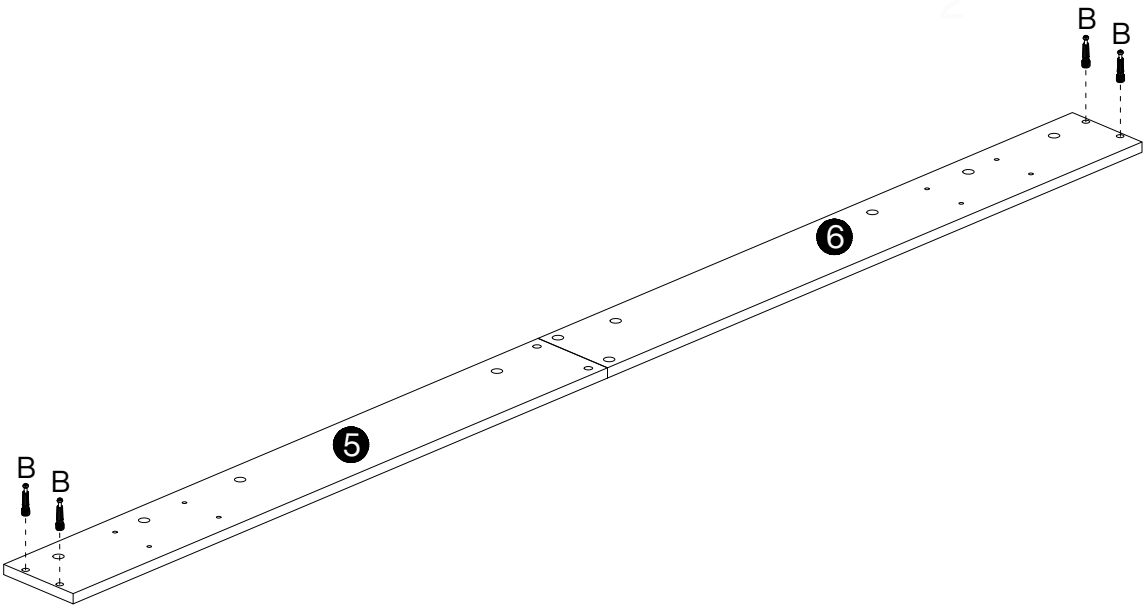

B

Ø6X40 mm
4 pcs


20

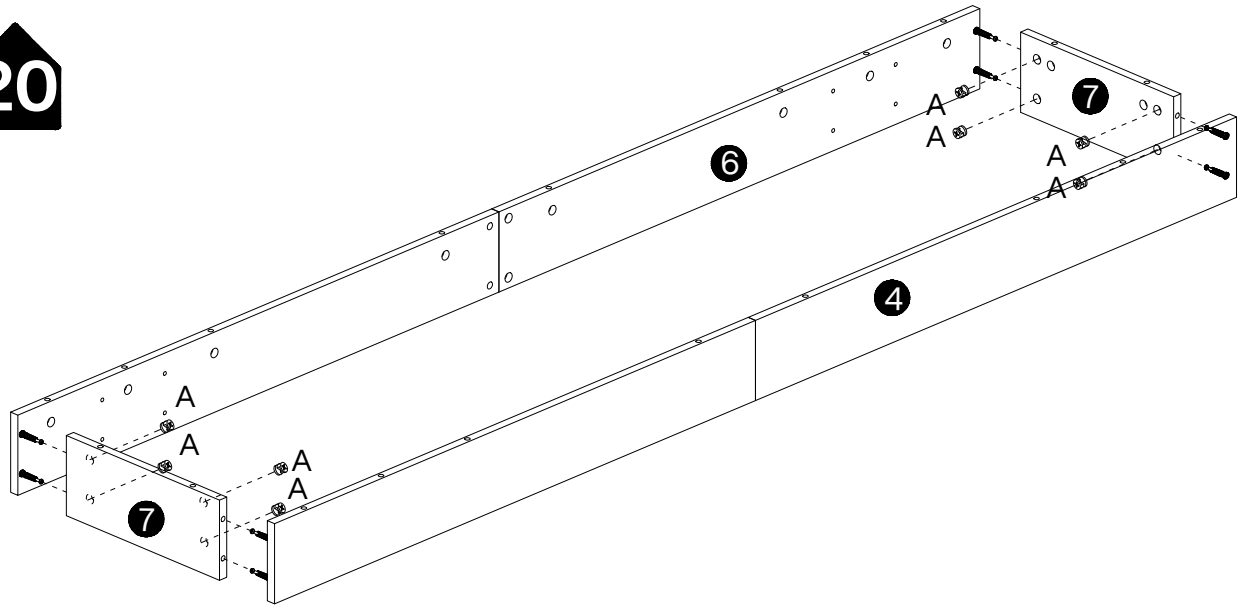

A


Ø15X12 mm
8 pcs

21

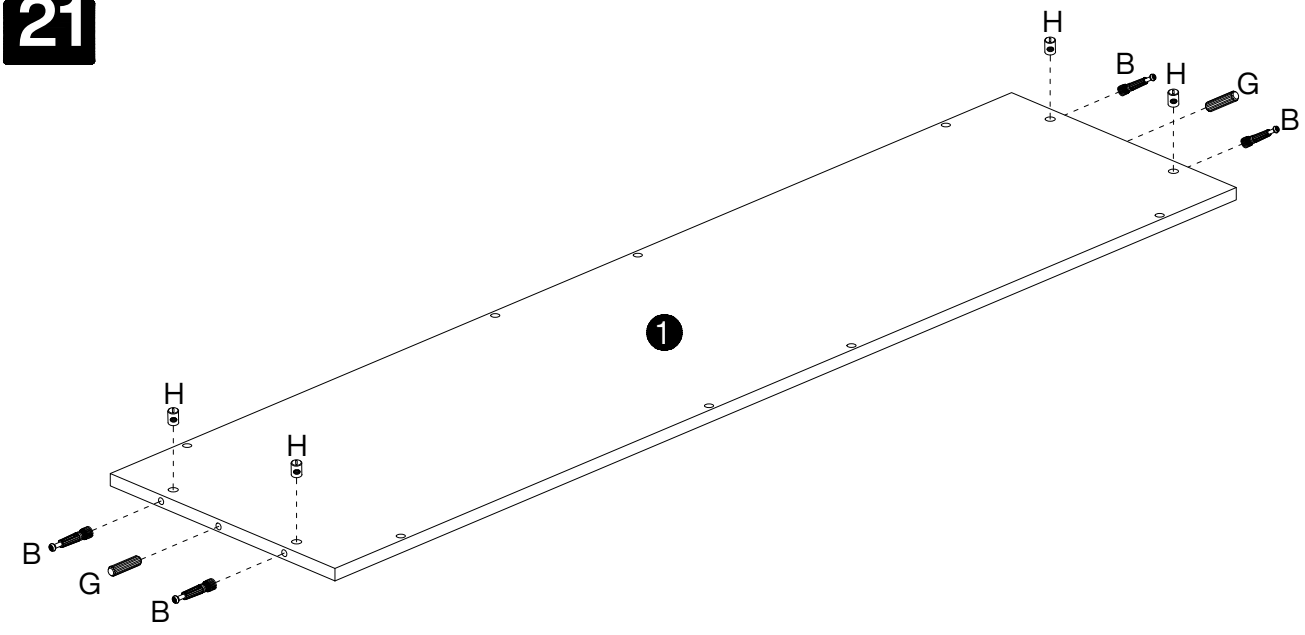

B	G	H
		
Ø6X40 mm	Ø8X30 mm	M6
4 pcs	2 pcs	4 pcs


22

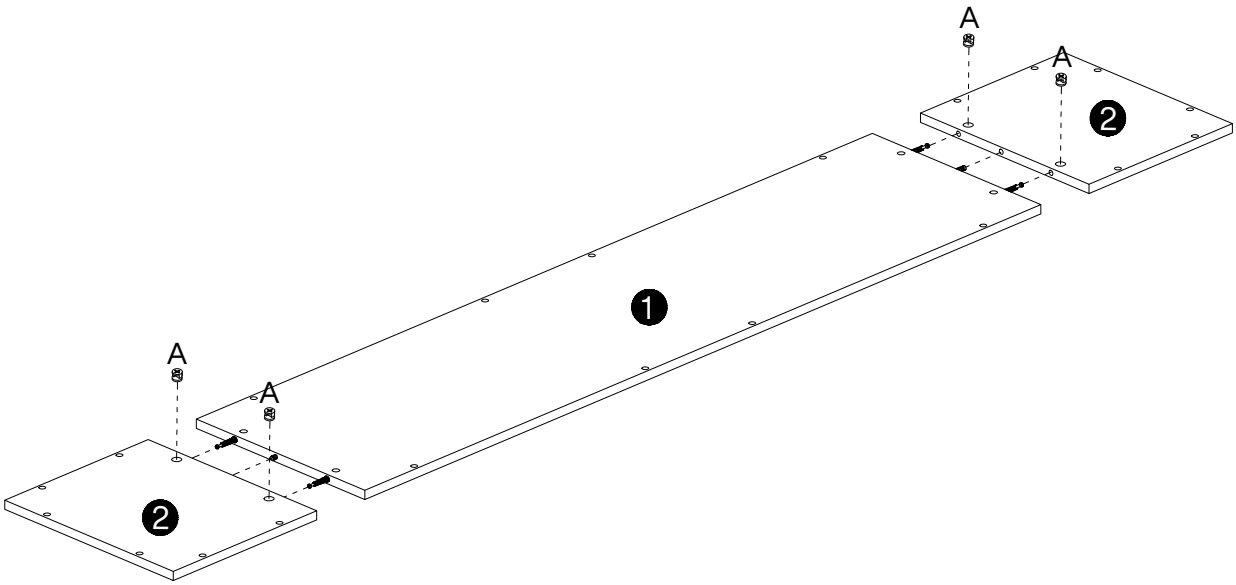

A

Ø15X12 mm
4 pcs


23

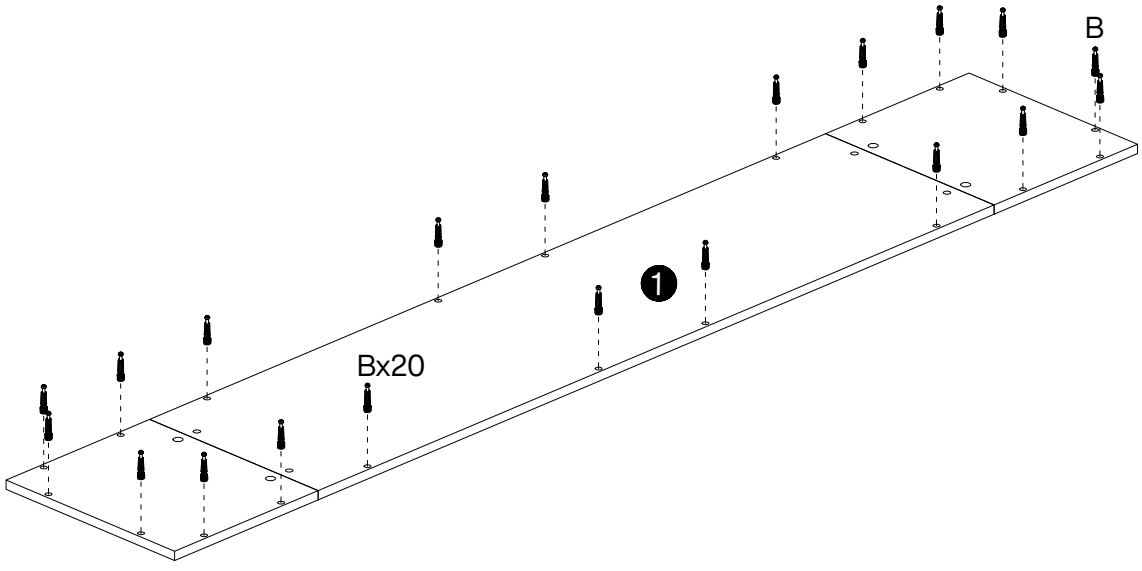

B

Ø6X40 mm
20 pcs


24

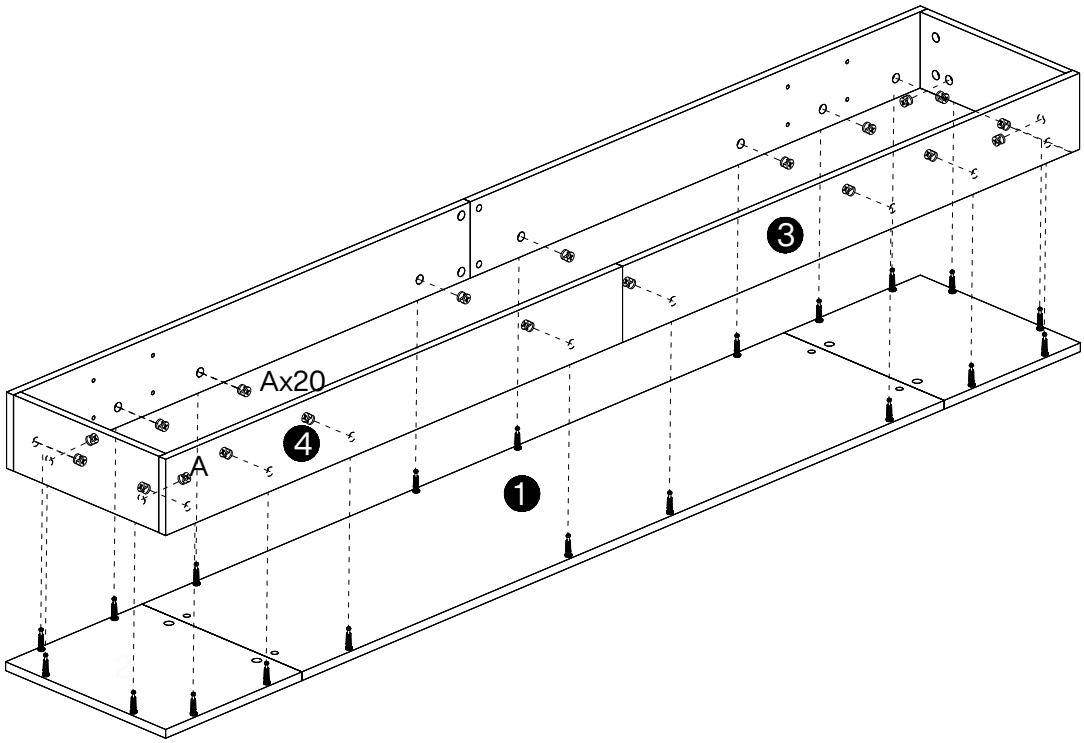


A

Ø15X12 mm
20 pcs

25

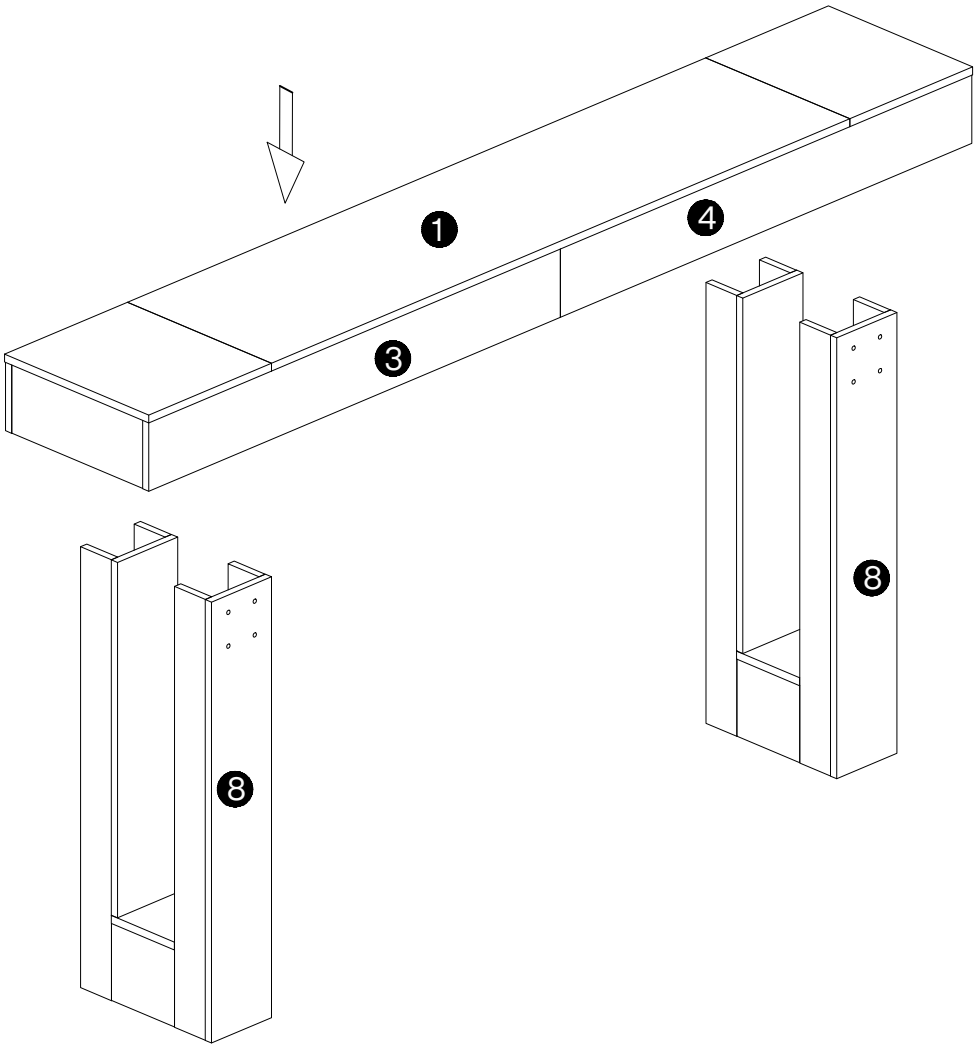



26

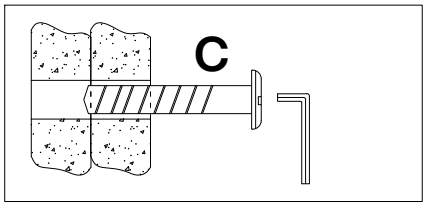

C	D
	
M6X25 mm	M4
8 pcs	1 pc

27

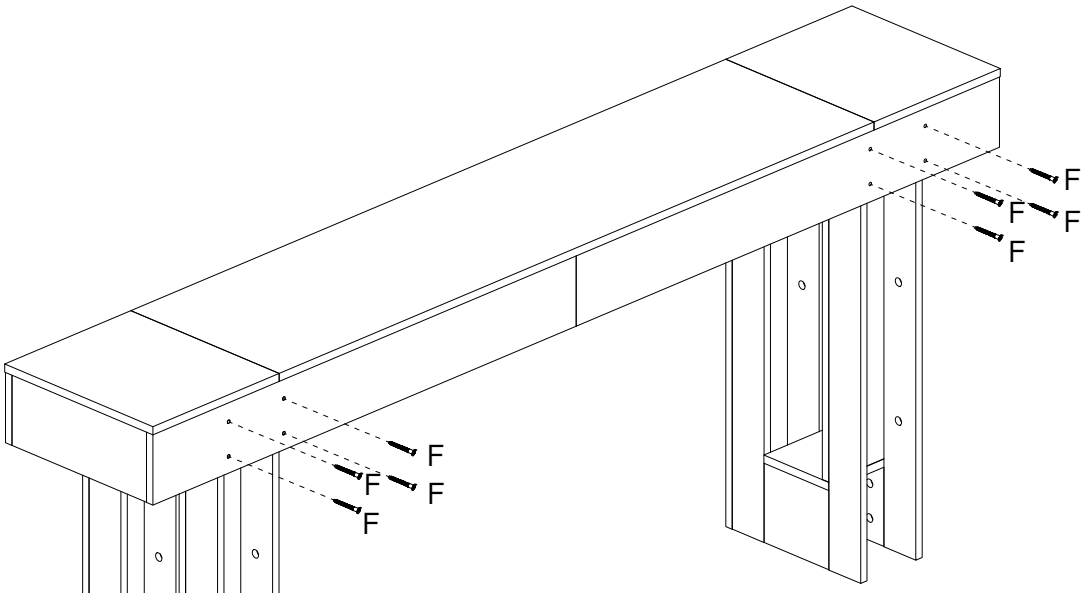

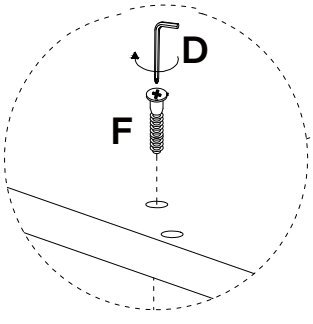

D	F
	
M4	M5X38 mm
1 pc	8 pcs

28

